


Low/Medium/High/Ultra-high Thrust Rod Type  
Servo Press Models with Load Cell

High/Ultra-high Payload Rod Type  
Conveyor Position Models without Load Cell

**RCS3/2** RA□R-LCT

**RCS3/2** RA13/15/20R

All Models Equipped  
with a Battery-less Absolute Encoder as Standard  
High Payload Rod Types also Now Available

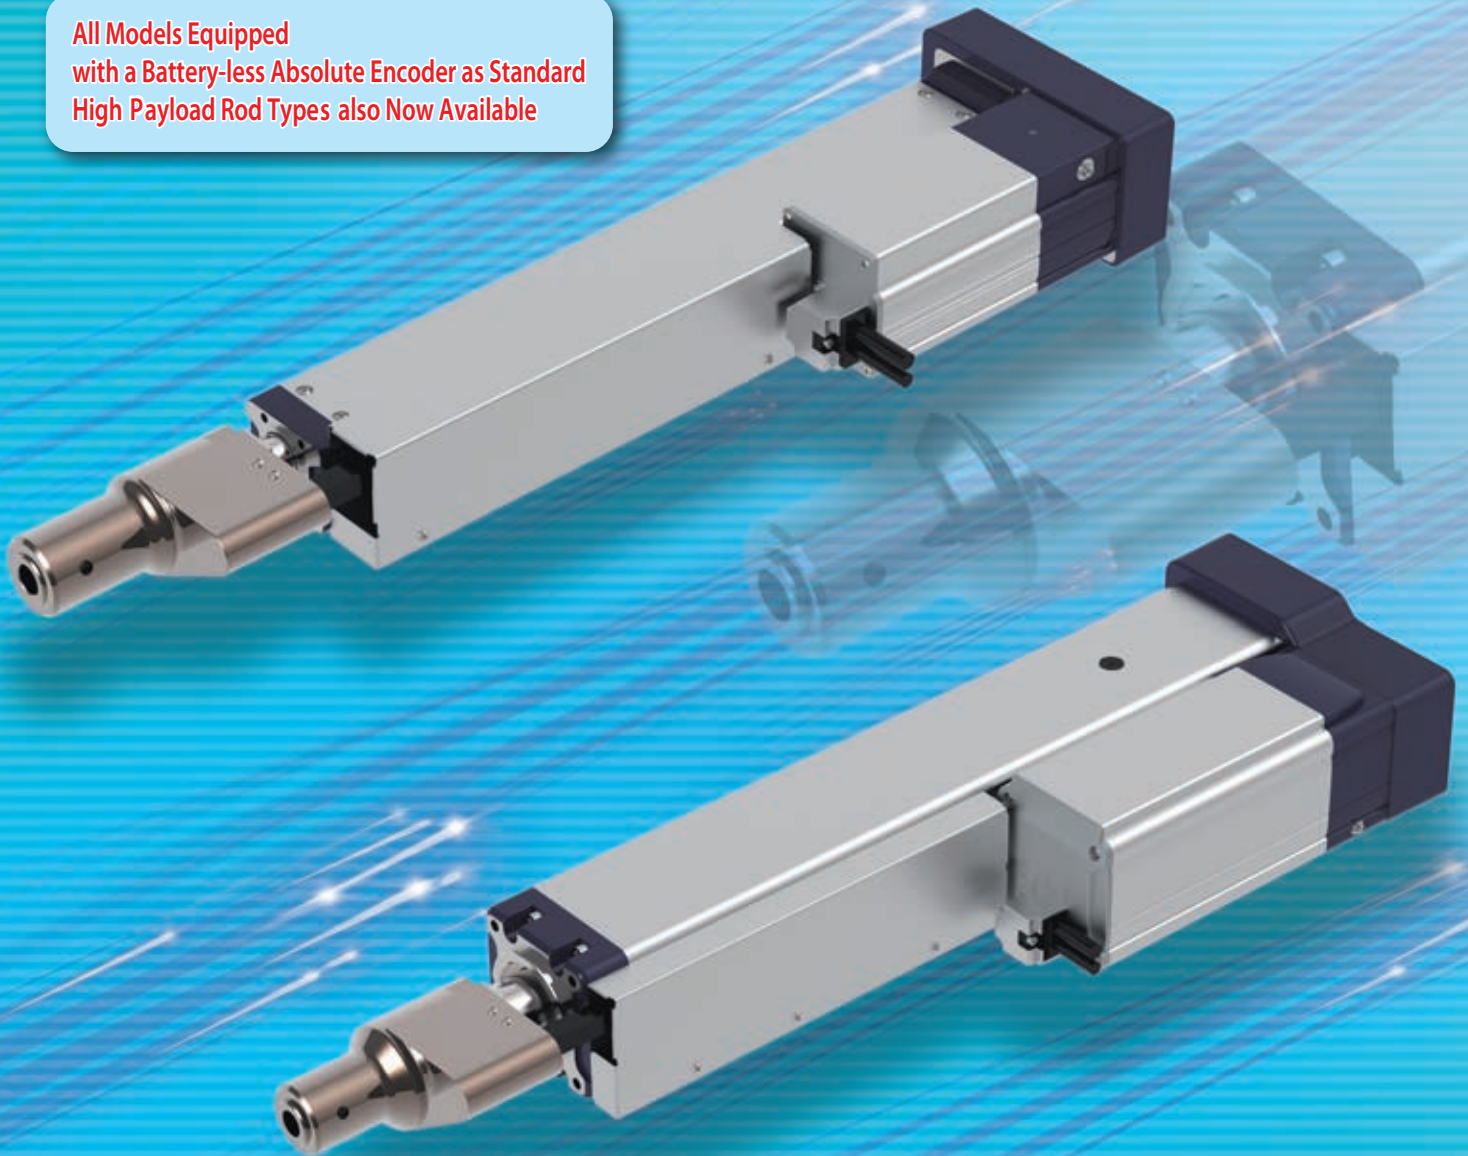

Rod type actuator that can be used in simple pressing. As it is capable of high precision position control, it can easily set the hard push force adjustment and position control that have been difficult with the hydraulic pressure.

## 1 Servo Press Specification Available

The servo press specification actuator is equipped with a load cell to allow for the force control.

### What Is Push-motion Operation?

Similar to an air cylinder, push-motion operation is the function of keeping the rod and slider pushed to the work, etc. Servo press provides superior stop stability during pressing, which makes them optimal for push-motion operation. Also, servo press can be used in a wide variety of applications because it can be used in work operations that require strong push force, such as press fitting and caulking operation.

### What Is Force Control?


A function that can perform high precision push control output using the feedback data from the dedicated load cell installed in the actuator.

### What Is the Servo Press Specification?


The specification which can perform various push-motion operations by using the press program. For details, please refer to P. 3.

### <Application Examples>

#### Press-fitting a pin

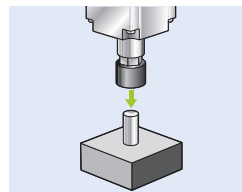

#### Riveting work

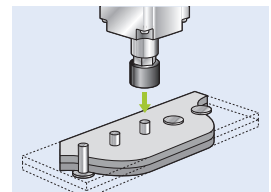

- Accurate push force can be managed
- Detailed push force setting can be set for each product


## 2 High Precision Load Control

Equipped with a dedicated load cell at the rod tip to detect the load applied to the pressed object. This provides the high precision load control with the loading repeatability of  $\pm 0.5\%$  F.S. (full-scale).



### Points

F.S.: Full Scale  
Maximum measurable value

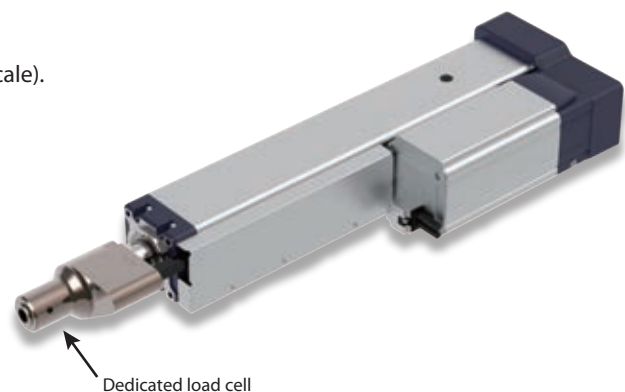

# 3 Extensive Lineup

The servo press specification can be selected from 8 model types with the max. push force of 200N~50000N.

[Servo press specification models]

	RCS3-RA4R		RCS3-RA6R		RCS3-RA7R		RCS3-RA8R	
	Low Thrust 20kg Type		Low Thrust 60kg Type		Medium Thrust 120kg Type		Medium Thrust 200kg Type	
Stroke (mm)	110~410		115~415		120~520		100~500	
Motor (W)	30		60		100		200	
Lead (mm)	2.5		1.5		2		2.5	
Max. push force (N)*	200		600		1200		2000	
Max. payload (kg)	Horizontal	3	10	10	10	10	10	10
	Vertical	3	10	10	10	10	10	10
Max speed (mm/s)	125		75		100		125	


  

	RCS3-RA10R		RCS2-RA13R		RCS3-RA15R		RCS3-RA20R	
	High Thrust 0.6t Type		High Thrust 1t Type		Ultra-high Thrust 3t Type		Ultra-high Thrust 5t Type	
Stroke (mm)	100~500		50~200		100~500		100~500	
Motor (W)	400		750		3300		3000	
Lead (mm)	2.5		2.5	1.25	3.6		4	
Max. push force (N)*	6000		9800	19600	30000		50000	
Max. payload (kg)	Horizontal	15	15	15	15	15	15	15
	Vertical	15	15	15	220	220	220	220
Max speed (mm/s)	125		125	62	240		220	

\* Max. push force can be achieved only during push mode with 1~10mm/s speed range.

# 4 Capable of Pushing at Maximum Push Force for Long Periods

RCS3-RA15R/RA20R model types of servo press specification achieve the push time of 9s/10s at the maximum push force (30000N/50000N). They can be used for applications where the time until a predetermined push force is reached is indefinite such as compression molding of powders, applications where the push force is maintained from the pressurized state until cooling such as hot plate welding, and applications where the push force is maintained for a predetermined period such as the strain relief of workpiece.

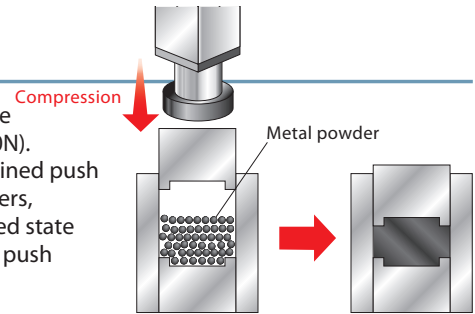


# 5 Equipped with a Battery-less Absolute Encoder as Standard

Equipped with a Battery-less Absolute Encoder as standard. There is no need to replace batteries, reducing the maintenance processes.

### Advantages of Battery-less Absolute

- The machine will no longer stop due to battery error (voltage drop, etc.).
- There is no need to purchase replacement batteries.
- There is no need to replace batteries, saving time and trouble such as absolute reset.

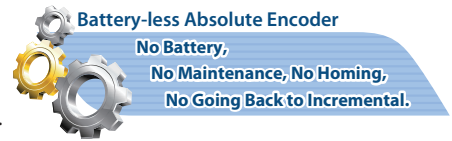

# 6 High & Ultra-high Payload Rod Type is Also Available

High/ultra-high payload rod type (conveyor position models w/o load cell) can be selected for transport application.

[Conveyor position models]


	RCS2-RA13R		RCS3-RA15R		RCS3-RA20R	
	High Payl. 1t Type	High Payl. 2t Type	Ultra-high Payload 1.5t Type		Ultra-high Payload 2t Type	
Stroke (mm)	50~200		100~500		100~500	
Motor (W)	750		3300		3000	
Lead (mm)	2.5	1.25	7.2		10	
Max. push force (N)*	9800	19600	15000		20000	
Max. payload (kg)	Horizontal	400	500	700	1000	
	Vertical	200	300	400	600	
Max speed (mm/s)	125	62	400		400	

\* Max. push force can be achieved only within 5~10mm/s speed range.

# Dedicated Software: Press Program


With this Press Program, one of two control methods, "Speed Control" or "Force Control", can be selected. In addition, one of four stop conditions, "Position", "Distance", "Load", or "Incremental Load", can be selected as the method for stopping. By utilizing a total of eight types of press methods, it is possible to handle a variety of press motion.

## Explanation of Operation

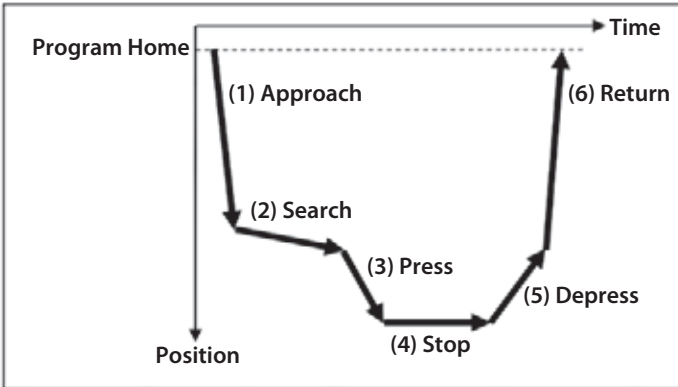


- (1) Approach (can be omitted)**  
Performs high-speed transfer until directly before contacting work
- (2) Search (can be omitted)**  
Detects work contact
- (3) Press (necessary)**  
Accelerates, then performs pressing work
- (4) Stop (can be omitted when set to 0)**  
Stops at a fixed position or continues to push
- (5) Depress (can be omitted)**  
Slowly separates from the work
- (6) Return (can be omitted)**  
Returns to the program home position at high speed

## Program Screen




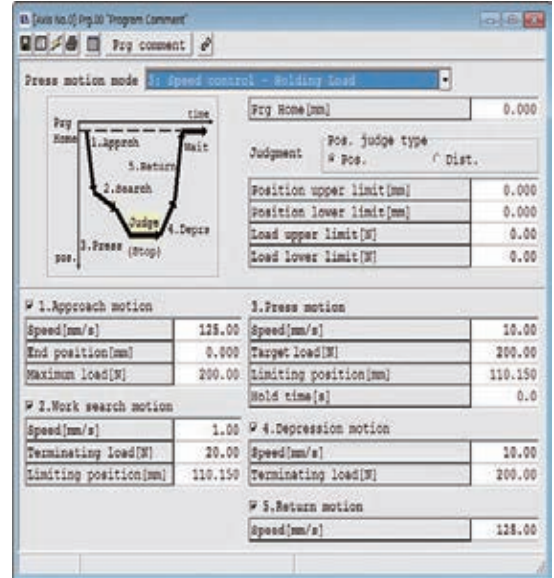


## Example of press fitting a machine part into a washer

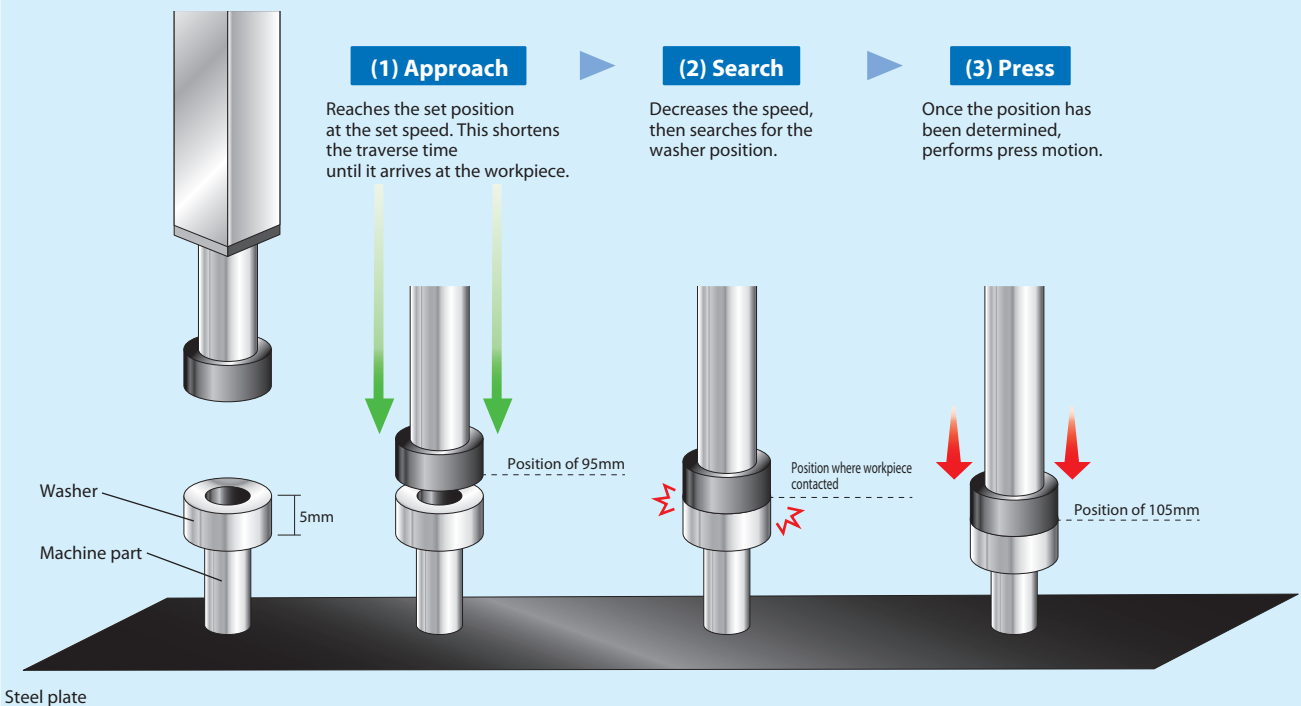


Mode		Internal control	Stop state	Applications
<b>Speed control</b> After arriving at the target position, stops while maintaining the <b>position</b> at the time of arrival.	Position stop	Positioning	Positioning stop	Press fitting, riveting, squeezing, etc. (primarily metalworking)
	Distance stop			
	Load stop			
	Incremental load stop			
<b>Force control</b> After arriving at the target position, it stops while maintaining the <b>force</b> at the time of arrival.	Position stop	Push	Continuing push-motion operation	Compressive molding, etc. of powders
	Distance stop			
	Load stop			
	Incremental load stop			

<b>Position stop</b> Performs pressing work to the specified position. 	<b>Load stop</b> Performs pressing work that stops at the position at which the specified load was detected. 
<b>Distance stop</b> Performs pressing work by moving a specified distance and then stopping. This is optimal in situations in which the press start position changes. 	<b>Incremental load stop</b> Performs pressing work that stops at the position at which the load (sum of the press start load and the specified incremental load) has been detected. * It is possible to perform the operation by linking two programs together. For details, please refer to the instruction manual. 
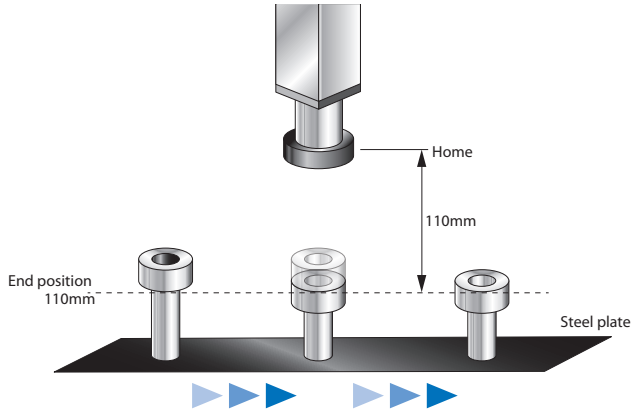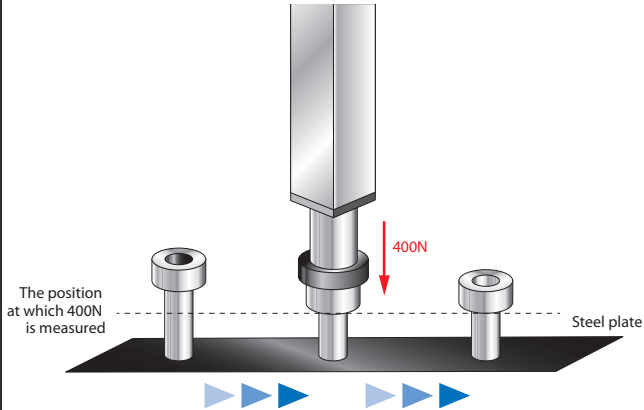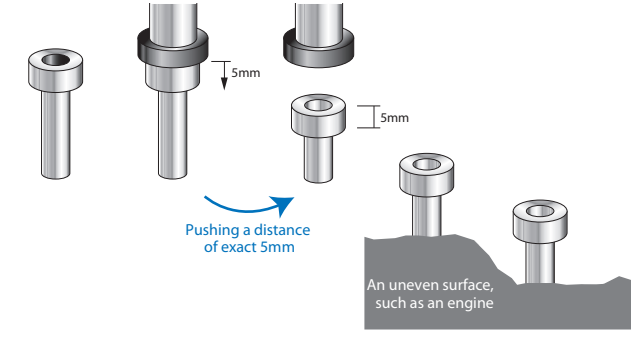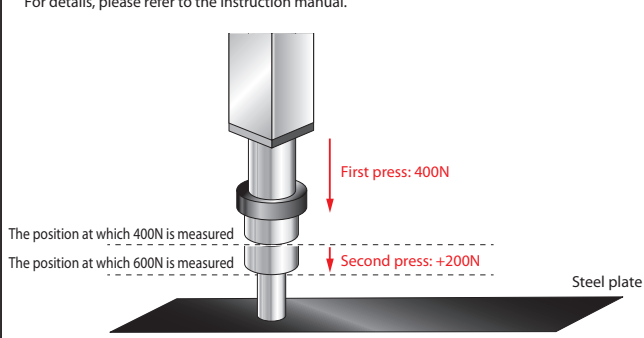
### Explanation of Operation

From the end of press to the end of the stop state, it is possible to perform position judgment and load judgment.

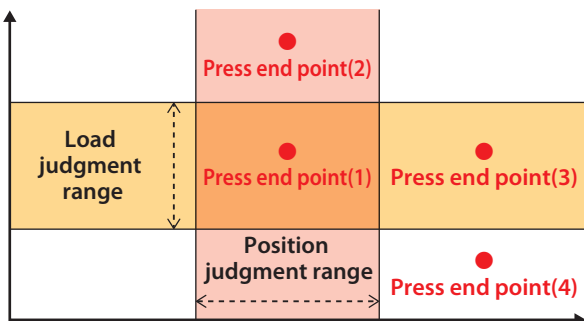

#### <Judgment Results>

No.	Position	Load
①	OK	OK
②	OK	NG
③	NG	OK
④	NG	NG

- When a result of NG ("Not Good") has been detected for either the position or load, the program ends abnormally.
- It is also possible to set position only, load only, or neither.

# RCS3-RA4R Low Thrust Rod Type (Servo Press Model with Load Cell)

Battery-less Absolute

Motor Unit Type

Side-mounted Motor

Body Width 40\* mm


230v AC Servo Motor

<b>Model Specification Items</b>	<b>RCS3</b>	<b>— RA4R —</b>	<b>WA</b>	<b>— 30 —</b>	<b>2.5</b>	<input type="checkbox"/>	<b>T2</b>	<input type="checkbox"/>	<input type="checkbox"/>
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	30: Servo motor 30W	2.5: Lead 2.5mm	110: 110mm ? 410: 410mm (Every 50mm)	T2: SCON-CB/CGB (For servo press only)	N : None P : 1m S : 3m M : 5m X□□ : Specified length R□□ : Robot cable	Refer to Options table below. * For side-mounted motor type, specify the mount direction (ML/MR).


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.




\* CE conformity has to be selected as option.

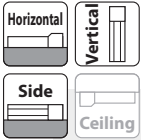

\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.

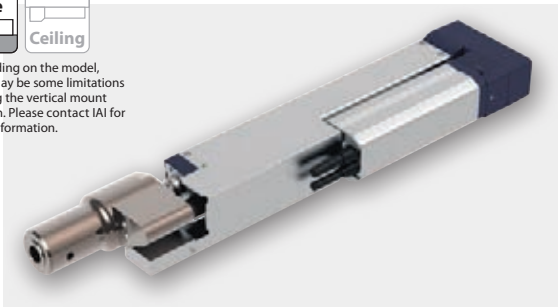

## Correlation Diagram of Push Force and Current Limit Value

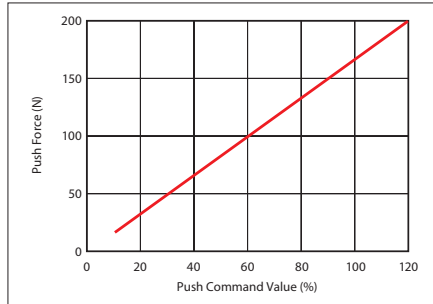

### Caution:

- The correlation between push force and push command value are strictly for reference purposes. Actual numbers may vary slightly.
- The push command value should be 12% or more because the push force will be unstable when the push command value is low.

**POINT**  
Selection Notes

- (1) There are no limitations on the continuous push time. The duty ratio is also 100% and continuous operation is possible.
- (2) Customer's tooling is to be mounted on the load cell itself. In case any radial or moment load is applied to the load cell, please consider adding the external guides, etc. to offset those side loads.
- (3) Please install a support block when front mounting or back mounting a horizontally mounted actuator that is 150st or more. (Refer to page 34 "Notes When Installing")
- (4) Servo Press with load cell should not be used for pulling motion. It will damage the load cell.

## Actuator Specifications

### Lead and Payload

Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)
					Horizontal (kg)	Vertical (kg)		
RCS3-RA4R-WA-30-2.5-①-T2-②-③	30	2.5	125	0.5	3	3	126	200

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 1~10mm/s speed range.

### Stroke and Max Speed

Lead (mm)	Stroke (mm)	110~410
2.5		125

(Unit: mm/s)

### Cable Length

Type	Cable Code
Standard	P(1m)
	S(3m)
	M(5m)
Specified length (Standard cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)
Robot cable	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

\* Please contact IAI for maintenance cables.

### Actuator Specifications

Item	Description
Drive system	Ball screw ø8mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	200N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

(\*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity  
 (\*2) F.S.: Full Scale, the maximum measurable value.

### Options

Name	Option Code	Reference Page
Brake	B	See P.35
CE compliant (Standard option)	CE	See P.35
Cable exit direction (Outside)	CJO	See P.35
Flange (Front)	FL	See P.35
Foot bracket (*1)	FT	See P.36
Equipped with load cell (Standard equipment) (*2)	LCT	See P.37
Motor side-mounted (left)	ML	See P.37
Motor side-mounted (right)	MR	See P.37

(\*1) Refer to P. 37 for the number of brackets included.



(\*2) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

Dimensions

CAD drawings can be downloaded from our website.  
www.robocylinder.de



\*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable.  
\*2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
M.E: Mechanical end  
S.E: Stroke end

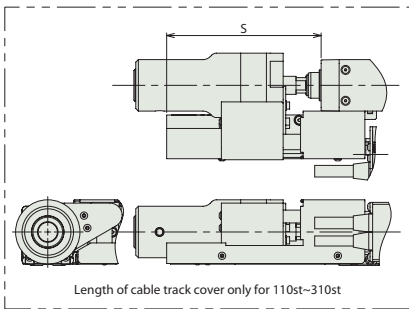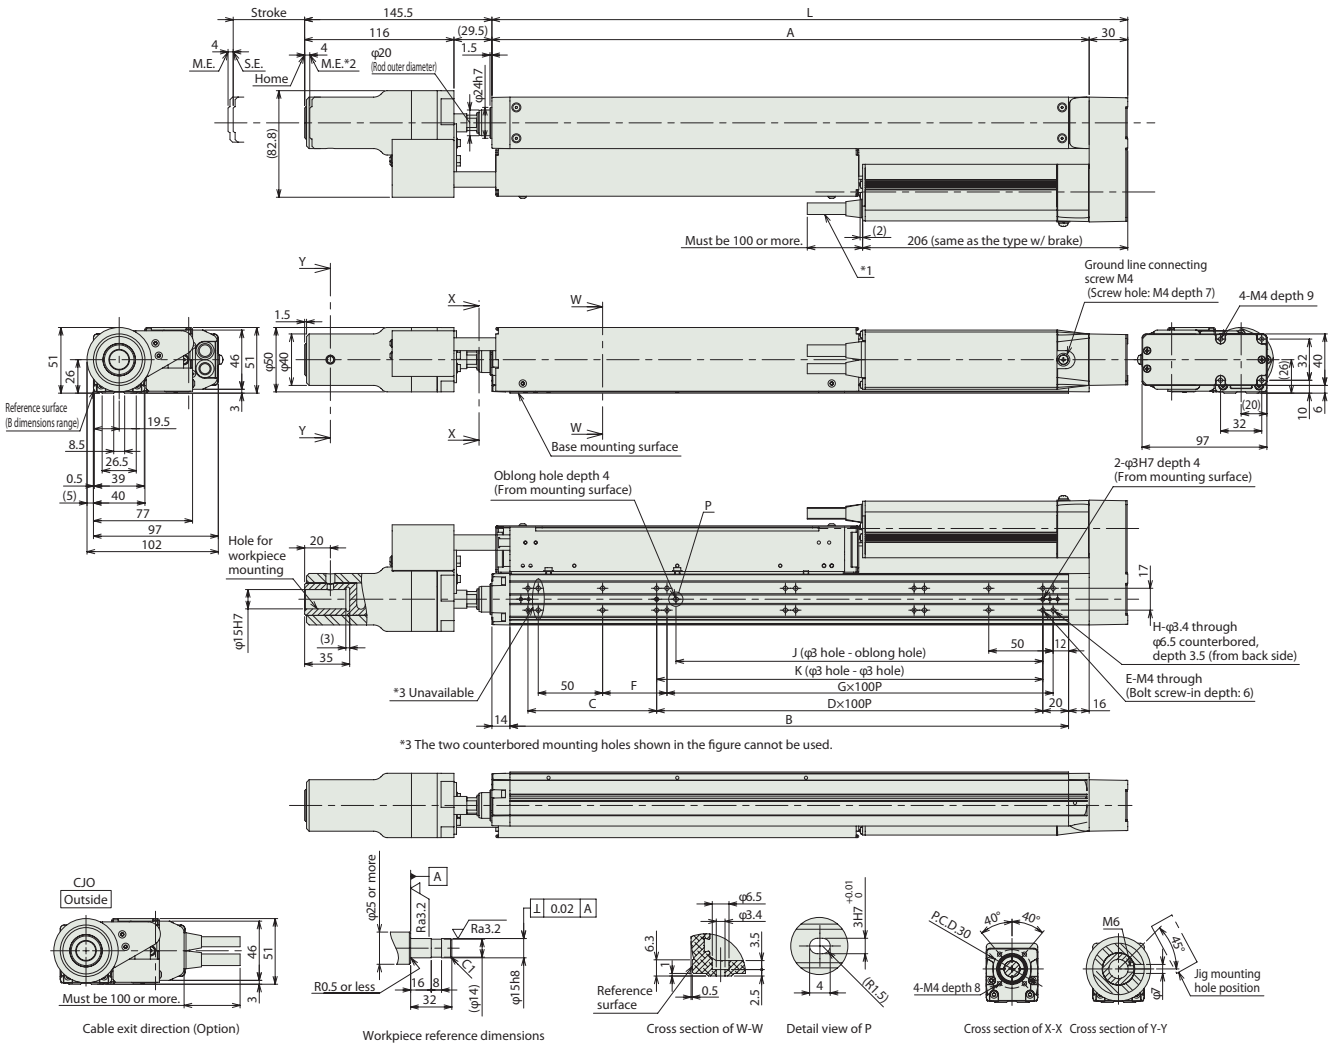

Dimensions and Mass by Stroke

Stroke	110	160	210	260	310	360	410
L	244	294	344	394	444	494	544
A	214	264	314	364	414	464	514
B	184	234	284	334	384	434	484
C	50	100	50	100	50	100	50
D	1	1	2	2	3	3	4
E	6	6	8	8	10	10	12
F	100	50	100	50	100	50	100
G	0	1	1	2	2	3	3
H	8	10	10	12	12	14	14
J	85	85	185	185	285	285	385
K	100	100	200	200	300	300	400
S	120	100	75	50	25	-	-
Mass (kg)	Without brake	3.1	3.2	3.4	3.6	3.8	3.9
	With brake	3.4	3.5	3.7	3.9	4.1	4.4

Applicable Controllers

The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.

Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Network * Option	Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Press program			
SCON-CB/CGB (For servo press only)		1	Single-phase 115VAC /230VAC	-	-	-	●	DeviceNet CC-Link EtherCAT EtherNet/IP CompoNet CANopen	-	Refer to the SCON-CB/CGB-F servo press function manual.

# RCS3-RA6R Low Thrust Rod Type (Servo Press Type with Load Cell)


Battery-less Absolute
Motor Unit Type
Side-mounted Motor
Body Width 60\* mm
230v AC Servo Motor

Model Specification Items	<b>RCS3</b>	<b>RA6R</b>	<b>WA</b>	<b>60</b>	<b>1.5</b>	<input type="checkbox"/>	<b>T2</b>	<input type="checkbox"/>	<input type="checkbox"/>
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	60: Servo motor 60W	1.5: Lead 1.5mm	115: 115mm 415: 415mm (Every 50mm)	T2: SCON-CB/ CGB (For servo press only)	N : None P : 1m S : 3m M : 5m X□□ : Specified length R□□ : Robot cable	Refer to Options table below. * Specify cable exit direction (CJT/CJB/CJO). For side-mounted motor type, specify the mount direction (ML/MR).


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.



\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.

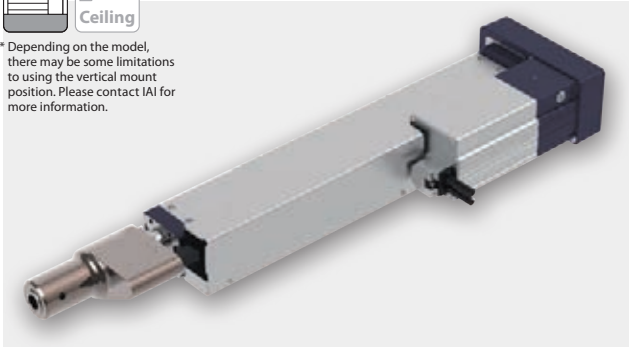

## Correlation Diagram of Push Force and Current Limit Value

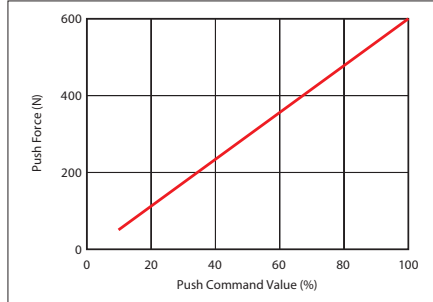

**Caution:**

- The correlation between push force and push command value are strictly for reference purposes. Actual numbers may vary slightly.
- The push command value should be 10% or more because the push force will be unstable when the push command value is low.

**POINT Selection Notes**

- (1) For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, please check that the allowable continuous operational thrust force for the actual push cycle is less than the allowable continuous operational thrust force. (Even if there is no push motion) Please refer to P.27 for more information.
- (2) Customer's tooling is to be mounted on the load cell itself. In case any radial or moment load is applied to the load cell, please consider adding the external guides, etc. to offset those side loads.
- (3) Please install a support block when front mounting or back mounting a horizontally mounted actuator that is 150st or more. (Refer to page 34 "Notes When Installing")
- (4) Servo Press with load cell should not be used for pulling motion. It will damage the load cell.

## Actuator Specifications

### Lead and Payload

Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)
					Horizontal (kg)	Vertical (kg)		
RCS3-RA6R-WA-60-1.5-①-T2-②-③	60	1.5	75	0.3	10	10	566	600

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 1~10mm/s speed range.

### Stroke and Max Speed

Lead (mm)	Stroke (mm)	Max. Speed (mm/s)
1.5	115~415	75

(Unit: mm/s)

## Cable Length

Type	Cable Code
Standard	P(1m)
	S(3m)
	M(5m)
Specified length (Standard cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)
Robot cable	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

\* Please contact IAI for maintenance cables.

## Options

Name	Option Code	Reference Page
Brake	<b>B</b>	See P.35
Cable exit direction (Top)	<b>CJT</b>	See P.35
Cable exit direction (Bottom) (*2)	<b>CJB</b>	See P.35
Cable exit direction (Outside)	<b>CJO</b>	See P.35
Flange (Front)	<b>FL</b>	See P.35
Foot bracket (*1)	<b>FT</b>	See P.36
Equipped with load cell (Standard equipment) (*3)	<b>LCT</b>	See P.37
Motor side-mounted (left)	<b>ML</b>	See P.37
Motor side-mounted (right)	<b>MR</b>	See P.37

(\*1) Refer to P. 37 for the number of brackets included.  
 (\*2) The foot bracket cannot be chosen when you select the actuator whose stroke is 365mm or less.  
 (\*3) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

## Actuator Specifications

Item	Description
Drive system	Ball screw ø10mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	600N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

(\*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity  
 (\*2) F.S.: Full Scale, the maximum measurable value.




## Dimensions

CAD drawings can be downloaded from our website.  
[www.robocylinder.de](http://www.robocylinder.de)



\*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable.  
 \*2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
 M.E: Mechanical end  
 S.E: Stroke end

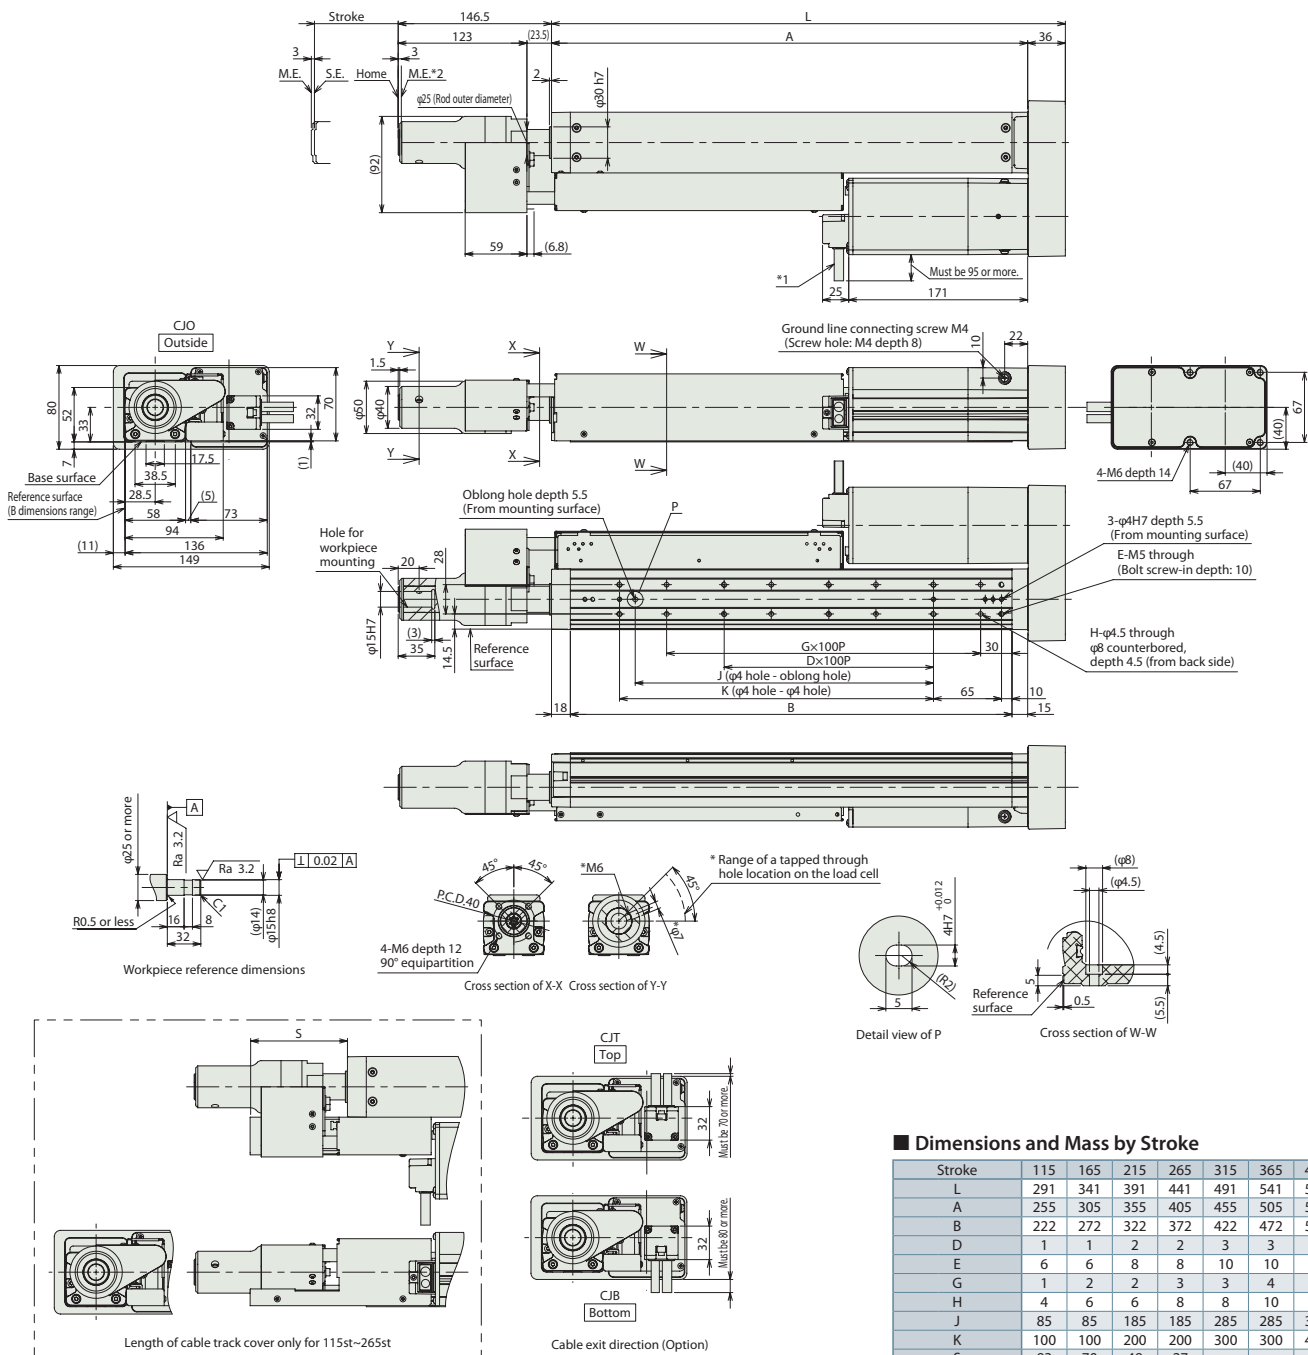

### Dimensions and Mass by Stroke

Stroke	115	165	215	265	315	365	415
L	291	341	391	441	491	541	591
A	255	305	355	405	455	505	555
B	222	272	322	372	422	472	522
D	1	1	2	2	3	3	4
E	6	6	8	8	10	10	12
G	1	2	2	3	3	4	4
H	4	6	6	8	8	10	10
J	85	85	185	185	285	285	385
K	100	100	200	200	300	300	400
S	93	70	49	27	-	-	-
Mass (kg)	4.7	4.9	5.2	5.5	5.8	6.1	6.4
	4.9	5.1	5.4	5.7	6.0	6.3	6.6

### Applicable Controllers

The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.

Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Network * Option	Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Press program			
SCON-CB/CGB (For servo press only)		1	Single-phase 115VAC /230VAC	-	-	-	●	DeviceNet CC-Link EtherCAT EtherNet/IP CompoNet CANopen	-	Refer to the SCON-CB/CGB-F servo press function manual.

# RCS3-RA7R Medium Thrust Rod Type (Servo Press Model with Load Cell)

Battery-less Absolute

Motor Unit Type


Side-mounted Motor

Body Width 70\* mm


230v AC Servo Motor

Model Specification Items	RCS3	— RA7R —	WA	— 100 —	2	— [ ] —	T2	— [ ] —	— [ ] —
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	100: Servo motor 100W	2: Lead 2mm	120: 120mm 520: 520mm (Every 50mm)	T2: SCON-CB/CGB (For servo press only)	N : None P : 1m S : 3m M : 5m X[ ] : Specified length R[ ] : Robot cable	Refer to Options table below. * Specify cable exit direction (CJT/CJB/CJO). For side-mounted motor type, specify the mount direction (ML/MR).


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.

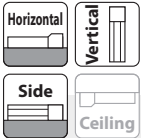

\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.

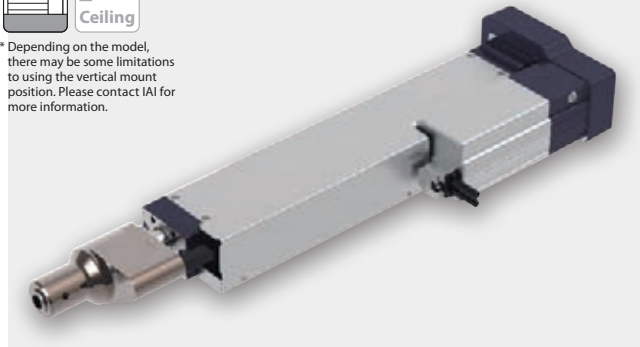

### Correlation Diagram of Push Force and Current Limit Value

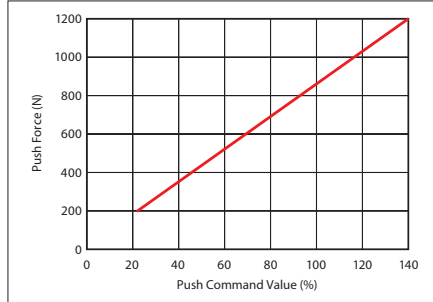

- Caution:**
- The correlation between push force and push command value are strictly for reference purposes. Actual numbers may vary slightly.
  - The push command value should be 24% or more because the push force will be unstable when the push command value is low.

POINT Selection Notes

- (1) For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, please check that the allowable continuous operational thrust force for the actual push cycle is less than the allowable continuous operational thrust force. (Even if there is no push motion) Please refer to P.27 for more information.
- (2) Customer's tooling is to be mounted on the load cell itself. In case any radial or moment load is applied to the load cell, please consider adding the external guides, etc. to offset those side loads.
- (3) Please install a support block when front mounting or back mounting a horizontally mounted actuator that is 150st or more. (Refer to page 34 "Notes When Installing")
- (4) Servo Press with load cell should not be used for pulling motion. It will damage the load cell.

### Actuator Specifications

#### Lead and Payload

Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)
					Horizontal (kg)	Vertical (kg)		
RCS3-RA7R-WA-100-2-[1]-T2-[2]-[3]	100	2	100	0.3	10	10	849	1200

Legend: [1] Stroke [2] Cable Length [3] Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 1~10mm/s speed range.

#### Stroke and Max Speed

Lead (mm)	Stroke (mm)	120~520
2		100

(Unit: mm/s)

#### Cable Length

Type	Cable Code
Standard	P(1m)
	S(3m)
	M(5m)
Specified length (Standard cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)
Robot cable	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

\* Please contact IAI for maintenance cables.

#### Options

Name	Option Code	Reference Page
Brake	B	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Bottom)	CJB	See P.35
Cable exit direction (Outside)	CJO	See P.35
Flange (Front)	FL	See P.35
Foot bracket (*1)	FT	See P.36
Equipped with load cell (Standard equipment) (*2)	LCT	See P.37
Motor side-mounted (left)	ML	See P.37
Motor side-mounted (right)	MR	See P.37

(\*1) Refer to P. 37 for the number of brackets included.

(\*2) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

#### Actuator Specifications

Item	Description
Drive system	Ball screw ø12mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	2000N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

(\*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity


(\*2) F.S.: Full Scale, the maximum measurable value.

Dimensions

CAD drawings can be downloaded from our website.  
www.robocylinder.de



\*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable.  
\*2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
M.E: Mechanical end  
S.E: Stroke end

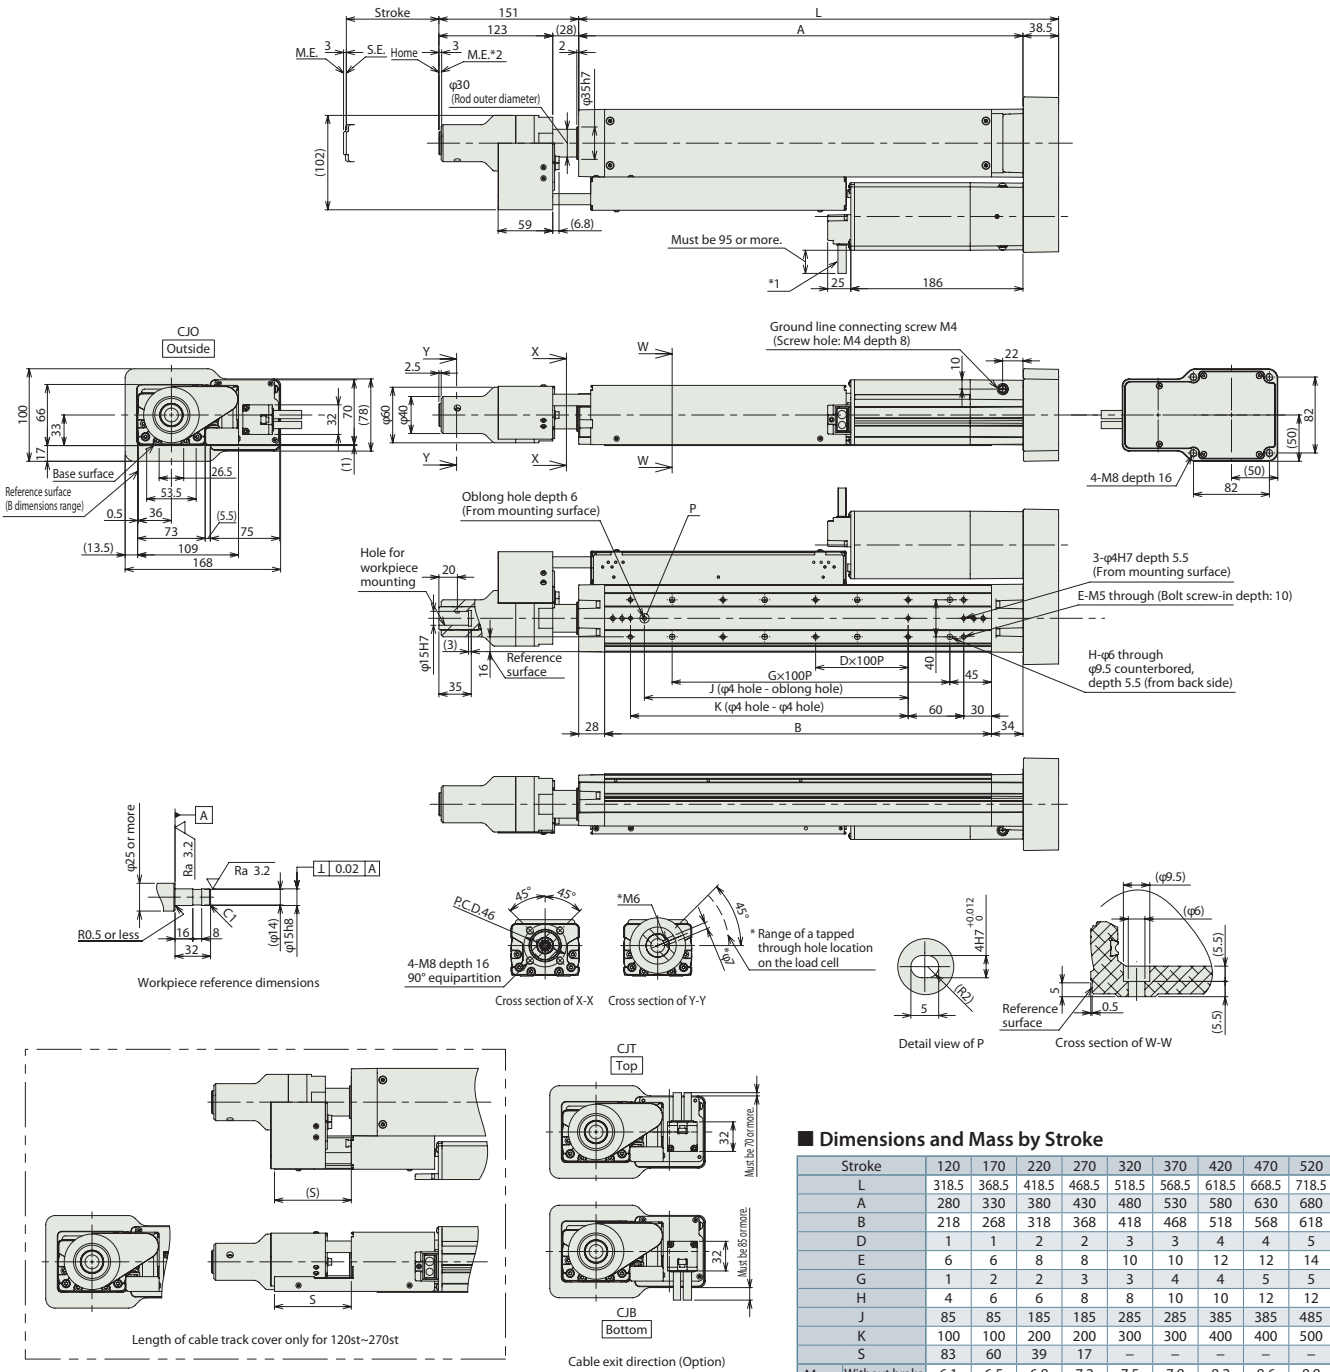

■ Dimensions and Mass by Stroke

Stroke	120	170	220	270	320	370	420	470	520	
L	318.5	368.5	418.5	468.5	518.5	568.5	618.5	668.5	718.5	
A	280	330	380	430	480	530	580	630	680	
B	218	268	318	368	418	468	518	568	618	
D	1	1	2	2	3	3	4	4	5	
E	6	6	8	8	10	10	12	12	14	
G	1	2	2	3	3	4	4	5	5	
H	4	6	6	8	8	10	10	12	12	
J	85	85	185	185	285	285	385	385	485	
K	100	100	200	200	300	300	400	400	500	
S	83	60	39	17	-	-	-	-	-	
Mass (kg)	Without brake	6.1	6.5	6.8	7.2	7.5	7.9	8.2	8.6	8.9
	With brake	6.3	6.7	7.0	7.4	7.7	8.1	8.4	8.8	9.1

Applicable Controllers

The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.


Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Network * Option	Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Press program			
SCON-CB/CGB (For servo press only)		1	Single-phase 115VAC /230VAC	-	-	-	●	DeviceNet CC-Link EtherCAT EtherNet/IP CompoNet	-	Refer to the SCON-CB/CGB-F servo press function manual.

# RCS3-RA8R Medium Thrust Rod Type (Servo Press Model with Load Cell)


Battery-less Absolute
Motor Unit Type
Side-mounted Motor
Body Width 90\* mm
230v AC Servo Motor

Model Specification Items	<b>RCS3</b>	<b>RA8R</b>	<b>WA</b>	<b>200</b>	<b>2.5</b>	<input type="checkbox"/>	<b>T2</b>	<input type="checkbox"/>	<input type="checkbox"/>
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	200: Servo motor 200W	2.5: Lead 2.5mm	100: 100mm 500: 500mm (Every 50mm)	T2: SCON-CB/CGB (For servo press only)	N : None P : 1m S : 3m M : 5m X□□ : Specified length R□□ : Robot cable	Refer to Options table below. * Specify cable exit direction (CJT/CJB/CJO). For side-mounted motor type, specify the mount direction (ML/MR).


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.

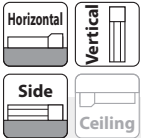

\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.

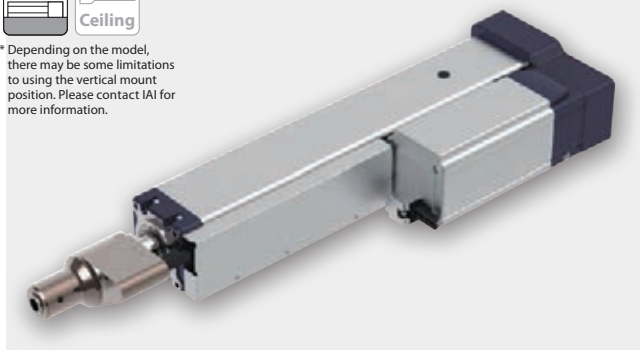

## Correlation Diagram of Push Force and Current Limit Value

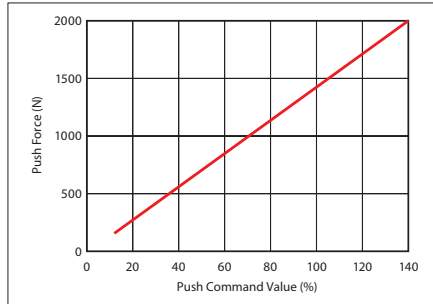

### Caution:

- The correlation between push force and push command value are strictly for reference purposes. Actual numbers may vary slightly.
- The push command value should be 14% or more because the push force will be unstable when the push command value is low.

**POINT Selection Notes**

- (1) For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, please check that the allowable continuous operational thrust force for the actual push cycle is less than the allowable continuous operational thrust force. (Even if there is no push motion) Please refer to P.27 for more information.
- (2) Customer's tooling is to be mounted on the load cell itself. In case any radial or moment load is applied to the load cell, please consider adding the external guides, etc. to offset those side loads.
- (3) Please install a support block when front mounting or back mounting a horizontally mounted actuator that is 150st or more. (Refer to page 34 "Notes When Installing")
- (4) Servo Press with load cell should not be used for pulling motion. It will damage the load cell.

## Actuator Specifications

### Lead and Payload

Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)
					Horizontal (kg)	Vertical (kg)		
RCS3-RA8R-WA-200-2.5-①-T2-②-③	200	2.5	125	0.2	10	10	1367	2000

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 1~10mm/s speed range.

### Stroke and Max Speed

Lead (mm)	Stroke (mm)	100~500
2.5		125

(Unit: mm/s)

### Cable Length

Type	Cable Code
Standard	P(1m)
	S(3m)
	M(5m)
Specified length (Standard cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)
Robot cable	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

\* Please contact IAI for maintenance cables.

### Options

Name	Option Code	Reference Page
Brake	<b>B</b>	See P.35
Cable exit direction (Top)	<b>CJT</b>	See P.35
Cable exit direction (Bottom) (*2)	<b>CJB</b>	See P.35
Cable exit direction (Outside)	<b>CJO</b>	See P.35
Flange (Front)	<b>FL</b>	See P.35
Foot bracket (*1)	<b>FT</b>	See P.36
Equipped with load cell (Standard equipment) (*3)	<b>LCT</b>	See P.37
Motor side-mounted (left)	<b>ML</b>	See P.37
Motor side-mounted (right)	<b>MR</b>	See P.37

(\*1) Refer to P. 37 for the number of brackets included.

(\*2) The foot bracket cannot be chosen when you select the actuator whose stroke is 100mm.

(\*3) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

### Actuator Specifications

Item	Description
Drive system	Ball screw ø16mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	2000N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

(\*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity


(\*2) F.S.: Full Scale, the maximum measurable value.

Dimensions

CAD drawings can be downloaded from our website.  
www.robocylinder.de



\*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable.  
\*2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
M.E: Mechanical end  
S.E: Stroke end

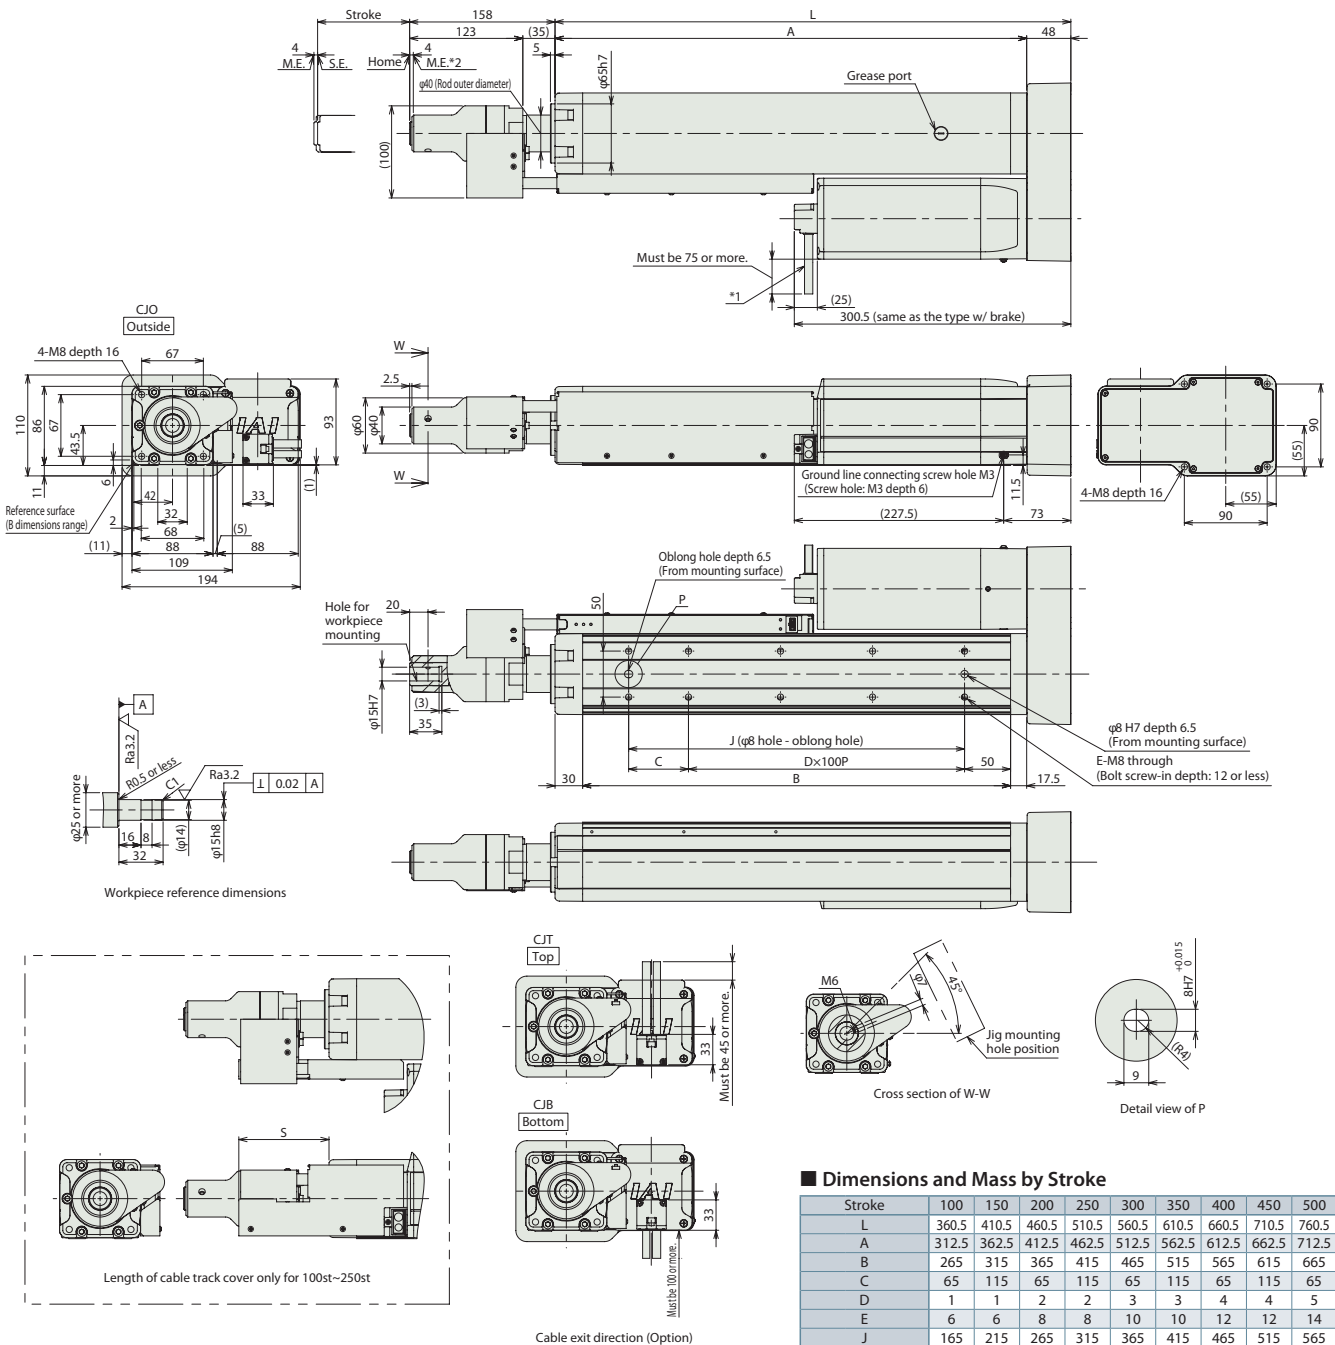

**■ Dimensions and Mass by Stroke**

Stroke	100	150	200	250	300	350	400	450	500
L	360.5	410.5	460.5	510.5	560.5	610.5	660.5	710.5	760.5
A	312.5	362.5	412.5	462.5	512.5	562.5	612.5	662.5	712.5
B	265	315	365	415	465	515	565	615	665
C	65	115	65	115	65	115	65	115	65
D	1	1	2	2	3	3	4	4	5
E	6	6	8	8	10	10	12	12	14
J	165	215	265	315	365	415	465	515	565
S	98	63	42	21	-	-	-	-	-
Mass (kg)									
Without brake	10.2	10.8	11.3	11.9	12.5	13	13.6	14.1	14.7
With brake	10.7	11.3	11.8	12.4	13.0	13.5	14.1	14.6	15.2

Applicable Controllers

The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.

Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Network * Option	Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Press program			
SCON-CB/CGB (For servo press only)		1	Single-phase 115VAC /230VAC	-	-	-	●		-	Refer to the SCON-CB/CGB-F servo press function manual.

# RCS3-RA10R High Thrust Rod Type (Servo Press Model with Load Cell)

Battery-less Absolute

Motor Unit Type

Side-mounted Motor

Body Width **110\*** mm


**230v** AC Servo Motor

<b>Model Specification Items</b>	<b>RCS3</b>	<b>— RA10R —</b>	<b>WA</b>	<b>— 400 —</b>	<b>2.5</b>		<b>T2</b>		
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	400: Servo motor 400W	2.5: Lead 2.5mm	100: 100mm ? 500: 500mm (Every 50mm)	T2: SCON-CB/CGB (For servo press only)	N : None P : 1m S : 3m M : 5m X□ : Specified length R□ : Robot cable	Refer to Options table below. * Specify cable exit direction (CJT/CJB/CJO). For side-mounted motor type, specify the mount direction (ML/MR).


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.



\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.

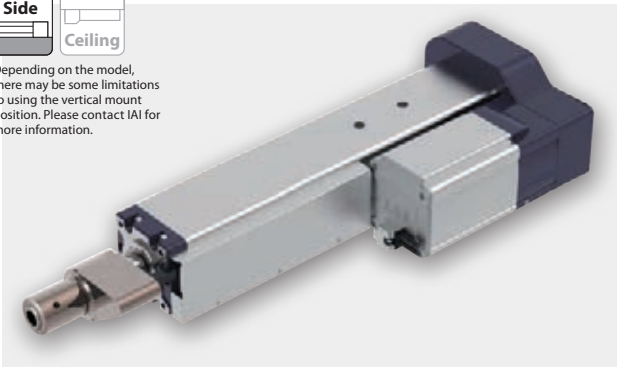

### Correlation Diagram of Push Force and Current Limit Value

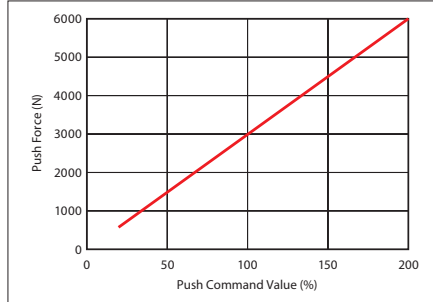

**Caution:**

- The correlation between push force and push command value are strictly for reference purposes. Actual numbers may vary slightly.
- The push command value should be 20% or more because the push force will be unstable when the push command value is low.

POINT Selection Notes

- (1) For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, please check that the allowable continuous operational thrust force for the actual push cycle is less than the allowable continuous operational thrust force. (Even if there is no push motion) Please refer to P.28 for more information.
- (2) Customer's tooling is to be mounted on the load cell itself. In case any radial or moment load is applied to the load cell, please consider adding the external guides, etc. to offset those side loads.
- (3) Please install a support block when front mounting or back mounting a horizontally mounted actuator that is 150st or more. (Refer to page 34 "Notes When Installing")
- (4) Servo Press with load cell should not be used for pulling motion. It will damage the load cell.

### Actuator Specifications

#### Lead and Payload

Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)
					Horizontal (kg)	Vertical (kg)		
RCS3-RA10R-WA-400-2.5-①-T2-②-③	400	2.5	125	0.2	15	15	2713	6000

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 1~10mm/s speed range.

#### Stroke and Max Speed

Lead (mm)	Stroke (mm)	100~500
2.5		125

(Unit: mm/s)

#### Cable Length

Type	Cable Code
Standard	P(1m)
	S(3m)
	M(5m)
Specified length (Standard cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)
Robot cable	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

\* Please contact IAI for maintenance cables.

#### Options

Name	Option Code	Reference Page
Brake	B	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Bottom) (*2)	CJB	See P.35
Cable exit direction (Outside)	CJO	See P.35
Flange (Front)	FL	See P.36
Foot bracket (*1)	FT	See P.37
Equipped with load cell (Standard equipment) (*3)	LCT	See P.37
Motor side-mounted (left)	ML	See P.37
Motor side-mounted (right)	MR	See P.37

(\*1) Refer to P. 37 for the number of brackets included.  
 (\*2) The foot bracket cannot be chosen when you select the actuator whose stroke is 100mm.  
 (\*3) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

#### Actuator Specifications

Item	Description
Drive system	Ball screw ø20mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	6000N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)


(\*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity  
 (\*2) F.S.: Full Scale, the maximum measurable value.

Dimensions

CAD drawings can be downloaded from our website.  
www.robocylinder.de



\*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable.  
\*2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
M.E: Mechanical end  
S.E: Stroke end

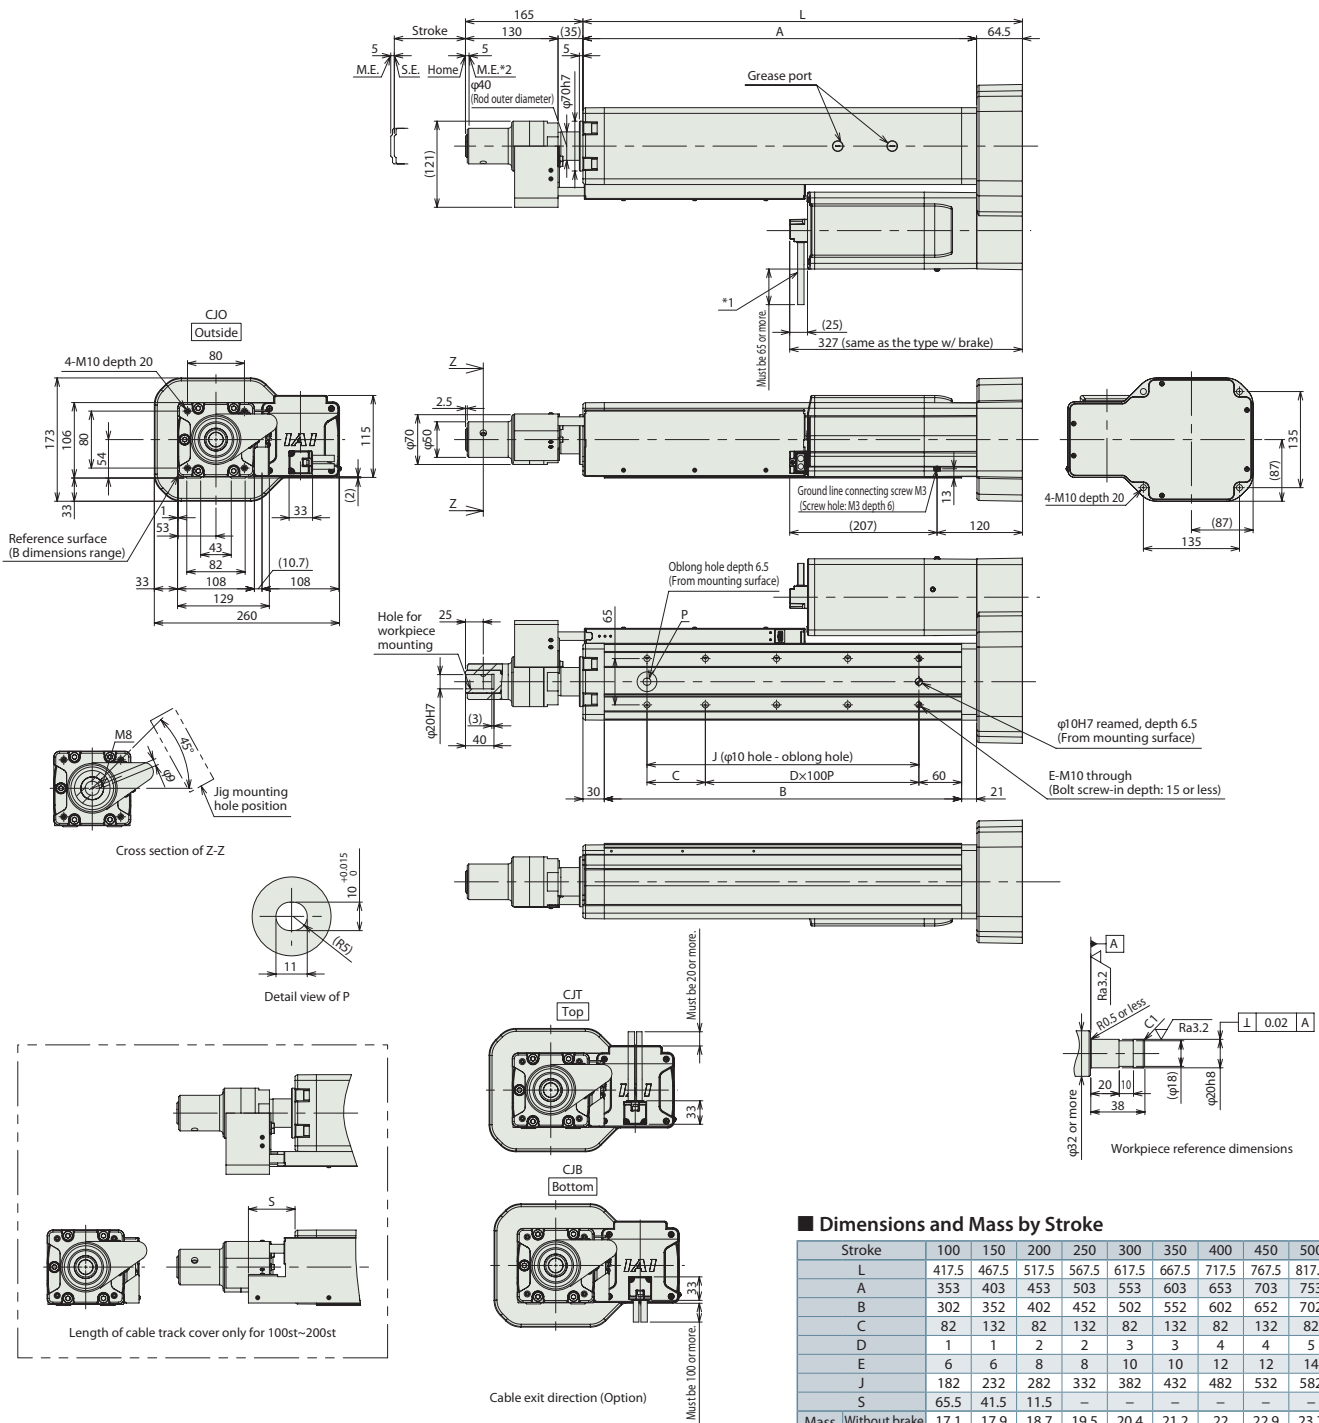

■ Dimensions and Mass by Stroke

Stroke	100	150	200	250	300	350	400	450	500
L	417.5	467.5	517.5	567.5	617.5	667.5	717.5	767.5	817.5
A	353	403	453	503	553	603	653	703	753
B	302	352	402	452	502	552	602	652	702
C	82	132	82	132	82	132	82	132	82
D	1	1	2	2	3	3	4	4	5
E	6	6	8	8	10	10	12	12	14
J	182	232	282	332	382	432	482	532	582
S	65.5	41.5	11.5	—	—	—	—	—	—
Mass (kg)									
Without brake	17.1	17.9	18.7	19.5	20.4	21.2	22	22.9	23.7
With brake	17.6	18.4	19.2	20	20.9	21.7	22.5	23.4	24.2

Applicable Controllers

The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.


Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Network * Option	Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Press program			
SCON-CB/CGB (For servo press only)		1	Single-phase 230VAC	-	-	-	●	DeviceNet CC-Link EtherCAT EtherNet/IP CompoNet 	-	Refer to the SCON-CB/CGB-F servo press function manual.

# RCS2-RA13R High Thrust Rod Type (Servo Press Model with Load Cell)

Battery-less Absolute
Motor Unit Type
Side-mounted Motor
Body Width 130\* mm
230v AC Servo Motor

Model Specification Items	<b>RCS2</b>	<b>RA13R</b>	<b>WA</b>	<b>750</b>			<b>T2</b>		
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	750: Servo motor 750W	2.5:2.5mm 1.25:1.25mm	50: 50mm 200: 200mm (Every 50mm)	T2: SCON-CB/CGB (For servo press only)	N : None P : 1m S : 3m M : 5m X□□ : Specified length R□□ : Robot cable	Refer to Options table below. * One of motor mount direction type needs to be selected from MT1/MT2/MT3/MR1/MR2/ML1/ML3.


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.

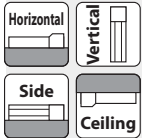

Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.



### Correlation Diagram of Push Force and Current Limit Value

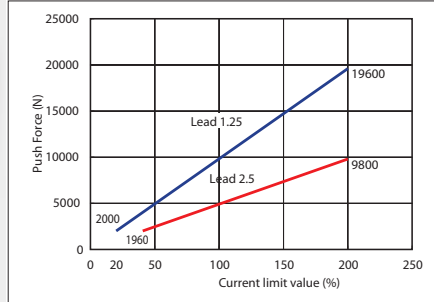

**Caution:**  
 ● The correlation between push force and current limit value is strictly for reference purposes. Actual numbers may vary slightly.  
 ● The push force will be unstable when the current limit value is low. Use at 20% or more for lead 1.25 and 40% or more for lead 2.5.

- POINT Selection Notes**
- For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, please check that the allowable continuous operational thrust force for the actual push cycle is less than the allowable continuous operational thrust force and that the duty cycle is 50% or less. Please refer to the Selection Guidelines (P.28) for more information.
  - The value of payload is when operating at an acceleration of 0.02G for lead 2.5 and 0.01G for lead 1.25. The value listed above is the upper limit of acceleration.
  - Customer's tooling is to be mounted on the load cell itself. In case any radial or moment load is applied to the load cell, please consider adding the external guides, etc. to offset those side loads. The value of the horizontal payload assumes that there is an external guide and that the rod is not subjected to external force other than in the moving direction.
  - For the brake option, a brake box (see P.16) is required in addition to the main unit and controller.
  - Servo Press with load cell should not be used for pulling motion. It will damage the load cell.

### Actuator Specifications

#### Lead and Payload

Model Number	Motor wattage (W)	Lead (mm)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)	Stroke (mm)
				Horizontal (kg)	Vertical (kg)			
RCS2-RA13R-WA-750-2.5-①-T2-②-③	750	2.5	0.02	15	15	5106	9800	50~200 (Every 50mm)
RCS2-RA13R-WA-750-1.25-①-T2-②-③		1.25	0.01	15	15	10211	19600	

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 1~10mm/s speed range.

#### Stroke and Max Speed

Lead (mm)	Stroke (mm)			
	50	100	150	200
2.5	85	120	125	
1.25	62			

(Unit: mm/s)

### Cable Length

Type	Cable Code
Standard	P(1m)
	S(3m)
	M(5m)
Specified length (Standard cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)
Robot cable	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

\* Please contact IAI for maintenance cables.

### Options

Name	Option Code	Reference Page
Brake (With brake box)	<b>B</b>	See P.35
Brake (Without brake box) (Note 2)	<b>BN</b>	See P.35
Flange (Front) (Note 1)	<b>FL</b>	See P.36
Foot bracket (*1) (Note 3)	<b>FT</b>	See P.37
With load cell (with cable track for wiring) (*2) (Note 1)	<b>LCT</b>	See P.37
With load cell (without cable track for wiring) (*2)	<b>LCN</b>	See P.37
Motor top side-mounted	<b>MT1/MT2/MT3</b>	See P.37
Motor right side-mounted (Note 3)	<b>MR1/MR2</b>	See P.37
Motor left side-mounted (Note 3)	<b>ML1/ML3</b>	See P.37

### Actuator Specifications

Item	Description
Drive system	Ball screw ø32mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.2mm or less
Load cell rated capacity	20000N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0~40°C, 85% RH or less (non-condensing)

(\*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity

(\*2) F.S.: Full Scale, the maximum measurable value.

(\*1) Refer to P. 37 for the number of brackets included.  
 (\*2) Please make sure to select one of these for the load cell option (LCT/LCN) in the box of Model Specification Items.  
 (Note 1) Load cell option (with cable track for wiring) "LCT" and flange option "FL" cannot be selected together.  
 (Note 2) When selecting the brake option (without brake box) "BN" and using it as the second axis of the brake box, a cable must be separately purchased. Please refer to P.40 for more information.  
 (Note 3) Option "MR1/MR2/ML1/ML3" and option "FT" cannot be selected together.




## Dimensions

CAD drawings can be downloaded from our website.  
www.robocylinder.de




- \*1. Connect the motor-encoder cables. Please contact IAI for more details on the cable.
- \*2. While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
M.E: Mechanical end S.E: Stroke end
- \*3. The direction of width across flats varies depending on the product. Flats cannot be used for vertical or horizontal reference planes.

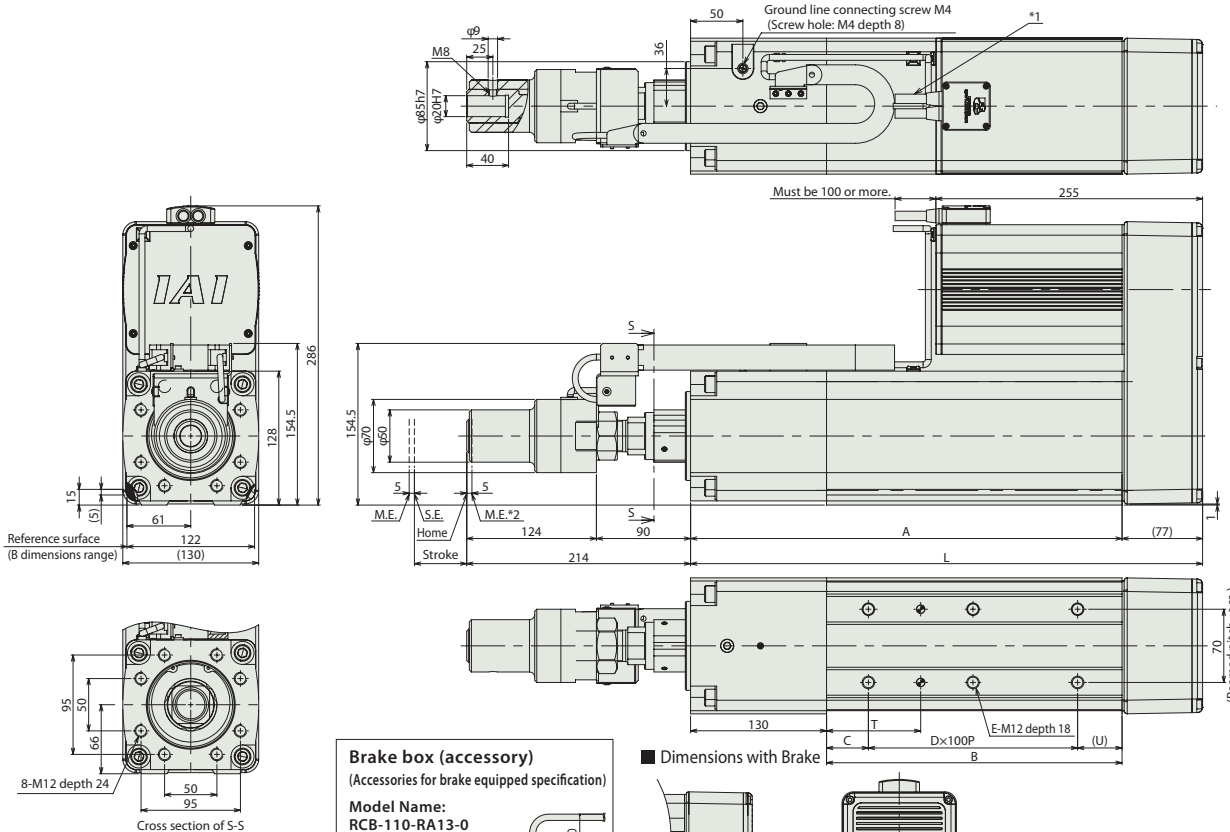

### Brake box (accessory)

(Accessories for brake equipped specification)

Model Name:  
RCB-110-RA13-0

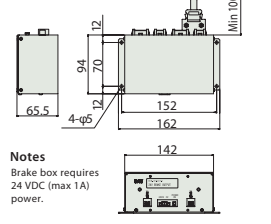

### Dimensions and Mass by Stroke

RCS2-RA13R  
\* The brake option has a 57mm longer total length and 2kg heavier weight.


Stroke	50	100	150	200
L	489.5	539.5	589.5	639.5
A	412.5	462.5	512.5	562.5
B	282.5	332.5	382.5	432.5
C	40	65	40	65
D	2	2	3	3
E	6	6	8	8
T	90	115	90	115
U	42.5	67.5	42.5	67.5
Mass (kg)	35.5	36.5	37.5	38.5

**Notes**  
The specification with brake (option model name "-B") always comes with a brake box. To purchase only the actuator body with brake, select the option model name "-BN".

## Side-mounted motor direction / Cable exit position (Option)

### Notes

Be sure to select a symbol in the model number for the side-mounted motor direction and cable exit position.



Option Code	MT1	MT2	MT3	MR1	ML1	MR2	ML3
Side-mounted motor direction	Top (standard)	Top	Top	Right side	Left side	Right side	Left side
Cable exit position	Top (standard)	Right side	Left side	Top	Top	Right side	Left side

## Applicable Controllers

The RCS2 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.


Name	External view	Max. number of connectable axes	Power supply voltage	Control method					Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Press program	Network * Option		
SCON-CB/CGB (For servo press only)		1	Single-phase 230VAC	-	-	-	●	DeviceNet CC-Link EtherCAT EtherNet/IP CompoNet CANopen	-	Refer to the SCON-CB/CGB-F servo press function manual.

# RCS3-RA15R Ultra-high Thrust Rod Type (Servo Press Model with Load Cell)


Battery-less Absolute
Motor Unit Type
Side-mounted Motor
Body Width 150\* mm
230v AC Servo Motor

Model Specification Items	<b>RCS3</b>	<b>RA15R</b>	<b>WA</b>	<b>3300</b>	<b>3.6</b>		<b>T3</b>		
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	3300: Servo motor 3300W	3.6: Lead 3.6mm	100: 100mm 500: 500mm (Every 100mm)	T3: SCON-CGB (For servo press only)	N : None P : 1m S : 3m M : 5m X□□ : Specified length	Refer to Options table below. * Make sure to specify MT (Side-mounted motor on top).


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.

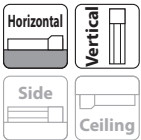

\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.

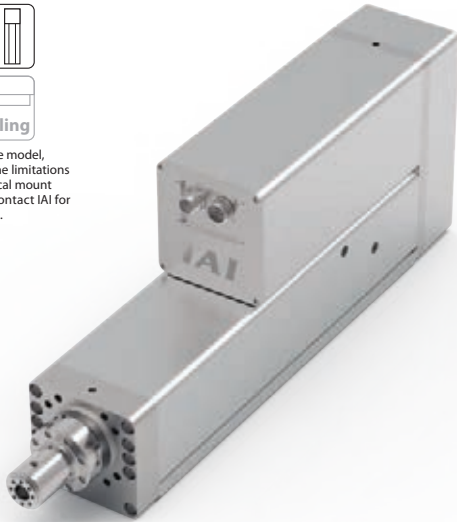

## Correlation Diagram of Push Force and Current Limit Value

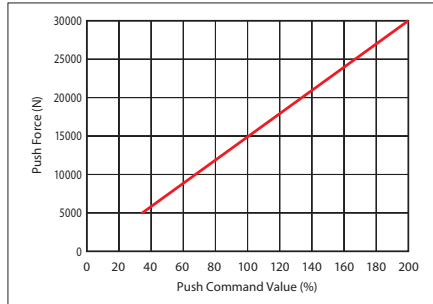

### Caution:

- The correlation between push force and push command value are strictly for reference purposes. Actual numbers may vary slightly.
- The push command value should be 34% or more because the push force will be unstable when the push command value is low.

**POINT Selection Notes**

- (1) For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, please check that the allowable continuous operational thrust force for the actual push cycle is less than the allowable continuous operational thrust force. (Even if there is no push motion) Please refer to P.28 for more information.
- (2) Customer's tooling is to be mounted on the load cell itself. In case any radial or moment load is applied to the load cell, please consider adding the external guides, etc. to offset those side loads.
- (3) Please install a support block when front mounting a horizontally mounted actuator. (Refer to page 34 "Notes When Installing")
- (4) Servo Press with load cell should not be used for pulling motion. It will damage the load cell.
- (5) The maximum payload for vertical mounting is 220kg when using the M5 tapped mounting hole at the tip of the load cell. When using the M8 tapped mounting hole on the side of the load cell tip and fixing with a setscrew, the payload should be 15 kg or less. Use either the M8 or M5 tapped mounting hole but not both.

Actuator Specifications									
Lead and Payload									
Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)	
					Horizontal (kg)	Vertical (kg)			
RCS3-RA15R-WA-3300-3.6-①-T3-②-③	3300	3.6	240	0.1	15	220	15577	30000	

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 1~10mm/s speed range.

Stroke and Max Speed		
Lead (mm)	Stroke (mm)	100~500
3.6		240

(Unit: mm/s)

Cable Length	
Type	Cable Code
Standard (Robot cable)	P(1m)
	S(3m)
	M(5m)
Specified length (Robot cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)

\* Please refer to the backside for maintenance cables.  
\* Robot cable specification is standard.

Actuator Specifications	
Item	Description
Drive system	Ball screw ø36mm ground
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	50000N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

(\*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity  
(\*2) F.S.: Full Scale, the maximum measurable value.

Options		
Name	Option Code	Reference Page
Brake	B	See P.35
Cable exit direction (Top)	CJT	See P.35
Cable exit direction (Right)	CJR	See P.35
Cable exit direction (Left)	CJL	See P.35
Equipped with load cell (Standard equipment) (*1)	LCT	See P.37
Side-mounted motor direction (Top)	MT	See P.37


(\*1) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

## Dimensions


CAD drawings can be downloaded from our website.  
[www.robocylinder.de](http://www.robocylinder.de)



\*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable.  
 \*2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
 M.E: Mechanical end  
 S.E: Stroke end

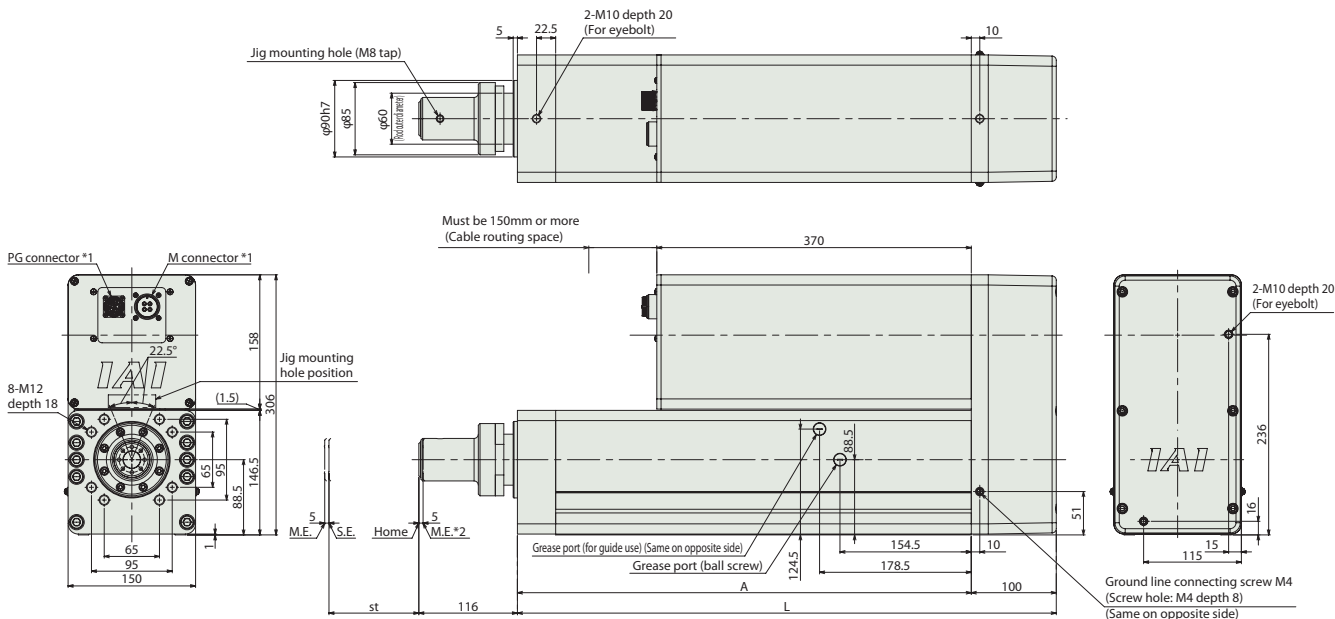

### ■ Dimensions with Brake

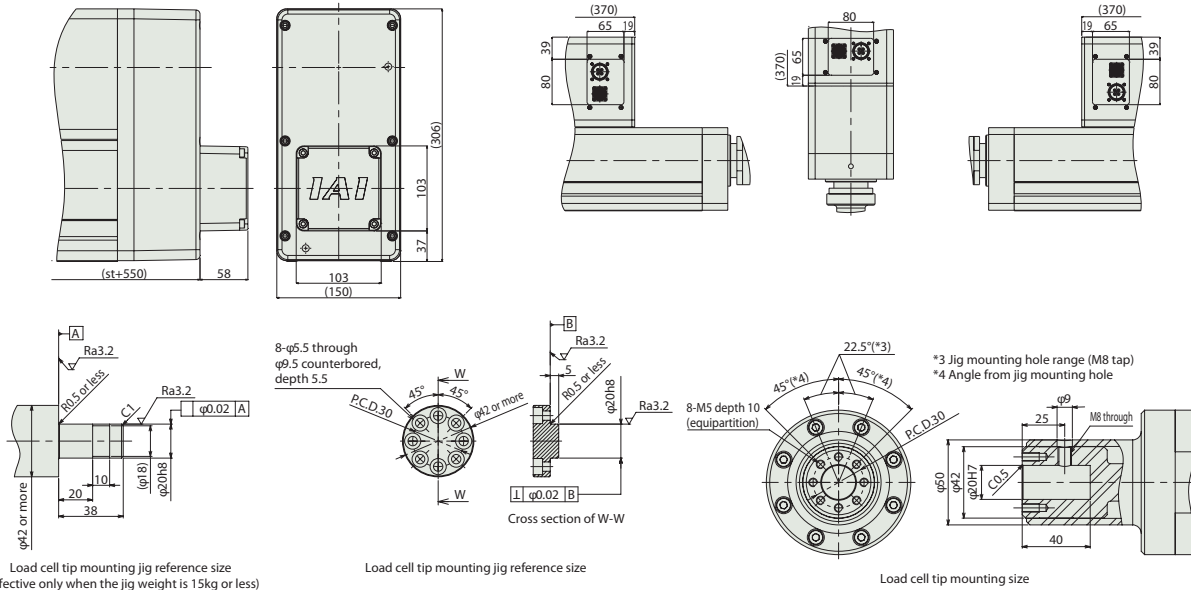

### ■ Dimensions and Mass by Stroke

Stroke	100	200	300	400	500	
L	534	634	734	834	934	
A	434	534	634	734	834	
Mass (kg)	Without brake	61	64.9	68.7	72.6	76.5
	With brake	63	66.9	70.7	74.6	78.5

### Applicable Controllers

The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.

Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Network * Option	Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Press program			
SCON-CGB (For servo press only)		1	Three-phase 230VAC	-	-	-	●	DeviceNet CC-Link EtherCAT EtherNet/IP CompoNet	-	Refer to the SCON-CB/CGB-F servo press function manual.

# RCS3-RA20R Ultra-high Thrust Rod Type (Servo Press Model with Load Cell)

Battery-less Absolute

Motor Unit Type


Side-mounted Motor

Body Width 200\* mm

230v AC Servo Motor

<b>Model Specification Items</b>	<b>RCS3</b>	<b>— RA20R —</b>	<b>WA</b>	<b>— 3000 —</b>	<b>4</b>	<input type="checkbox"/>	<b>T3</b>	<input type="checkbox"/>	<input type="checkbox"/>
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	3000: Servo motor 3000W	4: Lead 4mm	100: 100mm 500: 500mm (Every 100mm)	T3: SCON-CGB (For servo press only)	N : None P : 1m S : 3m M : 5m □ : Specified length	Refer to Options table below. * Make sure to specify MT (Side-mounted motor on top).


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.

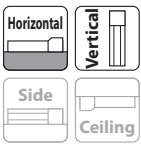

\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.



### Correlation Diagram of Push Force and Current Limit Value

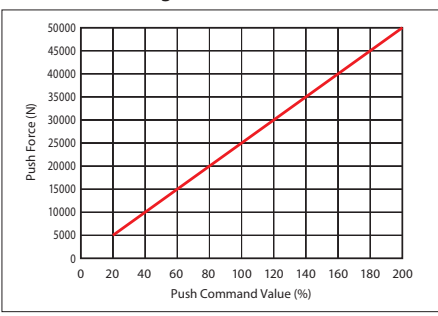

**Caution:**

- The correlation between push force and push command value are strictly for reference purposes. Actual numbers may vary slightly.
- The push command value should be 20% or more because the push force will be unstable when the push command value is low.

- POINT**  
Selection Notes

  - (1) For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, please check that the allowable continuous operational thrust force for the actual push cycle is less than the allowable continuous operational thrust force. (Even if there is no push motion) Please refer to P.28 for more information.
  - (2) Customer's tooling is to be mounted on the load cell itself. In case any radial or moment load is applied to the load cell, please consider adding the external guides, etc. to offset those side loads.
  - (3) Please install a support block when front mounting a horizontally mounted actuator. (Refer to page 34 "Notes When Installing")
  - (4) Servo Press with load cell should not be used for pulling motion. It will damage the load cell.
  - (5) The maximum payload for vertical mounting is 220kg when using the M5 tapped mounting hole at the tip of the load cell. When using the M8 tapped mounting hole on the side of the load cell tip and fixing with a setscrew, the payload should be 15 kg or less. Use either the M8 or M5 tapped mounting hole but not both.

Actuator Specifications									
Lead and Payload									
Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)	
RCS3-RA20R-WA-3000-4-①-T3-②-③	3000	4	220	0.1	15	220	25902	50000	

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 1~10mm/s speed range.

Stroke and Max Speed		
Lead (mm)	Stroke (mm)	100~500
4		220

(Unit: mm/s)

Cable Length	
Type	Cable Code
Standard (Robot cable)	P(1m)
	S(3m)
	M(5m)
Specified length (Robot cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)

\* Please refer to the backside for maintenance cables.  
\* Robot cable specification is standard.

Actuator Specifications	
Item	Description
Drive system	Ball screw ø40mm ground
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Load cell rated capacity	50000N
Loading repeatability (*1)	±0.5% F.S (*2)
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

(\*1) Ratio (in percentage) of the load variations caused by the repeated operations to the load cell rated capacity  
(\*2) F.S.: Full Scale, the maximum measurable value.

Options		
Name	Option Code	Reference Page
Brake	<b>B</b>	See P.35
Cable exit direction (Top)	<b>CJT</b>	See P.35
Cable exit direction (Right)	<b>CJR</b>	See P.35
Cable exit direction (Left)	<b>CJL</b>	See P.35
Equipped with load cell (Standard equipment) (*1)	<b>LCT</b>	See P.37
Side-mounted motor direction (Top)	<b>MT</b>	See P.37


(\*1) Please make sure to enter "LCT" in the box of Model Specification Items to select the actuator with load cell option.

## Dimensions




CAD drawings can be downloaded from our website.  
[www.robocylinder.de](http://www.robocylinder.de)




\*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable.  
 \*2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
 M.E: Mechanical end  
 S.E: Stroke end

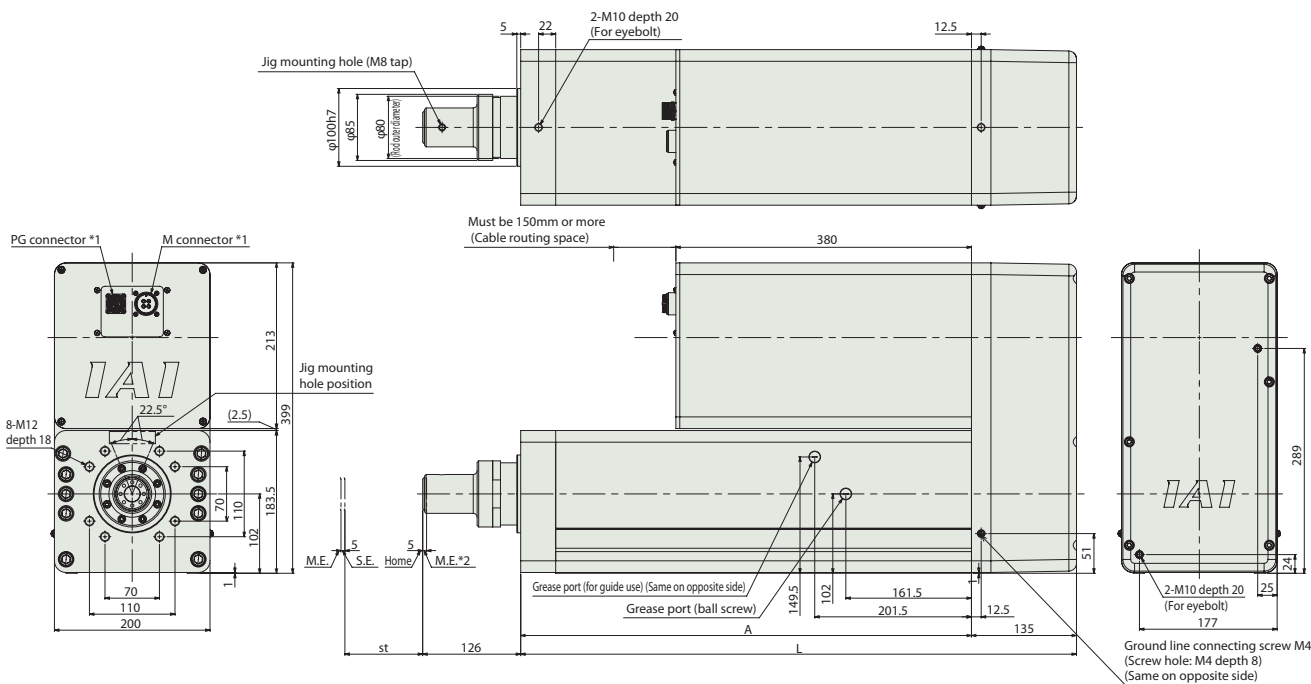

### ■ Dimensions with Brake

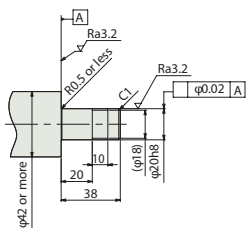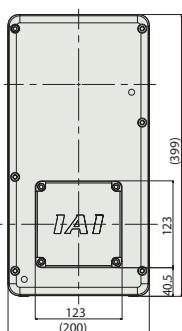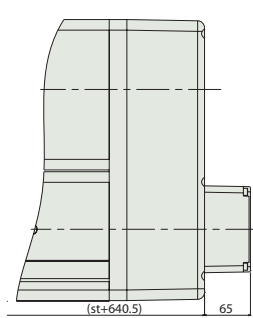

Load cell tip mounting jig reference size  
 (Effective only when the jig weight is 15kg or less)




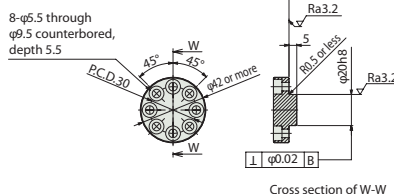


Load cell tip mounting jig reference size

Cable exit direction: Right (CJR)


Cable exit direction: Top (CJT)

Cable exit direction: Left (CJL)

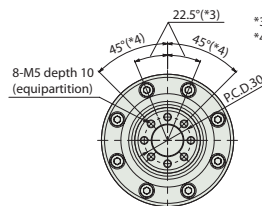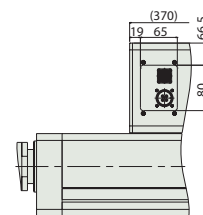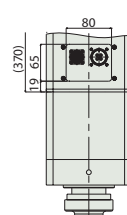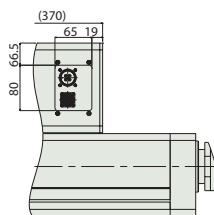

Load cell tip mounting size

\*3 Jig mounting hole range (M8 tap)  
 \*4 Angle from jig mounting hole

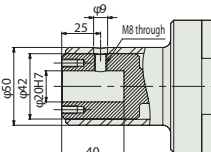

### ■ Dimensions and Mass by Stroke

Stroke	100	200	300	400	500	
L	614.5	714.5	814.5	914.5	1014.5	
A	479.5	579.5	679.5	779.5	879.5	
Mass (kg)	Without brake	93.3	99.6	105.8	112.1	118.4
	With brake	96.3	102.6	108.8	115.1	121.4

### Applicable Controllers

The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.


Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Network * Option	Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Press program			
SCON-CGB (For servo press only)		1	Three-phase 230VAC	-	-	-	●		-	Refer to the SCON-CB/CGB-F servo press function manual.

# RCS2-RA13R High Payload Rod Type (Conveyor Position Model without Load Cell)


Battery-less Absolute
Motor Unit Type
Side-mounted Motor
Body Width 130\* mm
230v AC Servo Motor

Model Specification Items	<b>RCS2</b>	<b>RA13R</b>	<b>WA</b>	<b>750</b>			<b>T2</b>		
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	750: Servo motor 750W	2.5:2.5mm 1.25:1.25mm	50: 50mm 100: 100mm 200: 200mm (Every 50mm)	T2:\$CON SSEL XSEL-P/Q XSEL-RA/SA	N : None P : 1m S : 3m M : 5m X□□ : Specified length R□□ : Robot cable	Refer to Options table below. * One of motor mount direction type needs to be selected from MT1/MT2/MT3/MR1/MR2/ML1/ML3.


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.

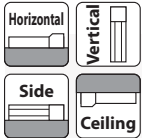

\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.

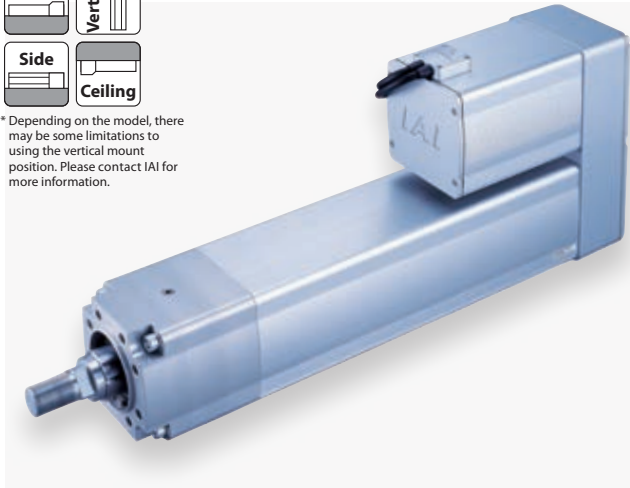

## Correlation Diagram of Push Force and Current Limit Value

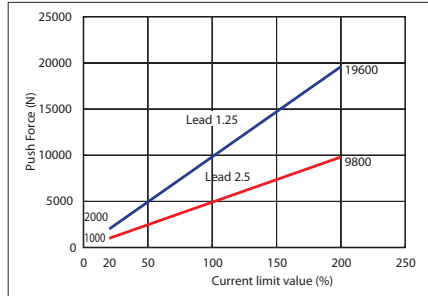

**Caution:**

- The correlation between push force and current limit value is strictly for reference purposes. Actual numbers may vary slightly.
- The current limit value should be 20% or more because the push force will be unstable when the current limit value is low.
- The travel speed during push-motion operation is fixed at 10mm/s. Please note that the graph shows push-motion at 10mm/s, and the push force will decrease as the speed changes.
- Depending on the operating conditions, the push force may decrease due to the temperature rise of the motor



- For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, please check that the allowable continuous operational thrust force for the actual push cycle is less than the allowable continuous operational thrust force and that the duty cycle is 50% or less. Please refer to the Selection Guidelines (P.28) for more information.
- The value of payload is when operating at an acceleration of 0.02G for lead 2.5 and 0.01G for lead 1.25. The value listed above is the upper limit of acceleration.
- Estimated allowable duty varies depending on operating conditions (payload, acceleration/deceleration, etc.). Please refer to P.31 for more information.
- The value of the horizontal payload assumes that there is an external guide and that the rod is not subjected to external force other than in the moving direction.
- Loads can be applied to the rod tip. Please refer to P.33 for more information.
- For the brake option, a brake box (see P.22) is required in addition to the main unit and controller.

## Actuator Specifications

### Lead and Payload

Model Number	Motor wattage (W)	Lead (mm)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)	Stroke (mm)
				Horizontal (kg)	Vertical (kg)			
RCS2-RA13R-WA-750-2.5-①-T2-②-③	750	2.5	0.02	400	200	5106	9800	50~200 (Every 50mm)
RCS2-RA13R-WA-750-1.25-①-T2-②-③		1.25	0.01	500	300	10211	19600	

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide.  
 \*\* Max. push force can be achieved only within 5~10mm/s speed range.

### Stroke and Max Speed

Lead (mm)	Stroke (mm)			
	50	100	150	200
2.5	85	120	125	
1.25	62			

(Unit: mm/s)

## Cable Length

Type	Cable Code
Standard	P(1m)
	S(3m)
	M(5m)
Specified length (Standard cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)
Robot cable	R01(1m) ~R03(3m)
	R04(4m) ~R05(5m)
	R06(6m) ~R10(10m)
	R11(11m)~R15(15m)
	R16(16m)~R20(20m)

\* Please contact IAI for maintenance cables.

## Options

Name	Option Code	Reference Page
Brake (With brake box)	<b>B</b>	See P.35
Brake (Without brake box) (Note 1)	<b>BN</b>	See P.35
Flange	<b>FL</b>	See P.36
Foot Bracket (Note 2)	<b>FT</b>	See P.37
Motor top side-mounted	<b>MT1/MT2/MT3</b>	See P.37
Motor right side-mounted (Note 2)	<b>MR1/MR2</b>	See P.37
Motor left side-mounted (Note 2)	<b>ML1/ML3</b>	See P.37

## Actuator Specifications

Item	Description
Drive system	Ball screw ø32mm rolled C10
Positioning repeatability	±0.01mm
Lost motion	0.2mm or less
Rod diameter	ø50mm (ball spline)
Allowable moment load to rod	120N·m (Please see P.33)
Ambient operating temp. & humidity	0~40°C, 85% RH or less (non-condensing)

(Note 1) When selecting the brake option (without brake box) "BN" and using it as the second axis of the brake box, a cable must be separately purchased. Please refer to P.40 for more information.



(Note 2) Option "MR1/MR2/ML1/ML3" and option "FT" cannot be selected together.

## Dimensions

CAD drawings can be downloaded from our website.  
[www.robocylinder.de](http://www.robocylinder.de)




- \*1. Connect the motor-encoder cables. Please contact IAI for more details on the cable.
- \*2. While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.
- M.E: Mechanical end S.E: Stroke end
- \*3. The direction of width across flats varies depending on the product. Those flats cannot be used for vertical or horizontal reference plane.

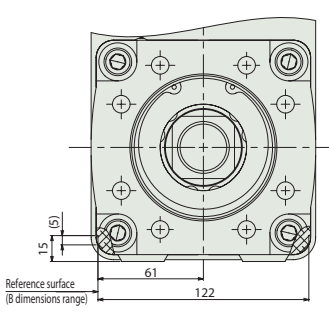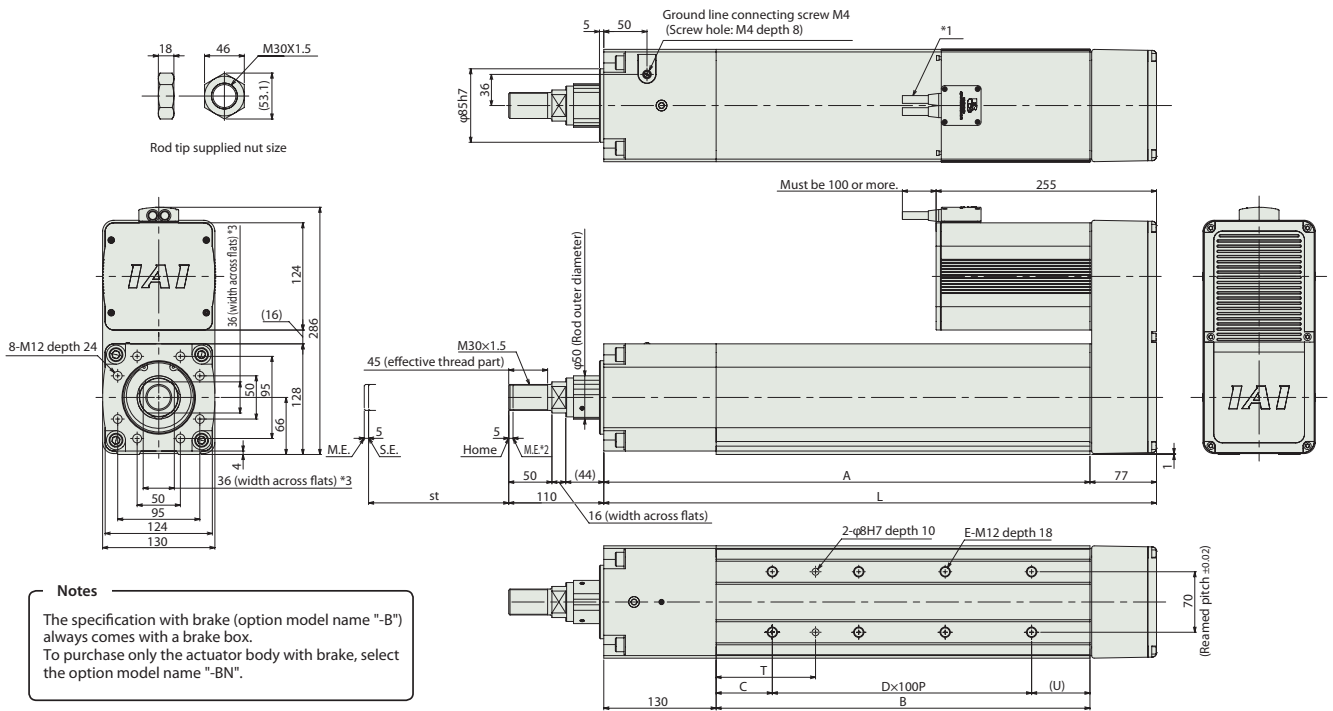

**Brake box (accessory)**  
 (Accessories for brake equipped specification)  
**Model Name:**  
 RCB-110-RA13-0

**Notes**  
 Brake box requires 24 VDC (max 1A) power.

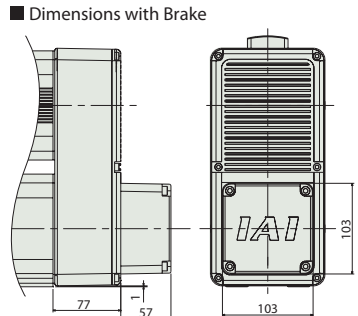


**■ Dimensions and Mass by Stroke**  
 RCS2-RA13R  
 \*The brake option has a 57mm longer total length and 2kg heavier weight.

Stroke	50	100	150	200
L	489.5	539.5	589.5	639.5
A	412.5	462.5	512.5	562.5
B	282.5	332.5	382.5	432.5
C	40	65	40	65
D	2	2	3	3
E	6	6	8	8
T	90	115	90	115
U	42.5	67.5	42.5	67.5
Mass (kg)	33	34	35	36

## Side-mounted motor direction / Cable exit position (Option)

**Notes**  
 Be sure to select a symbol in the model number for the side-mounted motor direction and cable exit position.

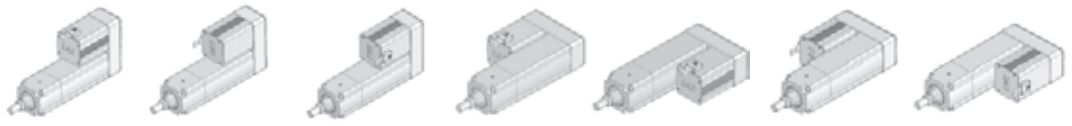

Option Code	MT1	MT2	MT3	MR1	ML1	MR2	ML3
Side-mounted motor direction	Top (standard)	Top	Top	Right side	Left side	Right side	Left side
Cable exit position	Top (standard)	Right side	Left side	Top	Top	Right side	Left side

## Applicable Controllers

The RCS2 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.

Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Network * Option		
SCON-CB/CGB		1	Single-phase 230VAC	●	●	—		512 (768 for network spec.)	Refer to the RCA/RCS2(3) catalog.
SCON-LC/LCG (*)		1		—	—	●		512 (768 for network spec.)	Refer to the SCON-LC/LCG catalog.
SSEL-CS		2		●	—	●		20000	Refer to the RC General catalog.
XSEL-P/Q or XSEL-RA/SA (*)		6 or 8 (Depending on the type)	1-/3-phase 230VAC	—	—	●	Note: The type of compatible networks will vary depending on the controller. Please refer to the reference page for more information.	20000 or 55000 (Depending on the type)	Refer to the XSEL-P/Q or XSEL-RA/SA catalog.

(\*) Coming soon


# RCS3-RA15R

Ultra-high Payload Rod Type  
(Conveyor Position Model without Load Cell)


Battery-less Absolute
Motor Unit Type
Side-mounted Motor
Body Width 150\* mm
230v AC Servo Motor

Model Specification Items	<b>RCS3</b>	<b>RA15R</b>	<b>WA</b>	<b>3300</b>	<b>7.2</b>		<b>T3</b>		
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	3300: Servo motor 3300W	7.2: Lead 7.2mm	100: 100mm ? 500: 500mm (Every 100mm)	T3:SCON-CGB	N : None P : 1m S : 3m M : 5m X□□ : Specified length	Refer to Options table below. * Make sure to add MT (Side-mounted motor direction on top)


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.

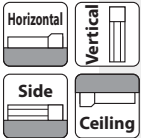

\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.

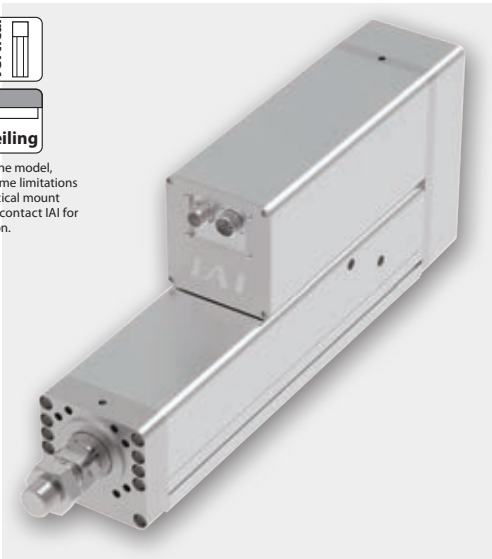

### Correlation Diagram of Push Force and Current Limit Value

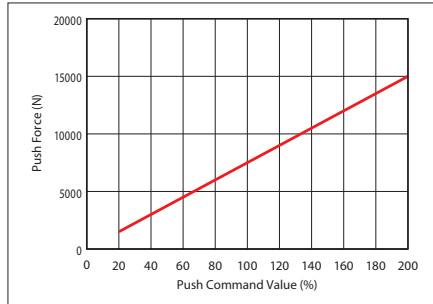

#### Caution:

- The correlation between push force and push command value are strictly for reference purposes. Actual numbers may vary slightly.
- The push command value should be 20% or more because the push force will be unstable when the push command value is low.

**POINT Selection Notes**

- (1) For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, the estimated allowable duty varies depending on operating conditions (payload and speed). Please refer to P.31 for more information.
- (2) Please install a support block when front mounting a horizontally mounted actuator. (Refer to page 34 "Notes When Installing")
- (3) Loads can be applied to the rod tip. Please refer to P.33 for more information.

### Actuator Specifications

#### Lead and Payload

Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)
					Horizontal (kg)	Vertical (kg)		
RCS3-RA15R-WA-3300-7.2-①-T3-②-③	3300	7.2	400	0.2	700	400	7789	15000

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 5~10mm/s speed range.

#### Stroke and Max Speed

Lead (mm)	Stroke (mm)	100~500

(Unit: mm/s)

#### Cable Length

Type	Cable Code
Standard type (Robot cable)	P(1m)
	S(3m)
	M(5m)
Specified length (Robot cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)

\* Please refer to the backside for maintenance cables.  
\* Robot cable specification is standard.

#### Actuator Specifications

Item	Description
Drive system	Ball screw ø36mm ground
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Allowable moment load to rod	Please see P. 33
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

#### Options

Name	Option Code	Reference Page
Brake	<b>B</b>	See P.35
Cable exit direction (Top)	<b>CJT</b>	See P.35
Cable exit direction (Right)	<b>CJR</b>	See P.35
Cable exit direction (Left)	<b>CJL</b>	See P.35
Side-mounted motor direction (Top)	<b>MT</b>	See P.37




Dimensions


CAD drawings can be downloaded from our website.  
www.robocylinder.de



- \*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable.
- \*2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
M.E: Mechanical end S.E.: Stroke end
- \*3 The direction of width across flats varies depending on the product. Those flats cannot be used for vertical or horizontal reference plane.

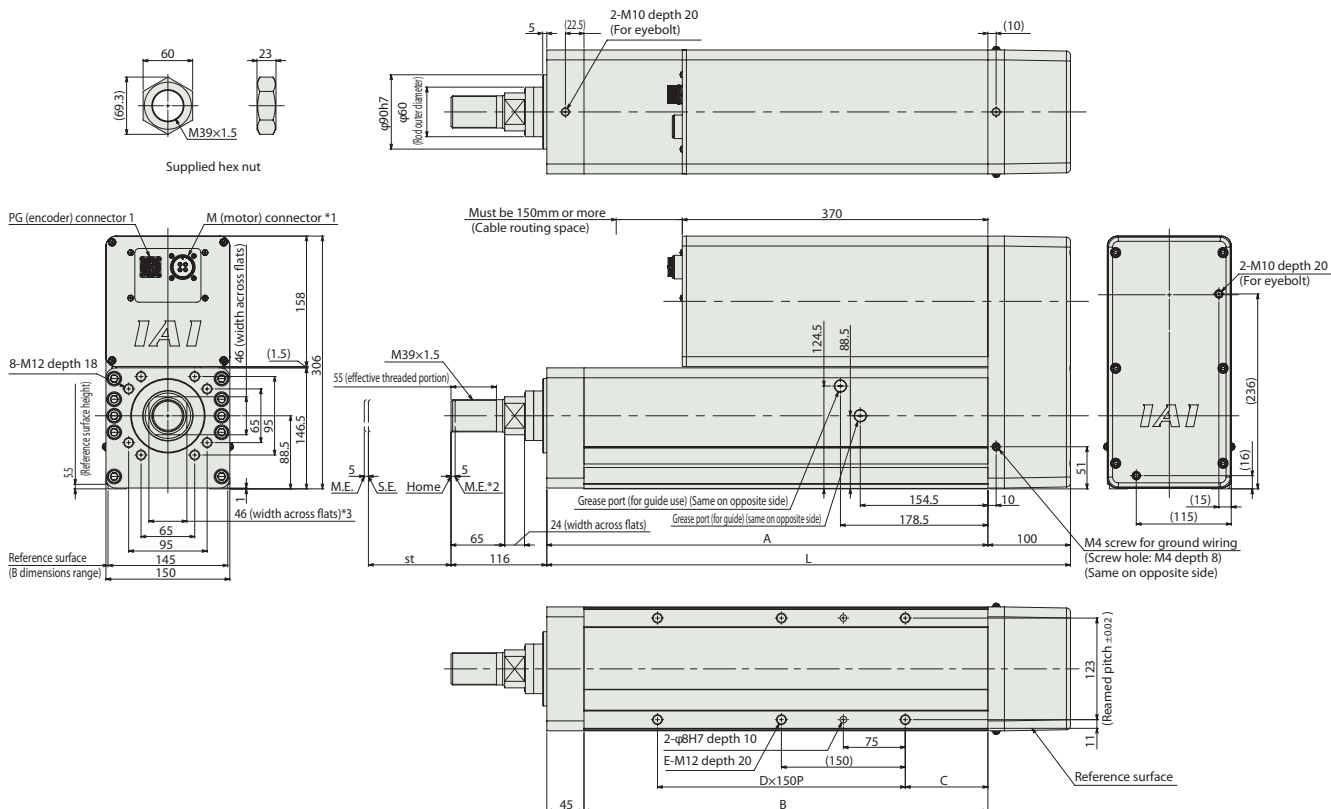


■ Dimensions with Brake

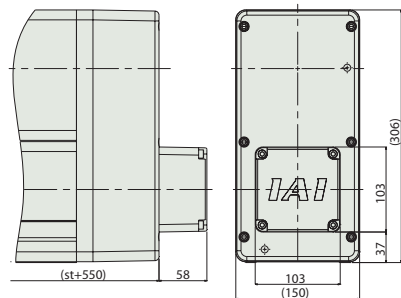

Cable exit direction: Right (CJR)

Cable exit direction: Top (CJT)

Cable exit direction: Left (CJL)

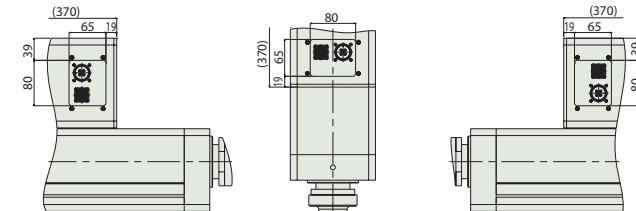

■ Dimensions and Mass by Stroke

Stroke	100	200	300	400	500	
L	534	634	734	834	934	
A	434	534	634	734	834	
B	389	489	589	689	789	
C	50	100	70	50	100	
D	2	2	3	4	4	
E	6	6	8	10	10	
Mass (kg)	Without brake	60	63.9	67.7	71.6	75.5
	With brake	62	65.9	69.7	73.6	77.5

Applicable Controllers

The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.

Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Network * Option		
SCON-CGB (for Position Controller)		1	Three-phase 230VAC	●	-	-	DeviceNet CC-Link EtherCAT EtherNet/IP CompoNet	512 (768 for network spec.)	See P.38


# RCS3-RA20R

Ultra-high Payload Rod Type  
(Conveyor Position Model without Load Cell)


Battery-less Absolute
Motor Unit Type
Side-mounted Motor
Body Width 200\* mm
230v AC Servo Motor

Model Specification Items	<b>RCS3</b>	<b>RA20R</b>	<b>WA</b>	<b>3000</b>	<b>10</b>		<b>T3</b>		
	Series	Type	Encoder Type	Motor Type	Lead	Stroke	Applicable Controllers	Cable Length	Options
			WA: Battery-less Absolute	3000: Servo motor 3000W	10: Lead 10mm	100: 100mm ? 500: 500mm (Every 100mm)	T3:SCON-CGB	N : None P : 1m S : 3m M : 5m X□□ : Specified length	Refer to Options table below. * Make sure to specify MT (Side-mounted motor on top).


\* Does not include a controller.  
 \* Please contact IAI for more information about the model specification items.  
 \* Body width does not include the width of the side-mounted motor.

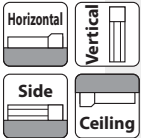

\* Depending on the model, there may be some limitations to using the vertical mount position. Please contact IAI for more information.

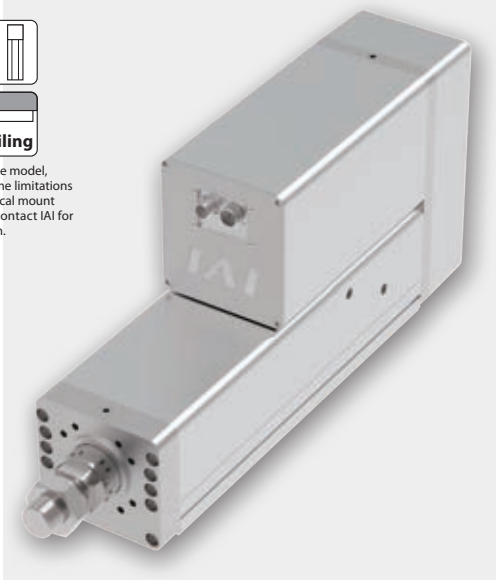

### Correlation Diagram of Push Force and Current Limit Value

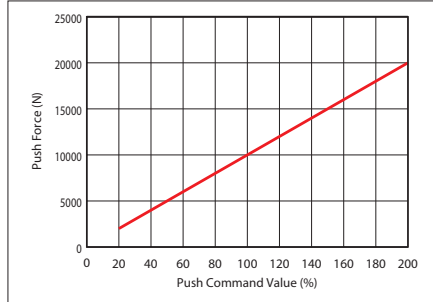

**Caution:**  
 ● The correlation between push force and push command value are strictly for reference purposes. Actual numbers may vary slightly.  
 ● The push command value should be 20% or more because the push force will be unstable when the push command value is low.

**POINT Selection Notes**

- For push-motion operation, check the allowable time period of continuous push-motion set with a different thrust force. Also, the estimated allowable duty varies depending on operating conditions (payload and speed). Please refer to P.31 for more information.
- Please install a support block when front mounting a horizontally mounted actuator. (Refer to page 34 "Notes When Installing")
- Loads can be applied to the rod tip. Please refer to P.33 for more information.

### Actuator Specifications

#### Lead and Payload

Model Number	Motor wattage (W)	Lead (mm)	Max. speed (mm/s)	Max. acceleration (G)	Max. payload		Rated thrust (N)	Max. push force (N)
					Horizontal (kg)	Vertical (kg)		
RCS3-RA20R-WA-3000-10-①-T3-②-③	3000	10	400	0.2	1000	600	10361	20000

Legend: ① Stroke ② Cable Length ③ Option \* Max. horizontal payload means max. weight on the customer's external guide. \*\* Max. push force can be achieved only within 5~10mm/s speed range.

#### Stroke and Max Speed

Lead (mm)	Stroke (mm)	100~500

(Unit: mm/s)

### Cable Length

Type	Cable Code
Standard type (Robot cable)	P(1m)
	S(3m)
	M(5m)
Specified length (Robot cable)	X06(6m) ~X10(10m)
	X11(11m)~X15(15m)
	X16(16m)~X20(20m)

\* Please refer to the backside for maintenance cables.  
 \* Robot cable specification is standard.

### Actuator Specifications

Item	Description
Drive system	Ball screw ø40mm ground
Positioning repeatability	±0.01mm
Lost motion	0.1mm or less
Allowable moment to rod	Please see P. 33
Ambient operating temp. & humidity	0°C~40°C, 85% RH or less (non-condensing)

### Options


Name	Option Code	Reference Page
Brake	<b>B</b>	See P.35
Cable exit direction (Top)	<b>CJT</b>	See P.35
Cable exit direction (Right)	<b>CJR</b>	See P.35
Cable exit direction (Left)	<b>CJL</b>	See P.35
Side-mounted motor direction (Top)	<b>MT</b>	See P.37

Dimensions



CAD drawings can be downloaded from our website.  
www.robocylinder.de



- \*1 Connect the motor-encoder cables. Please contact IAI for more details on the cable.
- \*2 While the rod is returning to its home position, please be careful of interference from surrounding objects, as it will travel until it reaches the mechanical end.  
M.E: Mechanical end S.E.: Stroke end
- \*3 The direction of width across flats varies depending on the product. Those flats cannot be used for vertical or horizontal reference plane.

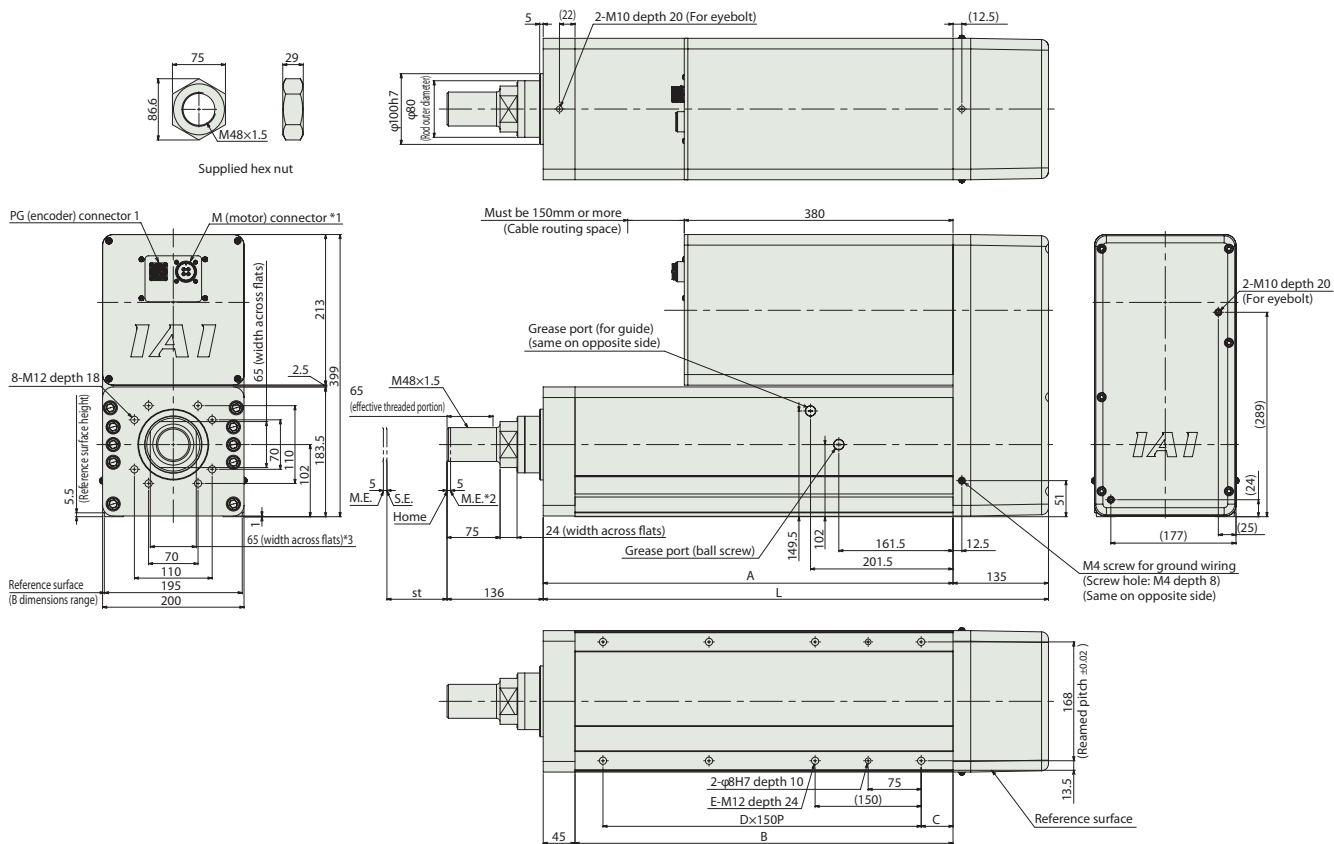

■ Dimensions with Brake

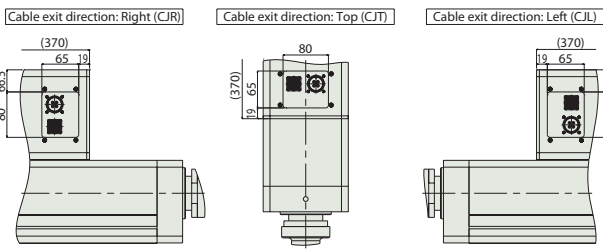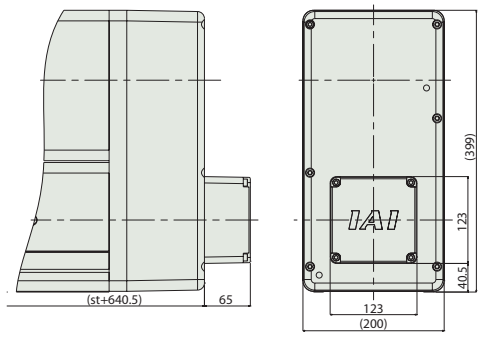

■ Dimensions and Mass by Stroke

Stroke	100	200	300	400	500	
L	614.5	714.5	814.5	914.5	1014.5	
A	479.5	579.5	679.5	779.5	879.5	
B	434.5	534.5	634.5	734.5	834.5	
C	70	45	100	70	120	
D	2	3	3	4	4	
E	6	8	8	10	10	
Mass (kg)	Without brake	93.3	99.6	105.8	112.1	118.4
	With brake	96.3	102.6	108.8	115.1	121.4

Applicable Controllers

The RCS3 series actuators can be operated by the controllers indicated below. Please select the type depending on your intended use.

Name	External view	Max. number of connectable axes	Power supply voltage	Control method				Maximum number of positioning points	Reference page
				Positioner	Pulse train	Program	Network * Option		
SCON-CGB (for Position Controller)		1	Three-phase 230VAC	●	-	-	DeviceNet CC-Link EtherCAT EtherNet/IP CompoNet	512 (768 for network spec.)	See P.38

# Operating Conditions

RCS3/RCS2 Series Servo press specification models (with load cell)

When using the actuator, the following three conditions must be satisfied.

- Condition 1.** The push time must be **the determined time or less**
- Condition 2.** The continuous operational thrust force of a single cycle must be **the allowable continuous operational thrust force or less**
- Condition 3.** In a single cycle, **push-motion operation must occur only once**

**Selection method**

**Condition 1. Push time**

The maximum push time of each push command value is determined in the tables below. When using the actuator, please make sure that the push time is the time indicated in the tables below or less.


Please be aware that using the actuator beyond the time indicated in the tables below may cause the actuator to malfunction.

**Note that there are no limitations on the continuous push time for RA4R.**

**RCS3**


**RA6R**

Push Command Value (%)	Maximum Push Time (s)
70 or less	Continuous pushing available
71~85	300
90	38
95	27
100	21

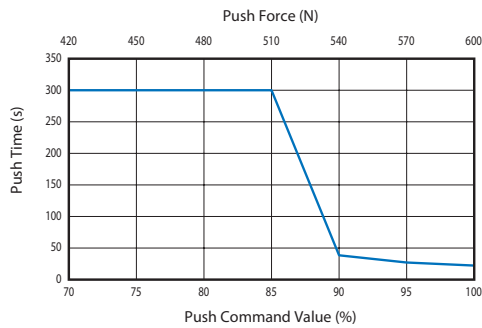


**RA7R**

Push Command Value (%)	Maximum Push Time (s)
70 or less	Continuous pushing available
71~80	300
85	94
90	33
95	24
100	18
105	15
110	12
115	11
120	9
125	8
130	7
135	6
140	5

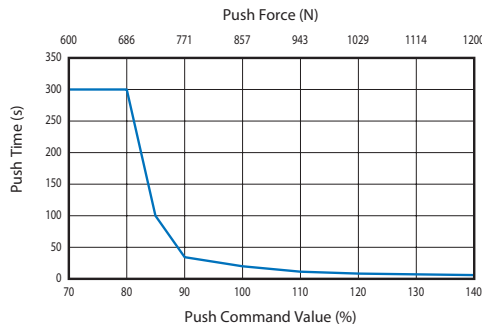


**RA8R**

Push Command Value (%)	Maximum Push Time (s)
70 or less	Continuous pushing available
71~100	300
105	92
110	67
115	54
120	44
125	38
130	33
135	29
140	25

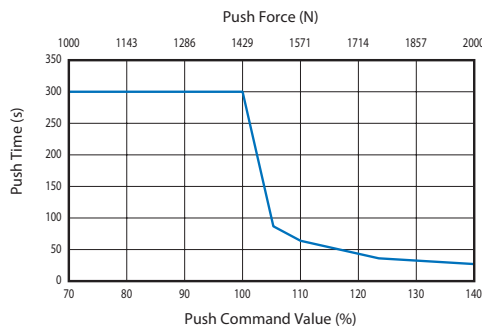

RA10R


Push Command Value (%)	Maximum Push Time (s)
70 or less	Continuous pushing available
71~90	300
95	210
100	95
105	70
110	56
115	46
120	39
125	34
130	30
135	26
140	24
145	21
150	19
155	17
160	16
165	14
170	13
175	12
180	11
185	10
190	9
195	9
200	8

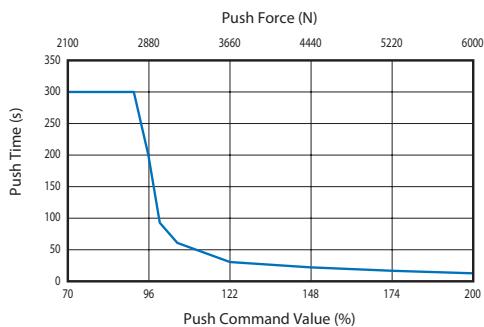

RCS2

RA13R


Push Command Value (%)	Maximum Push Time (s)
70 or less	(Continuous pushing is possible)
71~100	300
110	230
120	95
130	58
140	43
150	33
160	27
170	21
180	18
190	15
200	13

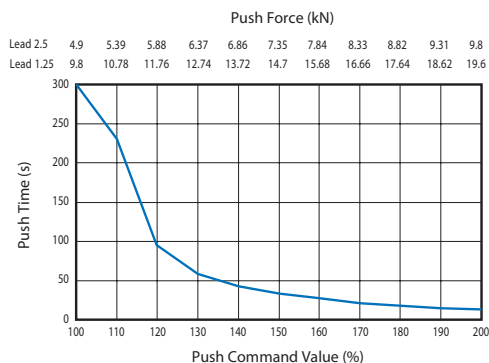

RCS3


RA15R

Push Command Value (%)	Maximum Push Time (s)
90 or less	Continuous pushing available
91~100	300
110	118
120	58
130	40
140	30
150	25
160	20
170	16
180	13
190	10
200	9

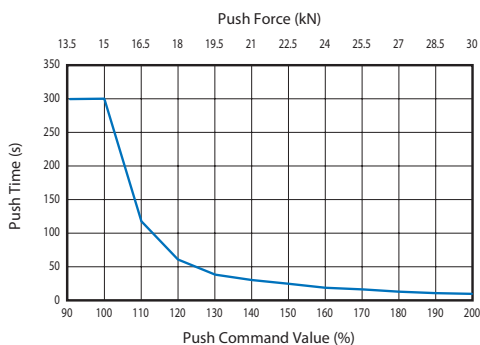

RA20R

Push Command Value (%)	Maximum Push Time (s)
90 or less	Continuous pushing available
91~100	300
110	80
120	50
130	36
140	28
150	22
160	18
170	15
180	13
190	11
200	10

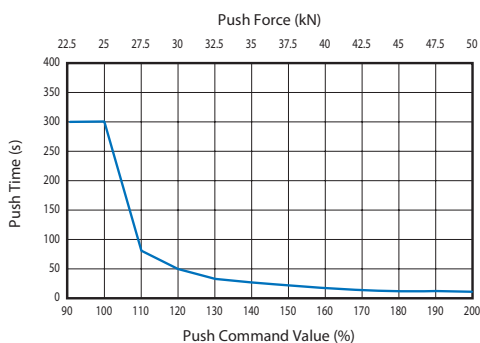


# Operating Conditions


RCS3/RCS2 Series Servo press specification models (with load cell)

**Condition 2.** Continuous operational thrust force

Please consider that the load and duty cycle of a single continuous operational thrust force  $F_t$  must be smaller than the allowable continuous operational thrust force of the actuator. Also, **push-motion operation is performed only once** during a single cycle.

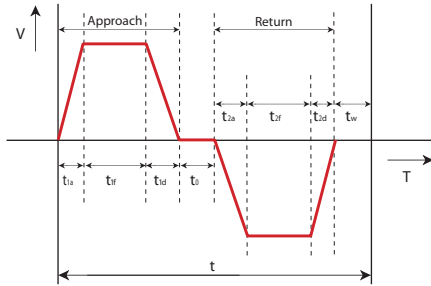

If the operation patterns on the left are rewritten so that thrust becomes the vertical axis

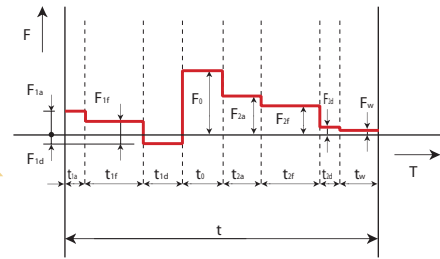

- $t$  : Operation time per cycle (s)
- $t_{1a}$  : Acceleration time 1
- $t_{1f}$  : Constant rate of traverse time 1
- $t_{1d}$  : Deceleration time 1
- $t_0$  : Push-motion operation time
- $t_{2a}$  : Acceleration time 2
- $t_{2f}$  : Constant rate of traverse time 2
- $t_{2d}$  : Deceleration time 2
- $t_w$  : Wait time

- $F_{1a}$  : Thrust necessary for acceleration 1
- $F_{1f}$  : Thrust necessary for constant traverse 1
- $F_{1d}$  : Thrust necessary for deceleration 1
- $F_0$  : Thrust necessary for push-motion operation
- $F_{2a}$  : Thrust necessary for acceleration 2
- $F_{2f}$  : Thrust necessary for constant traverse 2
- $F_{2d}$  : Thrust necessary for deceleration 2
- $F_w$  : Thrust necessary for waiting

The continuous operational thrust force  $F_t$  of a single cycle is calculated with the following formula.

$$F_t = \sqrt{\frac{F_{1a}^2 \times t_{1a} + F_{1f}^2 \times t_{1f} + F_{1d}^2 \times t_{1d} + F_0^2 \times t_0 + F_{2a}^2 \times t_{2a} + F_{2f}^2 \times t_{2f} + F_{2d}^2 \times t_{2d} + F_w^2 \times t_w}{t}}$$

•  $F_{1a}/F_{2a}/F_{1d}/F_{2d}$  vary according to the direction of operation, so please calculate them with the formulas shown below.

- In the case of horizontal use (acceleration/deceleration)
- Horizontal use For constant traverse
- Horizontal use In the wait state
- Vertical use In the case of acceleration during descent
- Vertical use In the case of constant traverse during descent
- Vertical use In the case of deceleration during descent
- Vertical use In the case of acceleration during ascent
- Vertical use In the case of constant traverse during ascent
- Vertical use In the case of deceleration during ascent
- Vertical use In the wait state

$$F_{1a} = F_{1d} = F_{2a} = F_{2d} = (M+m) \times d + F_s$$

$$F_{1f} = F_{2f} = f + F_s$$

$$F_w = 0$$

$$F_{1a} = (M+m) \times 9.8 - (M+m) \times d + F_s$$

$$F_{1f} = (M+m) \times 9.8 + \alpha^{*1} + F_s$$

$$F_{1d} = (M+m) \times 9.8 + (M+m) \times d + F_s$$

$$F_{2a} = (M+m) \times 9.8 + (M+m) \times d + F_s$$

$$F_{2f} = (M+m) \times 9.8 + \alpha^{*1} + F_s$$

$$F_{2d} = (M+m) \times 9.8 - (M+m) \times d + F_s$$

$$F_w = (M+m) \times 9.8$$

- $M$ : Weight of moving part (kg)
- $m$ : Weight of load (kg)
- $d$ : Directive acceleration/deceleration setting (m/s<sup>2</sup>)
- $\alpha$ : Thrust taking into account the driving resistance of the external guide
- $f$ : Driving resistance with an external guide or similar component installed (N)
- $F_s$ : Calculate the thrust for each speed from the table below for RA15R and 20R only

Actuator
Mass of moving part:
RA6R: 2.5kg
RA7R: 3.5kg
RA8R: 4kg
RA10R: 5kg
RA13R: 9kg
RA15R: 10kg
RA20R: 18kg

\*1 When an external guide or similar component is installed, it is necessary to take into account the driving resistance  $f$ .

RCS3-RA15R		RCS3-RA20R	
Speed [mm/s]	$F_s$ [N]	Speed [mm/s]	$F_s$ [N]
0~180	0	0~40	0
181~190	625	41~50	1875
191~200	1250	51~60	3750
201~210	1875	61~70	5625
211~220	2500	71~80	7500
221~230	3125	81~90	9375
231~240	3750	91~100	11250
		101~110	13125
		111~120	15000
		121~130	16875
		131~140	18750
		141~150	20625
		151~160	22500
		161~170	24375
		171~180	26250
		181~220	27500

- $t_{\square a}$  is the acceleration time, but the calculation methods of a ① trapezoid pattern and a ② triangle pattern are different.

The difference between a trapezoid pattern and a triangle pattern can be determined by whether the arrival speed of operation of the traverse distance at the set acceleration is larger or smaller than the set speed.


Arrival speed ( $V_{max}$ ) =  $\sqrt{\text{traverse distance (m)} \times \text{set acceleration (m/s}^2\text{)}}$

Set speed < arrival speed → ① trapezoid pattern

Set speed > arrival speed → ② triangle pattern


- ① In the case of a trapezoid pattern

$t_{\square a} = V_s/a$   $V_s$ : Set speed (m/s)  $a$ : Directive acceleration (m/s<sup>2</sup>)

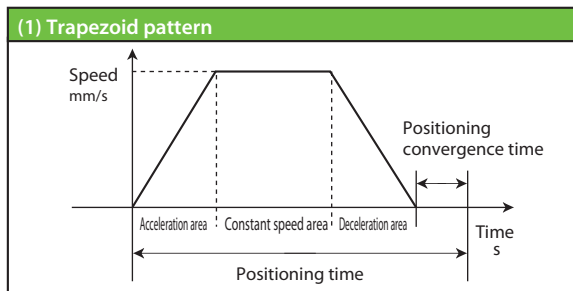

- ② In the case of a triangle pattern

$t_{\square a} = V_t/a$   $V_t$ : Arrival speed (m/s)  $a$ : Directive acceleration (m/s<sup>2</sup>)

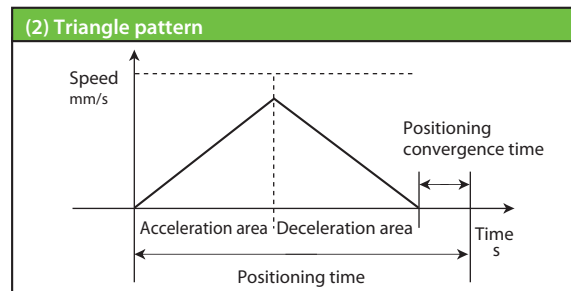

- $t_{\square f}$  is the constant traverse speed. Please calculate this to calculate the constant traverse distance.

$t_{\square f} = L_c/V$   $L_c$ : Constant traverse distance (m)  $V$ : Directive speed (m/s)

\* Constant traverse distance = traverse distance - acceleration distance - deceleration distance; acceleration distance (deceleration distance) =  $V^2/2a$

- $t_{\square d}$  is the deceleration time, but if the magnitude of acceleration and deceleration are the same, then it is the same as the acceleration time.

$t_{\square d} = V/a$   $V$ : The set speed (trapezoid pattern) or arrival speed (triangle pattern) (m/s)  $a$ : Directive deceleration (m/s<sup>2</sup>)

[RCS3-RA15R/RA20R only]

- Calculate the average speed. The average speed can be found with the following equation.

$$v_t = \frac{0.5 \cdot v_1 \cdot t_{1a} + v_1 \cdot t_{1f} + 0.5 \cdot v_1 \cdot t_{1d} + 0.5 \cdot v_2 \cdot t_{2a} + v_2 \cdot t_{2f} + 0.5 \cdot v_2 \cdot t_{2d}}{t}$$

$v_1$ : Constant speed when approaching  
 $v_2$ : Constant speed when returning (trapezoid pattern) or Arrival speed (triangle pattern)

Next, calculate the final continuous operational thrust from the calculated continuous operational thrust  $F_t$  and average speed  $v_t$ .

$F = F_t + v_t \cdot K$

Select coefficient  $K$  from the table below.

Model	Coefficient $K$
RA15R	150
RA20R	412.5

Confirm that the calculated continuous operational thrust  $F_t$  ( $F$  calculated by the above formula for RA15R and 20R) is smaller than the allowable continuous operational thrust. The allowable continuous operational thrust force of this product is as follows.

Model	Allowable continuous operational thrust force [N]
RA6R-LCT	420
RA7R-LCT	600
RA8R-LCT	1000
RA10R-LCT	2100
RA13R-LCT/LCN (*)	Lead 2.5: 5100
	Lead 1.25: 10200
RA15R-LCT	13500
RA20R-LCT	22500

(\*) For RA13R, please limit the duty cycle to 50% or less.

If the conditions cannot be satisfied, please adopt measures such as shortening the push time or extending the wait time.

# Operating Conditions

RCS3/RCS2 Series Conveyor position models (without load cell)

RCS2

**RA13R**      **The same conditions as the servo press compatible rod type with load cell.**  
Please refer to P.27~30.

RCS3

When using the actuator, the following two conditions must be satisfied.

- Condition 1.** The push time must be **the determined time or less**
- Condition 2.** The operating duty must not exceed the allowable duty according to the operating conditions (payload and speed)
- Condition 3.** In a single cycle, push-motion operation must occur only once


**Selection method**

**Condition 1. Push time**

The maximum push time of each push command value is determined in the tables below. When using the actuator, please make sure that the push time is the time indicated in the tables below or less. Please be aware that using the actuator beyond the time indicated in the tables below may cause the actuator to malfunction.


**RA15R**

Push Command Value (%)	Maximum Push Time (s)
90 or less	Continuous pushing available
91~100	300
110	118
120	58
130	40
140	30
150	25
160	20
170	16
180	13
190	10
200	9

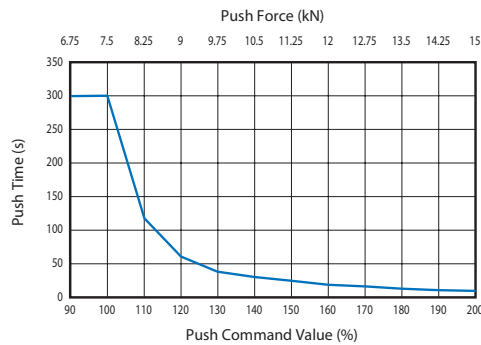

**RA20R**

Push Command Value (%)	Maximum Push Time (s)
90 or less	Continuous pushing available
91~100	300
110	80
120	50
130	36
140	28
150	22
160	18
170	15
180	13
190	11
200	10

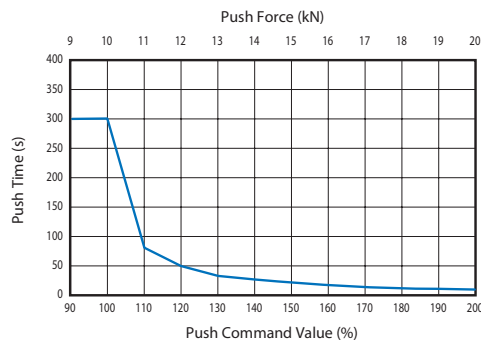



**Condition 2. Duty**

Duty cycle is the percentage of the actuator's active operation time in each cycle. The duty cycle varies depending on the operation conditions (payload and speed). According to the combination of the maximum speed and payload within one cycle, check the guidelines for the allowable duty cycle with the graph below and operate at or below the allowable value.

**<Example>**

If the speed and payload change during reciprocating motion, check using the larger value.

	Forward	Return
Speed	Low	High
Payload	High	Low


Using this combination of values, check with the following graph.

**[Duty Cycle]**

Duty cycle is the percentage of the actuator's active operation time in each cycle.

$$D = \frac{T_M}{T_M + T_R} \times 100(\%)$$


D: Duty  
 T<sub>M</sub>: Operating time (including push-motion operation)  
 T<sub>R</sub>: Stopping time

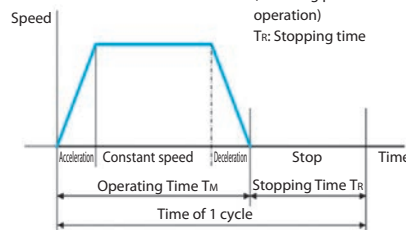


**RCS3**

**RA15R**

**[Vertical mount]**

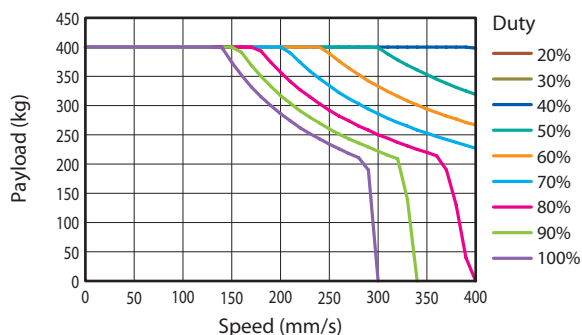


**[Horizontal mount]**

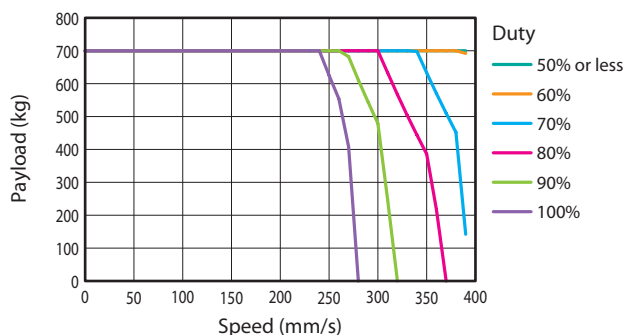


\* The above graph is the case with two external regenerative resistors installed. The number of regenerative resistance units (RESU-35T) can be reduced according to the payload, speed and duty. Contact our sales personnel for details.

**RA20R**

**[Vertical mount]**

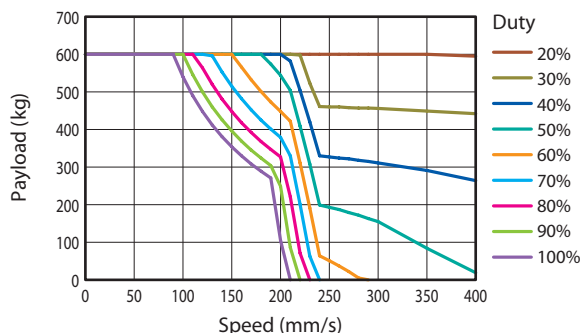

**[Horizontal mount]**

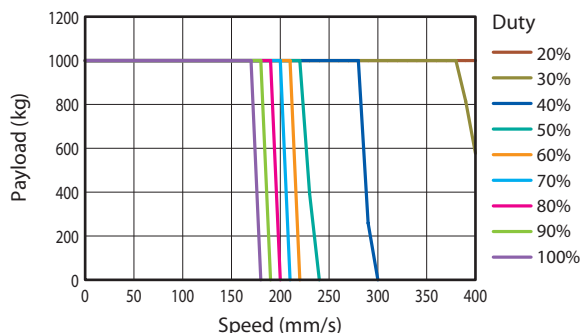

\* The above graph is the case with two external regenerative resistors installed. The number of regenerative resistance units (RESU-35T) can be reduced according to the payload, speed and duty. Contact our sales personnel for details.

# Moment Selection Guide

RCS3/RCS2 Series Conveyor position models (without load cell)

## RCS2

### RA13R

Loads can be applied to the rod within the range of the conditions determined by the following formula.

Loads can be applied to the rod of RCS2-RA13R (without load cell) within the range of the conditions determined by the following formula.


$$M+T \leq 120(N\cdot m)$$

$$\text{Load moment } M = Wg \times L_2$$

$$\text{Load torque } T = Wg \times L_1$$

- \* g = Gravitational acceleration 9.8
- \* L1 = Distance from the rod center to the center of gravity of the workpiece
- \* L2 = Distance from the actuator mounting surface to the center of gravity of the workpiece + 0.07

If the above conditions are not satisfied, use an external guide, etc., to make sure that no load is applied to the rod.

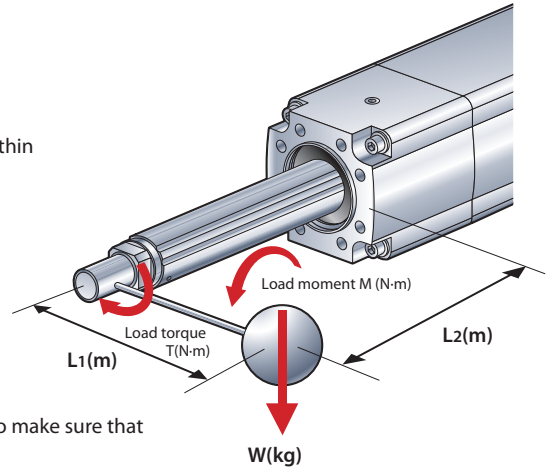

## RCS3


RCS3-RA15R/RA20R: Loads can be applied to the rod within the range of the following two conditions.

**Condition 1.** The radial load acting must not exceed the maximum allowable radial load

**Condition 2.** The applied moment must satisfy the following formula


$$M \geq Ma + Mb + K \cdot Mc$$

- M: Allowable moment (see table below)
- Ma, Mb, Mc: Load moment (see figure at right)
- K: Uniform coefficient
- RCS3-RA15R: 0.36
- RCS3-RA20R: 0.37

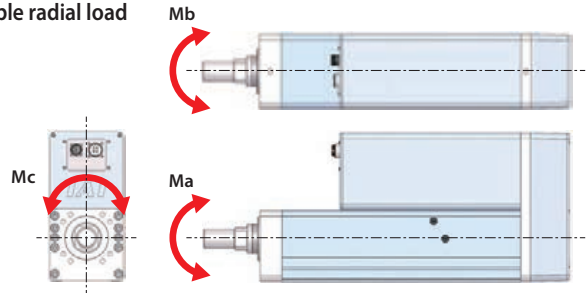


### ■ RCS3-RA15R

Stroke (mm)	100	200	300	400	500
Maximum allowable radial load (N)	392				
Allowable moment (Nm)	140	135	130	125	120

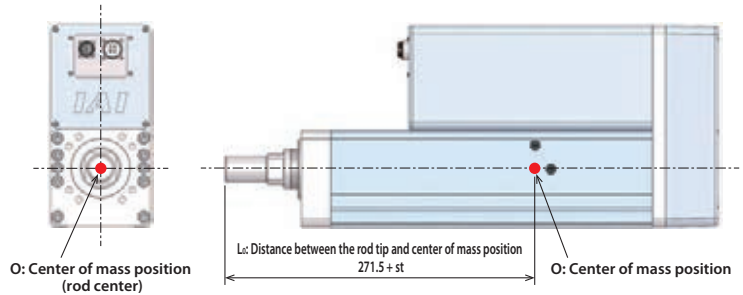

### ■ RCS3-RA20R

Stroke (mm)	100	200	300	400	500
Maximum allowable radial load (N)	540				
Allowable moment (Nm)	230	220	210	200	190

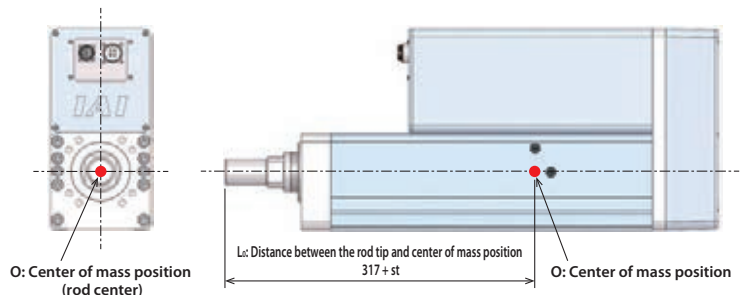

# Mounting Orientation of the Actuator

Some mounting orientations cannot be used or require caution depending on the actuator model. Check the mounting orientation for each model in the table below.


○ : Can be mounted — : Cannot be mounted

Model class	Series	Model type	Horizontal mounting on flat surface	Vertical mounting	Side mounting	Ceiling mounting
Servo press specification (with load cell)	RCS3	RA4	○	○	○	—
		RA6				
		RA7				
		RA8				
		RA10				
		RA15				
	RCS2	RA13	○	○	○	○
Conveyor position (without load cell)	RCS3	RA15	○	○	○	○
		RA20				
	RCS2	RA13				

## Notes When Installing

When installing the front bracket or flange (optional), please be careful that no external force acts on the actuator. (External force may cause malfunctions or damage to parts.)

Please install a support block when front mounting or back mounting a horizontally mounted actuator that is 150st or more. However, adding a support block even for less than 150st is recommended, since vibration might occur depending on the operational and installation conditions and damage the actuator.

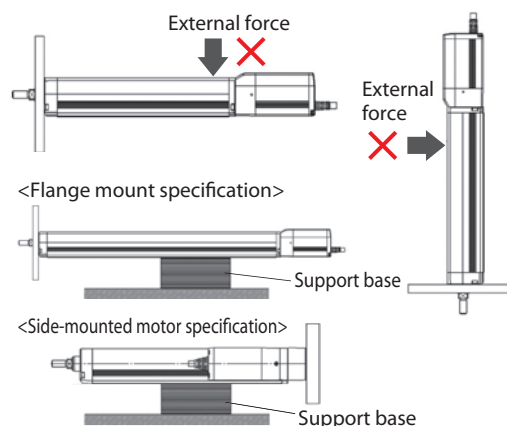

## Controller Reference Page List

Please see the catalogs below or contact IAI for more details on the applicable controllers.

Model class	Series	Model type	Controller	Reference catalog	
Servo press specification (with load cell)	RCS3	RA4R	SCON-CB/CGB <Servo press specification>	Please contact IAI for details.	
		RA6R			
		RA7R			
		RA8R			
		RA10R			
		RA15R			
	RCS2	RA13R			
Conveyor position (without load cell)	RCS3	RA15R	SCON-CGB	This catalog	P. 38
		RA20R	SCON-CB/CGB	RCA/RCS2(3) catalog	P. 74
	RCS2	RA13R	SCON-LC/LCG	SCON-LC/LCG catalog	
			SSEL-CS	RC General catalog V4b	P. 577
			XSEL-P/Q or XSEL-RA/SA	XSEL-P/Q or XSEL-RA/SA catalog	

# RCS3/2-RAR Series Options

## Brake


**Option Code** **B/BN** (without brake box)

**Description** When the actuator is mounted vertically, this works as a holding mechanism that prevents the slider from falling and damaging any attachments when the power or servo is turned off.

## Cable Exit Direction

**Option Code** **CJT / CJR / CJL / CJB / CJO**





**Description** This option allows you to change the exit direction of the motor-encoder cable to top, bottom, left, or right.

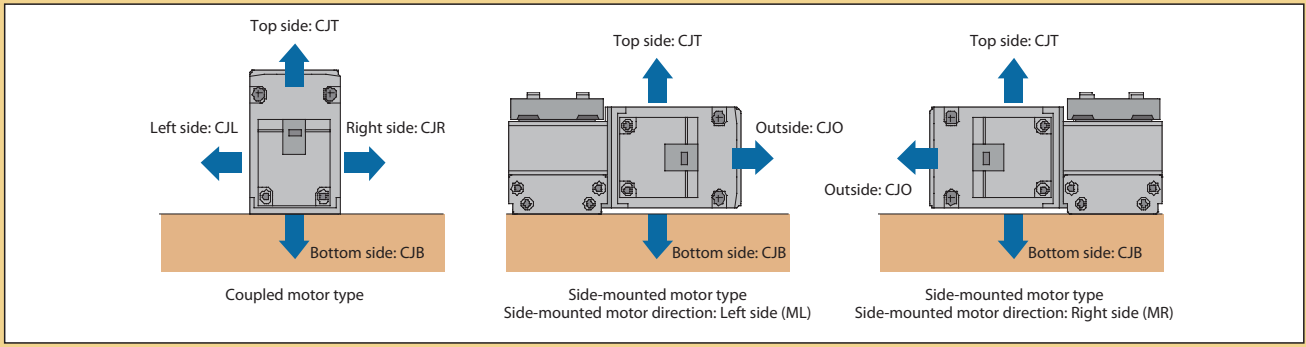


## Flange (Front)

**Option Code** **FL**


**Description** A bracket that attaches to the actuator body with bolts.

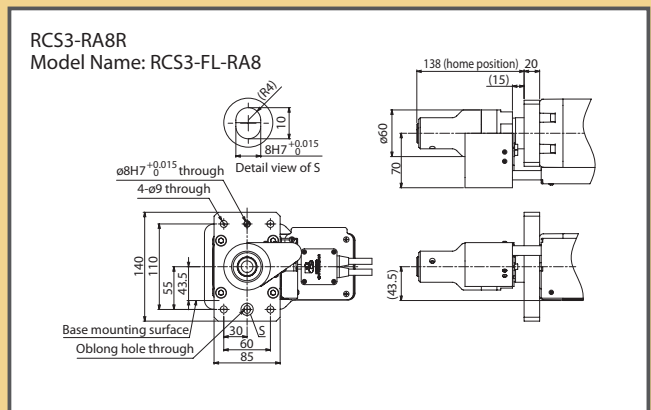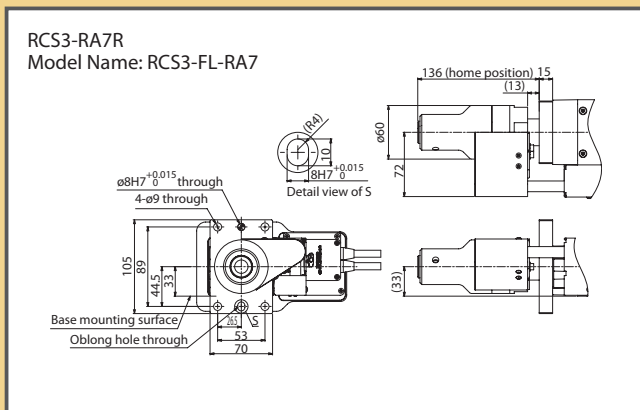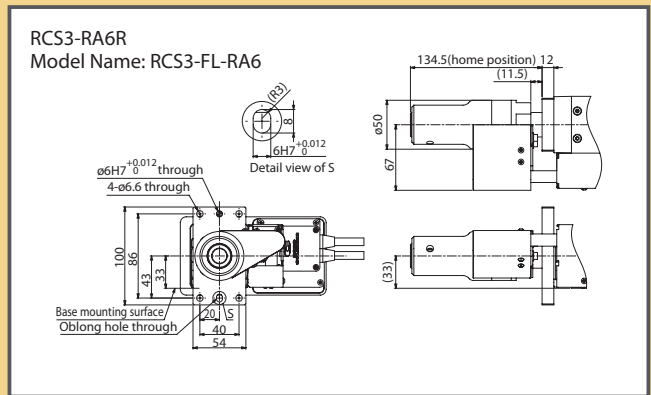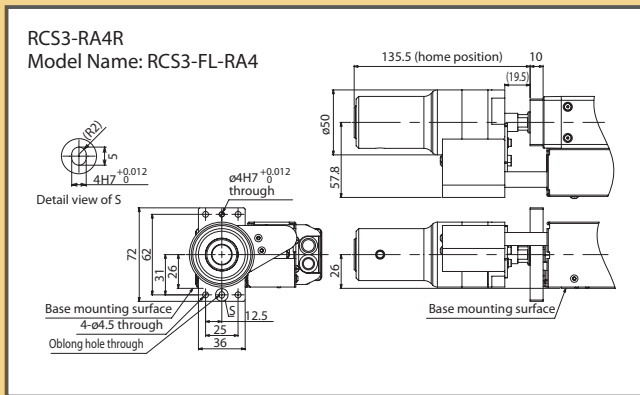

RCS3-RA10R  
Model Name: RCS3-FL-RA10

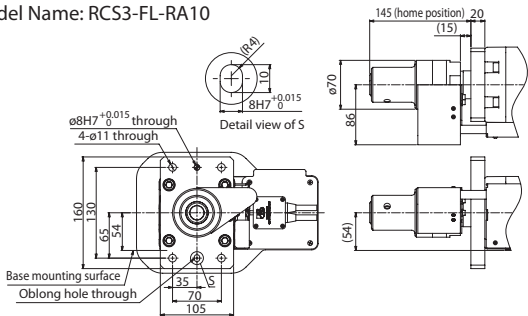

RCS2-RA13R  
Model Name: RCS2-FL-RA13

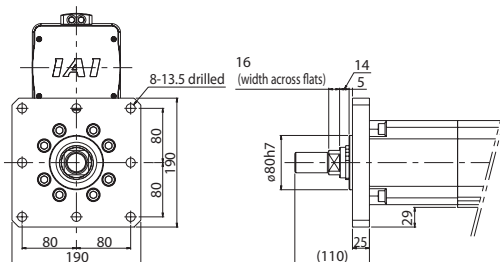


Foot Bracket

Option Code **FT**

Description This is a bracket used to fix the actuator with bolts from the top side. (Bolts are tightened from the top, not from the bottom) The actuator body may be twisted or deformed if insufficient number of mounting foot brackets are used. Actuator life could also be shortened.  
\* Refer to the installation dimensions in the actuator drawing for the installation pitch between the foot brackets.


RCS3-RA4R  
Model name: Short type: RCS3-FT-RA4-1 (Note 1)  
Long type: RCS3-FT-RA4-2 (Note 1)

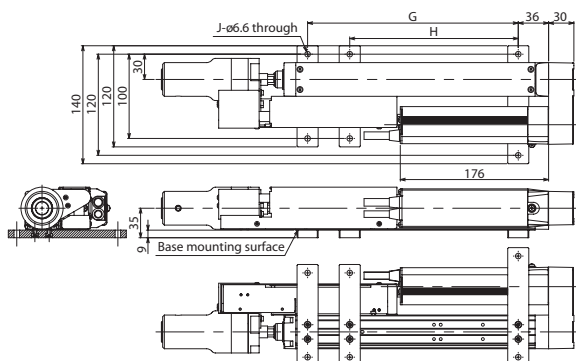

Foot Bracket Standard Mounting Position

Stroke	110	160	210	260	310	360	410
G	150	200	250	300	350	400	450
H	0	0	200	200	200	200	200
J	4	4	6	6	6	6	6


RCS3-RA6R  
Model name: Short type: RCS3-FT-RA6-1 (Note 1)  
Long type: RCS3-FT-RA6-2 (Note 1)

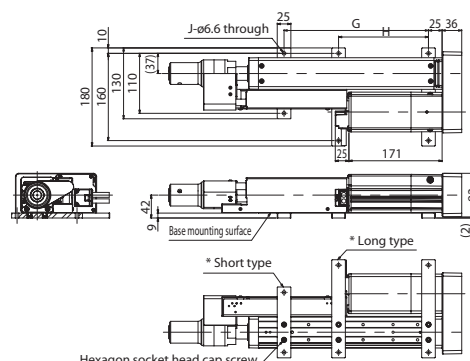

Foot Bracket Standard Mounting Position

Stroke	115	165	215	265	315	365	415
G	165	165	265	265	365	365	465
H	0	0	165	165	165	165	265
J	4	4	6	6	6	6	6


RCS3-RA7R  
Model name: Short type: RCS3-FT-RA7-1 (Note 1)  
Long type: RCS3-FT-RA7-2 (Note 1)

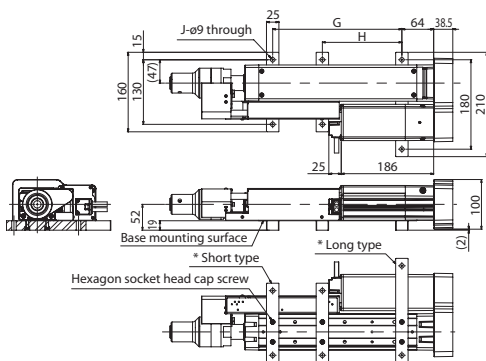

Foot Bracket Standard Mounting Position

Stroke	120	170	220	270	320	370	420	470	520
G	160	160	260	260	360	360	460	460	560
H	0	0	160	160	160	160	260	260	260
J	4	4	6	6	6	6	6	6	6

RCS3-RA8R  
Model name: Short type: RCS3-FT-RA8-1 (Note 1)  
Long type: RCS3-FT-RA8-2 (Note 1)

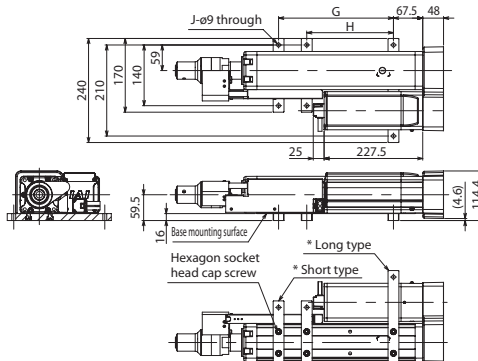

Foot Bracket Standard Mounting Position

Stroke	100	150	200	250	300	350	400	450	500
G	165	215	265	315	365	415	465	515	565
H	0	0	200	200	200	200	200	300	300
J	4	4	6	6	6	6	6	6	6


(Note 1) 2 hexagonal socket head bolts enclosed

## RCS3-RA10R

Model name: Short type: RCS3-FT-RA10-1 (Note 1)  
Long type: RCS3-FT-RA10-2 (Note 1)

Foot Bracket Standard Mounting Position

Stroke	100	150	200	250	300	350	400	450	500
G	182	232	282	332	382	432	482	532	582
H	0	0	200	200	200	200	200	300	300
J	4	4	6	6	6	6	6	6	6

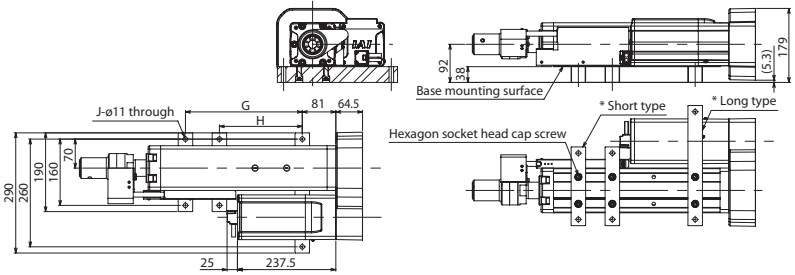

(Note 1) 2 hexagonal socket head bolts enclosed


### Quantities Enclosed

The following number of foot brackets and bolts is enclosed when the foot bracket option (Model: FT) is selected at the time of the actuator purchase.

Model	Stroke (mm)	Foot Bracket	Quantities Enclosed	Number of Bolts Enclosed
RCS3-RA4R	110	Long type	2	4
	160	Short type	1	4
RCS3-RA6R	210 ~ 410	Short type	2	6
	115 ~ 165	Long type	1	4
RCS3-RA7R	115 ~ 165	Long type	2	4
	215 ~ 415	Short type	1	6
RCS3-RA8R	120 ~ 170	Short type	2	4
	220 ~ 520	Long type	1	6
RCS3-RA10R	100	Long type	2	4
	150	Short type	1	4
RCS3-RA13R	200 ~ 500	Long type	2	6
	100	Long type	1	4
RCS2-RA13R	150	Short type	1	4
	200 ~ 500	Short type	2	6
RCS2-RA13R	50 ~ 100	Long type	1	6
	150 ~ 200	Long type	4	8

## RCS2-RA13R

Model Name: RCS2-FT-RA13

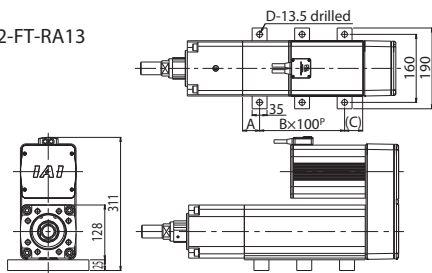

Stroke	50	100	150	200
A	40	65	40	65
B	2	2	3	3
C	42.5	67.5	42.5	67.5
D	6	6	8	8

### With Load Cell

#### Option Code LCT / LCN

**Description** This is an option for installing a load cell on the rod tip of RCS3 Series and RCS2-RA13R (ultra-high thrust actuator) for servo press, and operating with force control. When using as a servo press, be sure to specify. LCT is equipped with a cable track for load cell wiring, while the LCN specification has no cable track and is to be wired by the customer. (LCN is dedicated for RCS2-RA13R.)



#### Caution

When operating RCS2-RA13R with force control, only the SCON-CB controller can be used.


#### Note:

If a Load Cell Calibration Certificate is required by the load cell vendor, there is an extra charge and it must be ordered on the same PO as the actuator. Ordering the certificate after purchasing the actuator will require sending the load cell back to IAI.

### Side-mounted Motor Direction

#### Option Code ML / MR / MT

**Description** This allows you to specify the direction of the side-mounted motor type. As viewed from the motor side of the actuator, side-mounting to left is ML, right is MR, and top is MT.




### Side-mounted Motor Direction / Cable Exit Position

#### Option Code MT□ / MR□ / ML□

**Description** The combination of side-mounted motor direction and cable exit direction can be specified.

#### Notes

Be sure to select a symbol in the model number for the side-mounted motor direction and cable exit position.



Option Code	MT1	MT2	MT3	MR1	ML1	MR2	ML3
Side-mounted motor direction	Top (standard)	Top	Top	Right side	Left side	Right side	Left side
Cable Exit Position	Top (standard)	Right side	Left side	Top	Top	Right side	Left side

# SCON-CGB



Position Controller for RCS3-RA15R/RA20R without Load Cell

## Features

### 1 Supports battery-less absolute encoder

The RCS3 can operate equipped with a battery-less absolute encoder. Since no battery is needed for retaining position data, it is possible to save space around the control panel, which helps to keep down the initial cost and maintenance cost.



### 2 Compatible with major field networks <Optional function>

Can be directly connected to DeviceNet, CC-Link, and PROFIBUS-DP, as well as CompoNet, EtherCAT, EtherNet/IP and PROFINET IO. It can also be operated by specifying the coordinate values directly via the field network.

DeviceNet

PROFI  
BUS

CompoNet

CC-Link


EtherNet/IP

EtherCAT


PROFI  
NET

### 3 Vibration suppression control function <Standard function>

Equipped with a damping control function that reduces the shaking (vibration) of the workpiece attached to the slider of the actuator. The standby time for vibration to settle is shortened, making it possible to shorten the cycle time.

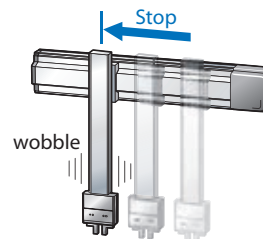

Without vibration control  
There is vibration after stopping.

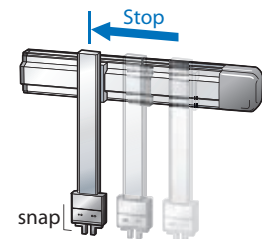


With vibration control  
There is almost no vibration after stopping.

### 4 Predictive maintenance function <Standard function>

- A function that issues a warning when a motor overload is detected has been included. Monitoring changes in the temperature of the motor makes it possible to detect abnormalities before the occurrence of a breakdown or a malfunction.
- Monitoring functions have been improved. Similar to an oscilloscope, it is now possible to acquire the waveforms of the position, speed, etc. from the instant the state of the selected signal changes. It is also possible to acquire the signal states of positioning complete, alarms, etc.
- A function that integrates the number of cycles with the traveled distance accumulation makes it possible to check maintenance timing.
- The calendar function makes it possible to keep a timetable of the alarms that have been generated.



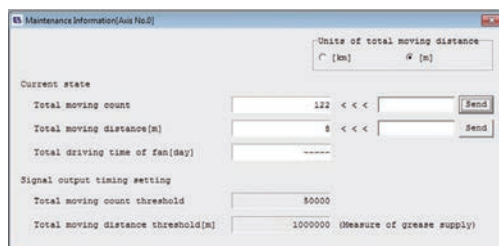





<Maintenance information>



<Calendar function>


		Time(Y/M/D h:m:s)
0E5	Encoder data receive error	000C 17/02/02 04:50:27
04F	Total moving distance is exceeded threshold.	---- 17/02/02 04:49:32
04E	Total moving count is exceeded threshold.	---- 17/02/02 04:49:32
0E5	Encoder data receive error	000C 17/02/02 04:49:32
0E5	Encoder data receive error	000C 17/02/02 04:33:04
FFF	PowerUP No Error	---- 17/02/02 04:33:04

## List of Models

Model Number	SCON-CGB							
External view								
I/O Type	Standard specification	Field network type (*)						
	PIO connection specification (*1)	 DeviceNet DeviceNet connection specification	 CC-Link CC-Link connection specification	 PROFIBUS-DP PROFIBUS-DP connection specification	 CompoNet CompoNet connection specification	 EtherCAT EtherCAT connection specification	 EtherNet/IP EtherNet/IP connection specification	 PROFINET IO PROFINET IO connection specification
I/O type model number	NP/PN	DV	CC	PR	CN	EC	EP	PRT
Supported encoder	Battery-less Absolute							
SCON-CGB	3000W	○	○	○	○	○	○	○
	3300W	○	○	○	○	○	○	○


(\*1) Please note that the field networks cannot be communicated with using the PIO.

## Model

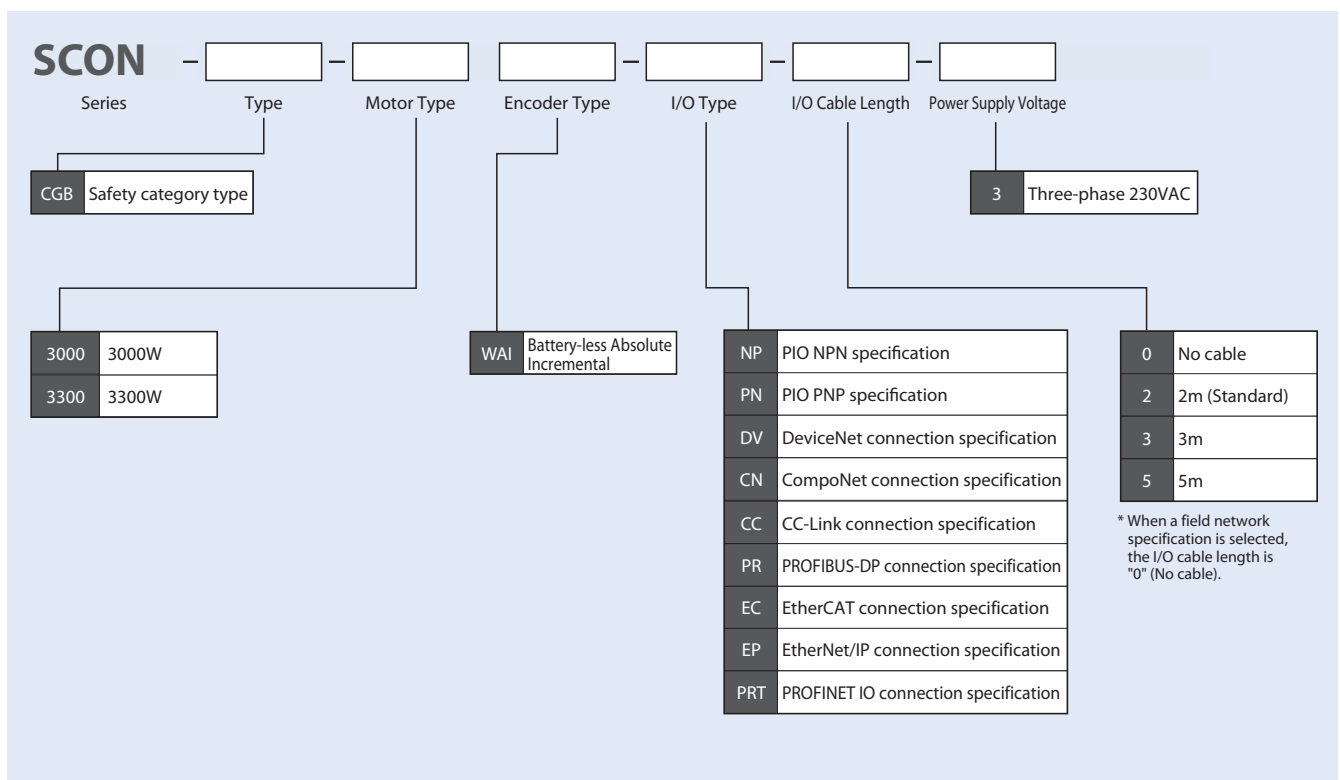




## System Configuration

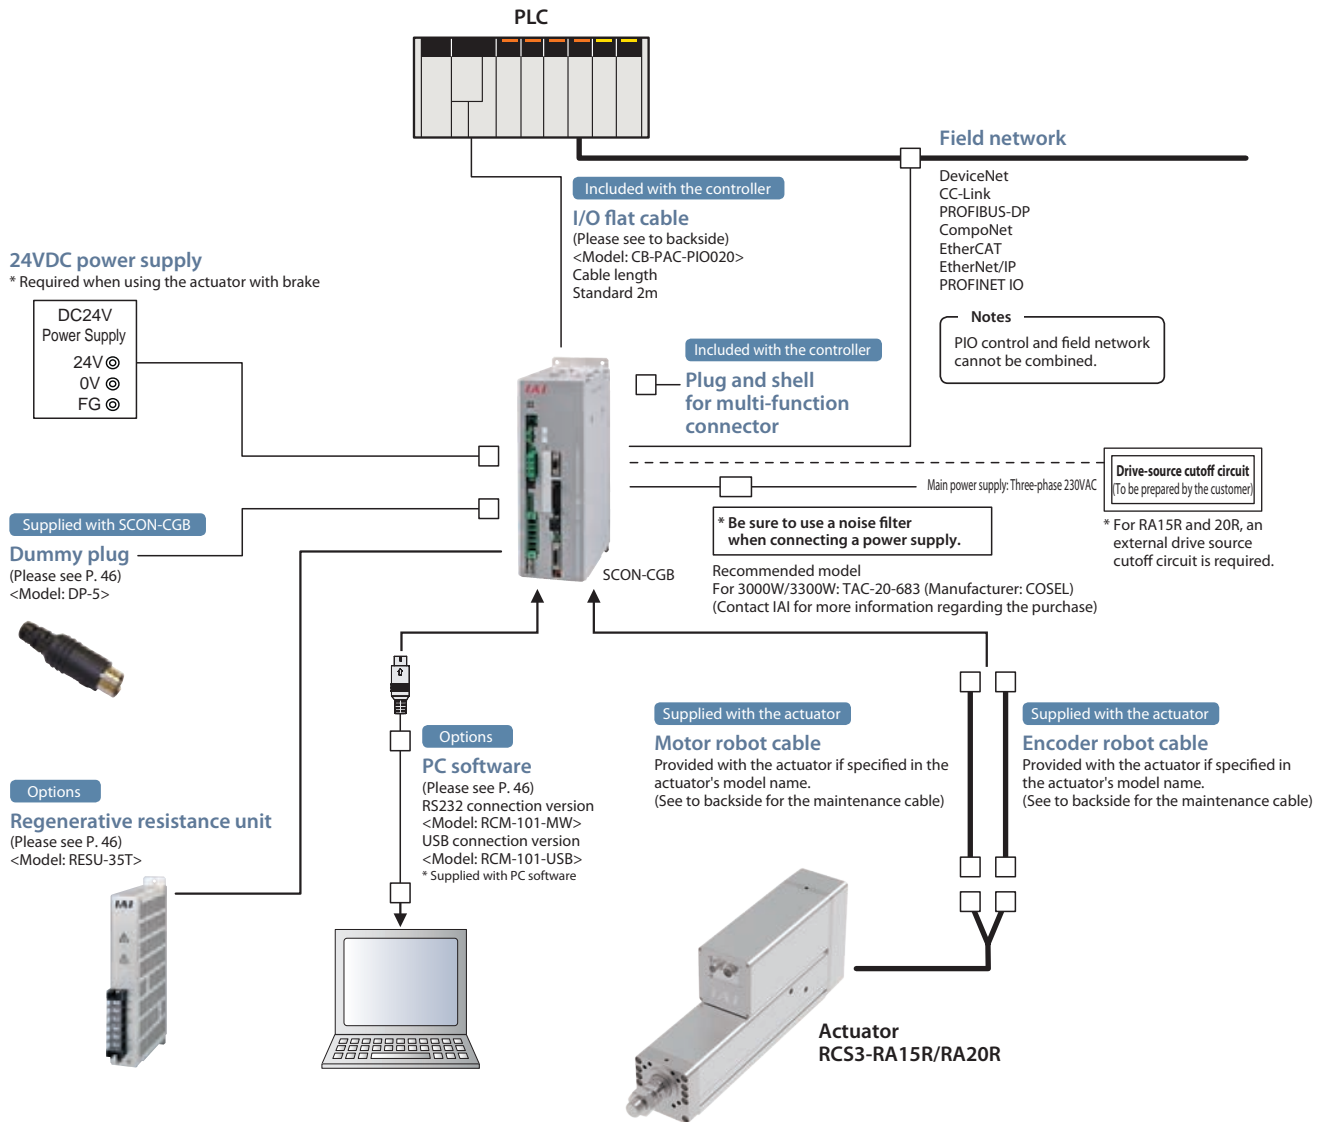

### RCS3-RA15R/20R (with brake) wiring

The brake circuit of RCS3-RA15R/20R is built into the actuator. Input a 24VDC  $\pm 10\%$  voltage to the actuator. (If the input voltage is low, the brake cannot be released. Be sure to use a power supply with the voltage drop in wiring taken into account.) 24VDC must be supplied to both the actuator and controller.

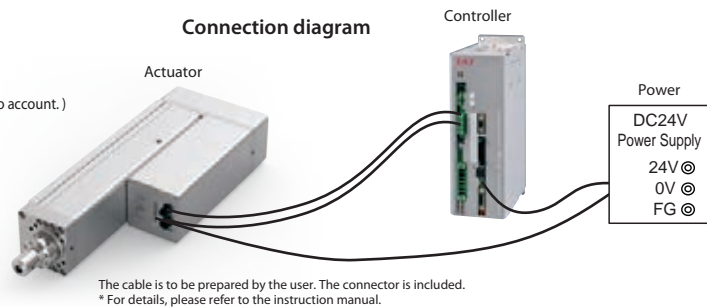


## Pulse Converter: Model JM-08

Converts differential pulses to the open-collector specification. Please use this converter if the host controller uses open-collector specification for pulse input.

### Specifications

Item	Specification
Input power	24VDC $\pm 10\%$ (Max. 50mA)
Input pulse	Differential input (Max. 10mA) (RS422 compliant)
Input frequency	500kHz or less
Output pulse	24VDC open collector (collector current Max. 25mA)
Mass	10g or less (not including the cable connectors)
Accessories	37104-3122-000FL manufactured by 3M (e-CON connector) x 2 Applicable wire AWG No.24~26

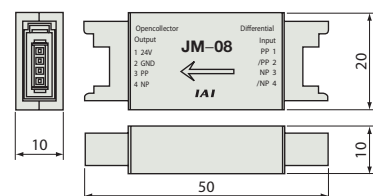

## Operation Mode

In the positioner mode, the unit can be operated with the position data (travel position, speed, acceleration, etc.) input to the controller from an external source using I/O (input/output signal). In this mode, six operation modes can be selected according to the parameters.

Mode	Type	Number of positioning points	Features	
Positioner mode	Positioning mode	PIO Pattern 0	64 points	This is the factory default standard mode. The number of the target position is externally specified.
	Teaching mode	PIO Pattern 1	64 points	In this mode, the slider (rod) is moved with an external signal and its stop position can be registered as position data.
	256-point mode	PIO Pattern 2	256 points	This is a mode which increases the number of points in the positioning mode to 256.
	512-point mode	PIO Pattern 3	512 points	This is a mode which increases the number of points in the positioning mode to 512.
	Solenoid valve mode 1	PIO Pattern 4	7 points	In this mode, travel is possible by using just the ON/OFF signal, similar to the solenoid valve of the air cylinder.
	Solenoid valve mode 2	PIO Pattern 5	3 points	In this solenoid valve mode, the output signal is the same as the auto switch for air cylinders.

## I/O Signal Table \* The I/O signal assignment can be selected from 6 types.

Pin No.	Category	Number of positioning points	Parameter (PIO pattern) selection					
			0	1	2	3	4	5
			Positioning mode	Teaching mode	256-point mode	512-point mode	Solenoid valve mode 1	Solenoid valve mode 2
			64 points	64 points	256 points	512 points	7 points	3 points
1A	24V		P24					
2A	24V		P24					
3A	—		NC					
4A	—		NC					
5A	Input	IN0	PC1	PC1	PC1	PC1	ST0	ST0
6A		IN1	PC2	PC2	PC2	PC2	ST1	ST1(JOG+)
7A		IN2	PC4	PC4	PC4	PC4	ST2	ST2(-)
8A		IN3	PC8	PC8	PC8	PC8	ST3	—
9A		IN4	PC16	PC16	PC16	PC16	ST4	—
10A		IN5	PC32	PC32	PC32	PC32	ST5	—
11A		IN6	—	MODE	PC64	PC64	ST6	—
12A		IN7	—	JISL	PC128	PC128	—	—
13A		IN8	—	JOG+	—	PC256	—	—
14A		IN9	BKRL	JOG-	BKRL	BKRL	BKRL	BKRL
15A		IN10	RMOD	RMOD	RMOD	RMOD	RMOD	RMOD
16A		IN11	HOME	HOME	HOME	HOME	HOME	—
17A		IN12	*STP	*STP	*STP	*STP	*STP	—
18A		IN13	CSTR	CSTR/PWRT	CSTR	CSTR	—	—
19A		IN14	RES	RES	RES	RES	RES	RES
20A		IN15	SON	SON	SON	SON	SON	SON
1B	Output	OUT0	PM1	PM1	PM1	PM1	PE0	LSO
2B		OUT1	PM2	PM2	PM2	PM2	PE1	LS1(TRQS)
3B		OUT2	PM4	PM4	PM4	PM4	PE2	LS2(-)
4B		OUT3	PM8	PM8	PM8	PM8	PE3	—
5B		OUT4	PM16	PM16	PM16	PM16	PE4	—
6B		OUT5	PM32	PM32	PM32	PM32	PE5	—
7B		OUT6	MOVE	MOVE	PM64	PM64	PE6	—
8B		OUT7	ZONE1	MODES	PM128	PM128	ZONE1	ZONE1
9B		OUT8	PZONE/ZONE2	PZONE/ZONE1	PZONE/ZONE1	PM256	PZONE/ZONE2	PZONE/ZONE2
10B		OUT9	RMDS	RMDS	RMDS	RMDS	RMDS	RMDS
11B		OUT10	HEND	HEND	HEND	HEND	HEND	HEND
12B		OUT11	PEND	PEND/WEND	PEND	PEND	PEND	—
13B		OUT12	SV	SV	SV	SV	SV	SV
14B		OUT13	*EMGS	*EMGS	*EMGS	*EMGS	*EMGS	*EMGS
15B		OUT14	*ALM	*ALM	*ALM	*ALM	*ALM	*ALM
16B	OUT15	*BALM	*BALM	*BALM	*BALM	*BALM	*BALM	
17B	—		—					
18B	—		—					
19B	0V		N					
20B	0V		N					

Signal codes accompanied by an asterisk \* indicate a reverse logic signal.

Field Network Specification: Explanation of Operation Modes

If controlling via a field network, you can select one of the following nine modes to operate the actuator. Please note that the data areas required on the PLC side will vary depending on the mode.

Mode Description

Mode	Description
0 Remote I/O mode	Similar to the PIO specification, this mode operates by directing bytes the ON/OFF signal via a network. The number of positioning points and functions will vary depending on the operation patterns (PIO patterns) set by the controller's parameters.
1 Position/simple direct value mode	The target position value is directly input, while all other operational conditions (speed, acceleration, etc.) are set by indicating the position number corresponding to the desired operating conditions from the position data table.
2 Half direct value mode	The actuator is operated by directly inputting values for speed, acceleration/deceleration rate and push current, as well as the target position.
3 Full direct value mode	The actuator is operated by directly inputting values for the target position, speed, acceleration/deceleration rate and push current limit value, etc. In addition, you are able to read the current position, current speed, and the command current value, etc.
4 Remote I/O mode 2	This mode is the same as the remote I/O mode above, with the added functionality of reading current position and the command current value.
5 Position/simple direct value mode 2	This mode is equipped with force control function instead of the teaching and zone functions of the position/simple direct value mode described above.
6 Half direct value mode 2	This mode is able to read the load cell data instead of reading the command current, a function of the half direct value mode above, and also supports the force control function.
7 Remote I/O mode 3	This mode is the same as the remote I/O mode above, with the added functionality of reading current position and load cell data.
8 Half direct value mode 3	This mode supports the vibration control function instead of the jog function of the half direct value mode described above.

Required Data Size for Each Network

Mode	DeviceNet	CompoNet	CC-Link	—	PROFIBUS-DP	EtherCAT	EtherNet/IP	PROFINET IO
0 Remote I/O mode	2 bytes	2 bytes	1 station	—	2 bytes	2 bytes	2 bytes	2 bytes
1 Position/simple direct value mode	8 bytes	8 bytes	1 station	—	8 bytes	8 bytes	8 bytes	8 bytes
2 Half direct value mode	16 bytes	16 bytes	2 stations	—	16 bytes	16 bytes	16 bytes	16 bytes
3 Full direct value mode	32 bytes	32 bytes	4 stations	—	32 bytes	32 bytes	32 bytes	32 bytes
4 Remote I/O mode 2	12 bytes	12 bytes	1 station	—	12 bytes	12 bytes	12 bytes	12 bytes
5 Position/simple direct value mode 2	8 bytes	8 bytes	1 station	—	8 bytes	8 bytes	8 bytes	8 bytes
6 Half direct value mode 2	16 bytes	16 bytes	2 stations	—	16 bytes	16 bytes	16 bytes	16 bytes
7 Remote I/O mode 3	12 bytes	12 bytes	1 station	—	12 bytes	12 bytes	12 bytes	12 bytes
8 Half direct value mode 3	16 bytes	16 bytes	2 stations	—	16 bytes	16 bytes	16 bytes	16 bytes

List of Functions by Operation Mode


	Remote I/O mode	Position/simple direct value mode	Half direct value mode	Full direct value mode	Remote I/O mode 2	Position/simple direct value mode 2	Half direct value mode 2	Remote I/O mode 3	Half direct value mode 3
Number of positioning points	512 points	768 points	Unlimited	Unlimited	512 points	768 points	Unlimited	512 points	Unlimited
Operates by direct assignment of position data	—	○	○	○	—	○	○	—	○
Direct assignment of speed/acceleration	—	—	○	○	—	—	○	—	○
Push-motion operation	○	○	○	○	○	○	○	○	○
Current position read	—	○	○	○	○	○	○	○	○
Current speed read	—	—	○	○	—	—	○	—	○
Position No. specified operation	○	○	—	—	○	○	—	○	—
Completed position No. reading	○	○	—	—	○	○	—	○	—
Vibration control	○	○	—	○	○	○	—	○	○
Servo gain switch	○	○	○	○	○	○	—	○	○

\* ○ indicates that the operation is supported, and — indicates that it is not supported.

## I/O Wiring Diagram

### Positioning Mode / Teaching Mode / Solenoid Valve Mode

PIO connector (NPN specification)


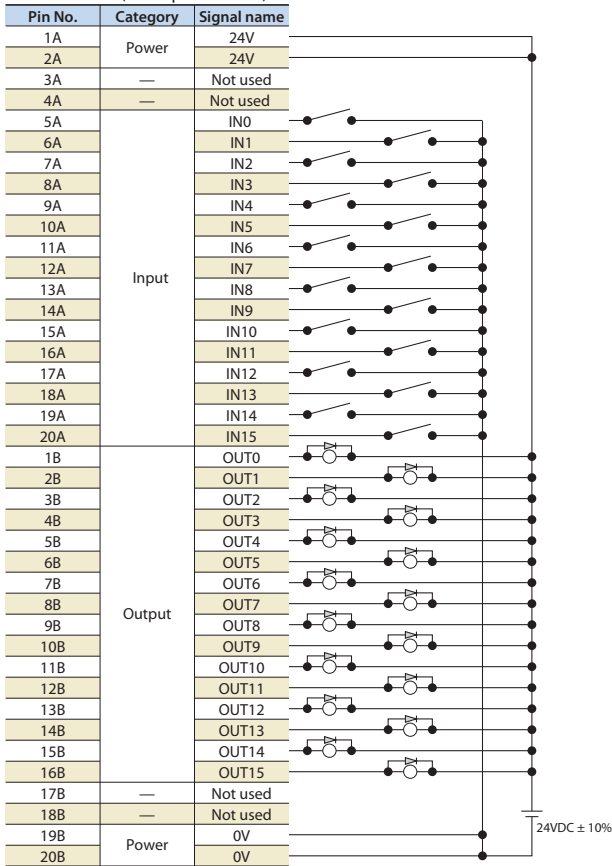


\* Connect pin numbers 1A and 2A to 24V, and connect pin numbers 19B and 20B to 0V.

## PIO Input/Output Interface



### Input External input specification

Item	Specification
Input voltage	24VDC $\pm 10\%$
Input current	4mA/circuit
ON/OFF voltage	ON voltage: Min. 18.0VDC OFF voltage Max. 6.0VDC
Isolation method	Photocoupler

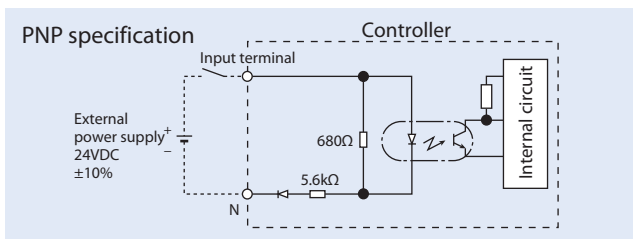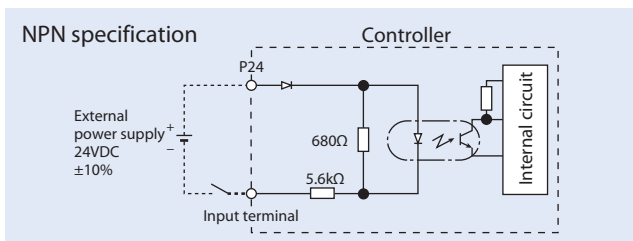


### Output External output specification

Item	Specification
Load voltage	24VDC $\pm 10\%$
Maximum load current	50mA/point
Leakage current	Max. 0.1mA/point
Isolation method	Photocoupler

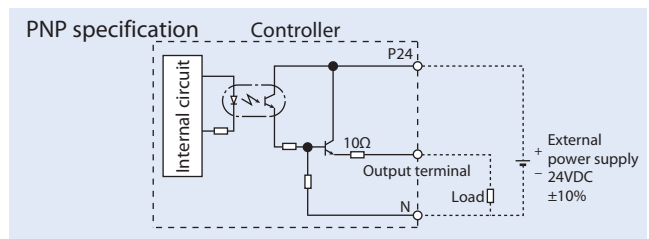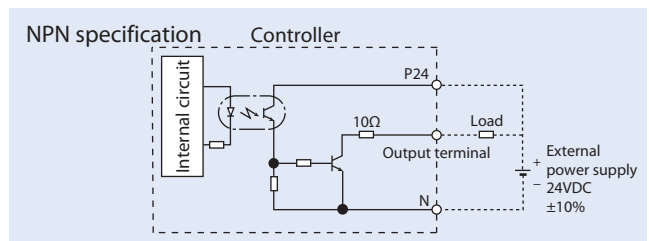

Multi-function Connector (Interface)


(1) When the host controller inputs feedback pulses with a line differential receiver.

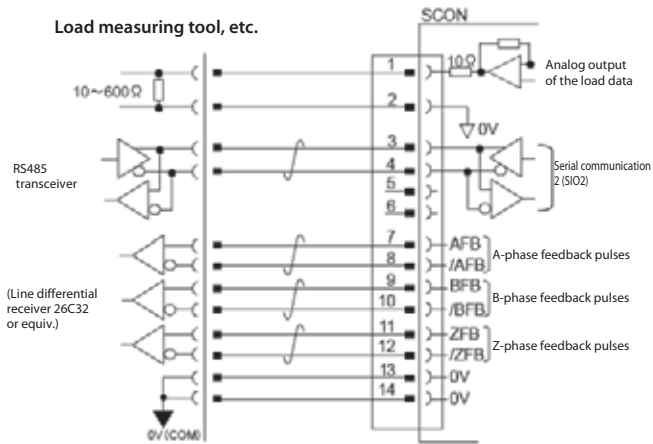

(2) When the host controller inputs feedback pulses with an open collector

Requires a pulse converter (JM-08: optional \*).

\* Please see P.40 for more information

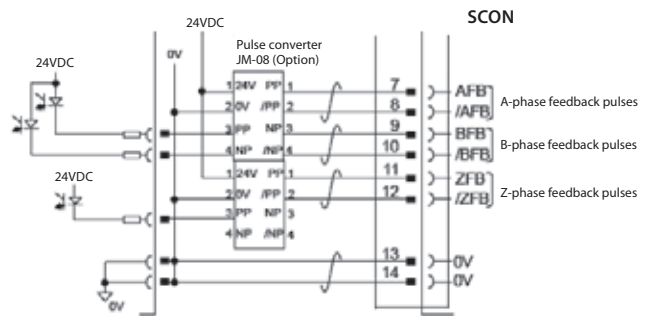


Specifications Table

Item		Specification	
Compatible motor capacity		3000W-3300W	
Connecting actuators		RCS3 Series actuator	
Number of controlled axes		1-axis	
Method of operation		Positioner type	
Backup memory		Non-volatile memory (FRAM)	
I/O connector		40-pin connector	
Number of I/O points		Input 16 points / output 16 points	
I/O power		External supply 24VDC ±10%	
Brake power		External supply 24VDC ±10% (Max. 0.1A) * Max. 1.5 A must be separately supplied for RCS3-RA15R/RA20R as well	
Serial communication		RS485 2ch	
Position detection method		Battery-less absolute encoder	
Drive-source cutoff function		No built-in relay	
Electromagnetic brake force release		External brake release switch ON/OFF	
Input power		Three-phase 200~230VAC ±10%	
Power capacity		3000W/5705VA 3300W/6062VA	
SCON-CB/CGB	External interface	PI/O specification	Dedicated 24VDC signal inputs/outputs (NPN/PNP selectable) --- Max. of 16 input/16 output points
		Fieldbus specification	DeviceNet, CC-Link, PROFIBUS-DP, CompoNet, EtherCAT, EtherNet/IP, PROFINET IO
	Data retention memory	Position data and parameters are saved in non-volatile memory. (Unlimited rewrites)	
Vibration resistant		X, Y and Z directions 10~57Hz Single-side width 0.035mm (continuous), 0.075mm (intermittent) 58~150Hz 4.9m/s <sup>2</sup> (continuous), 9.8m/s <sup>2</sup> (intermittent)	
Calendar/clock functionality	Retention time	Approx. 10 days	
	Charging time	Approx. 100 hours	
Protection functionality		Overcurrent, abnormal temperature, fan speed degradation monitoring, encoder disconnection, etc.	
Internal regenerative resistance value		34Ω 160W	
Ambient operating temperature		0 to 40°C	
Ambient operating humidity		85% or less (Non-condensing)	
Operating ambience		Free from corrosive gases	
Ingress protection		IP20	
Mass		About 2.8kg	
External dimensions		92.7mm(W)×300mm(H)×172mm(D)	


## External Dimensions

### For 3000W/3300W

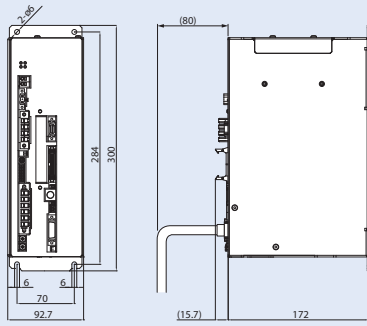

## Name of Each Component

### [For 3000W/3300W]

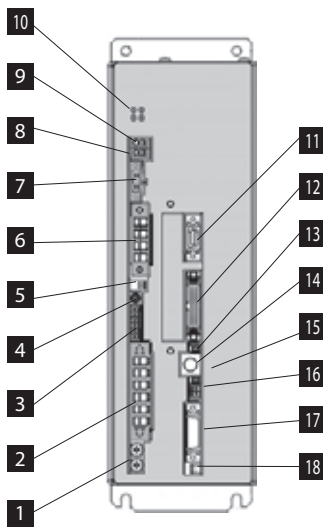

#### 1 FG connection terminal

A terminal for connecting the ground line to prevent electric shock and noise. It is connected to the PE power supply connector inside the controller.

#### 2 Power supply connector (PWR)

A connector used to connect to the AC power supply. Provides power both to the controller and the actuator.

#### 3 System I/O connector (SYS I/O)

A connector used to connect switches such as emergency stop switch.

#### 4 Axis number setting switch (ADRS)

A switch for setting the axis number when operating multiple axes by serial communication. When using the SIO converter, it is possible to control multiple axes without attaching/detaching the connector of the communication cable from teaching tools such as PCs, etc.

#### 5 Piano switch

Not used.

#### 6 Motor connector (MOT)

A connector for the actuator motor cable.

#### 7 Regenerative resistance unit cable connector (RB)

A connector for the external regenerative resistance unit.

#### 8 Charge status display LED

This displays the charge status inside the controller.  
Caution: While this LED is lit, do not touch the controller or regenerative resistance unit in order to prevent electric shock.

#### 9 Internal regenerative resistance effective connector

A short-circuit cable is connected at shipping.  
Caution: Be sure to use with the short circuit cable attached.  
Use without the cable will damage the equipment.

#### 10 LED display (PWR, SV, ALM, EMG)

This represents the operation status of the controller.  
○: ON —: OFF △: Undefined (ON or OFF)

LED				Operating status
PWR (green)	SV (green)	ALM (orange)	EMG (red)	
—	—	—	—	Control power OFF
○	—	—	—	Controller starts up normally
○	—	—	—	Servo OFF
○	○ (Note)	—	—	Servo ON
○	—	○	△	Alarm
○	—	△	○	Emergency stop
○	△	△	△	Warning

(Note) Blinks when automatic servo is OFF

#### 11 Multi-function connector (MF I/F)

A connector to output the feedback pulses and analog load data of the load cell, and to use the SIO communication function (SIO2).

#### 12 PIO connector (PIO)

A connector for control input/output signal connection. (Note) It is not installed for the fieldbus specification.

#### 13 Operation mode setting switch (MANU/AUTO)

An interlocking switch for preventing duplication of movement commands from PIO (PLC) and commands from teaching tools such as PCs, etc.

#### 14 SIO connector (SIO)

A connector used to connect teaching pendants or communication cables to the PC.

#### 15 Brake release switch (BK RLS / NOM)

A switch to be used to release the brake of the actuator with brake forcibly.  
Warning: Be sure to set this switch to the NOM side in normal operation. If it is left on the RLS side, the brake will not be applied even if the servo is turned OFF. If it is vertically mounted, the workpiece may fall, risking injury or damage to the workpiece.

#### 16 Brake power supply connector (BK PWR)

A connector for supplying power (24VDC) to release the brake when using an actuator with brake.

#### 17 Encoder connector (PG)

A connector for the actuator encoder cable.

#### 18 Connector for the absolute data backup battery

A battery cable connector used for the absolute specification.


Options

Touch panel teaching pendant

**Features** A teaching device equipped with functions such as position teaching, trial operation, and monitoring.

**Model** **TB-02-□**

**Configuration**

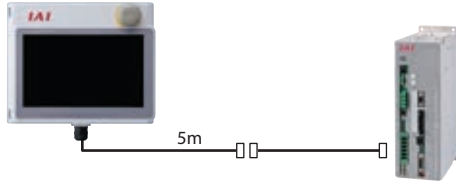

**Specifications**

Rated voltage	24V DC
Power consumption	3.6W or less (150mA or less)
Ambient operating temperature	0 to 40°C
Ambient operating humidity	20~85% RH (Non-condensing)
Environmental resistance	IP20
Mass	470g (TB-02 unit only)


PC software (Windows only)

**Features** The start-up support software which comes equipped with functions such as position teaching, trial operation, and monitoring. A complete range of functions needed for making adjustments contributes to shortened start-up time.

**Model** **RCM-101-MW** (with an external device communication cable + RS232 conversion unit)

Compatible with Ver. 10.02.01.00 or later

**Configuration**

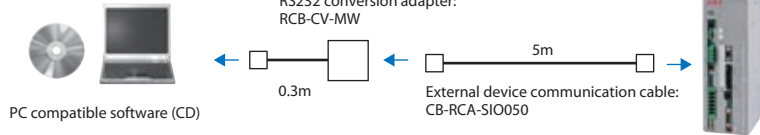


XP SP2 or later / Vista / 7 / 8 / 10



**Model** **RCM-101-USB** (with an external device communication cable + USB conversion adapter + USB cable)

Compatible with Ver. 10.02.01.00 or later

**Configuration**

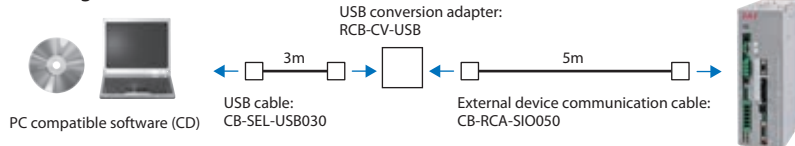

Regenerative resistance unit

**Features** Unit that converts the regenerative current generated during motor deceleration into heat.

<For 3000W/3300W>

**Model** **RESU-35T**

**Specifications**

Unit weight	About 1.8kg
Built-in regenerative resistance value	30Ω 450W
Unit mounting method	Screw mount

Note: The cable is to be prepared by the user.


**Necessary Amount Guideline**

● 3000W, 3300W

Number of connected units	2
---------------------------	---

\* Please check the allowable conditions in "Operating Conditions" on P.31~32.

\* The number of regenerative resistances can be reduced according to the payload, speed and duty. Please contact IAI for details.

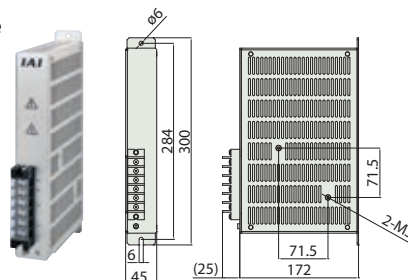

Dummy plug

**Features** This is required when the safety category specification (SCON-CGB) is used.

**Model** **DP-5**



## Maintenance Parts

When placing an order for a replacement cable, please use the model name shown below.

### ■ Cable Compatibility Chart



Model name		Motor cable	Motor robot cable	Encoder cable	Encoder robot cable
RCS3	RA15R	-	CB-RCS3-MA□□□-RB	-	CB-RCS3-PLA□□□-RB
	RA20R				

Model name	PIO flat cable
SCON-CGB	CB-PAC-PIO□□□



### Model CB-RCS3-MA□□□-RB

\* Please indicate the cable length (L) in □□□, (e.g. 080=8m) maximum 30m.

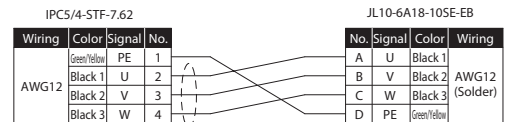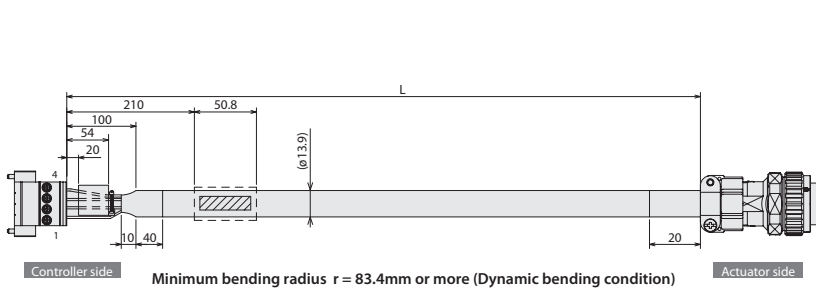

### Model CB-RCS3-PLA□□□-RB

\* Please indicate the cable length (L) in □□□, (e.g. 080=8m) maximum 30m.

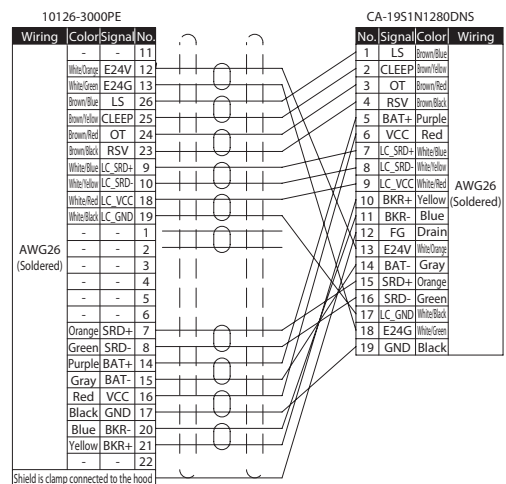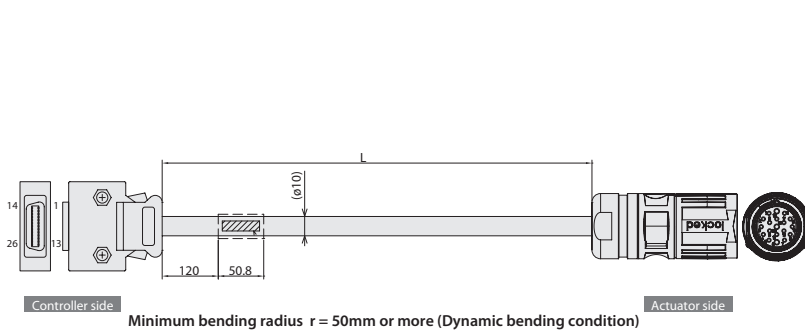

### Model Name CB-PAC-PIO□□□

\* Please indicate the cable length (L) in □□□, (e.g. 080=8m) maximum 10m.

